




Set Up the Camping Chair

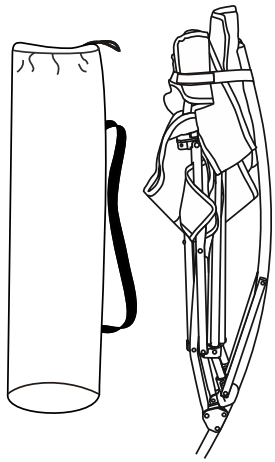


1 Take out the chair from carrybag.

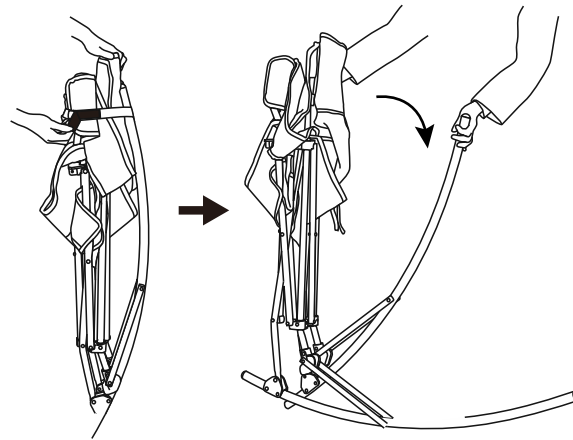

2 Untie the webbing, open the chair.

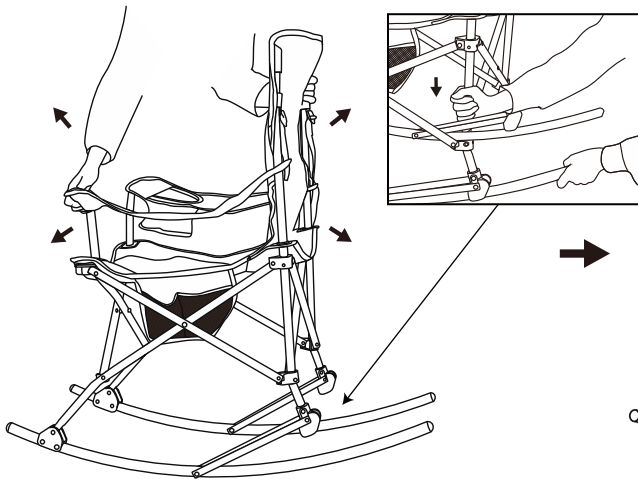


3 put down and lock the rocker tube.

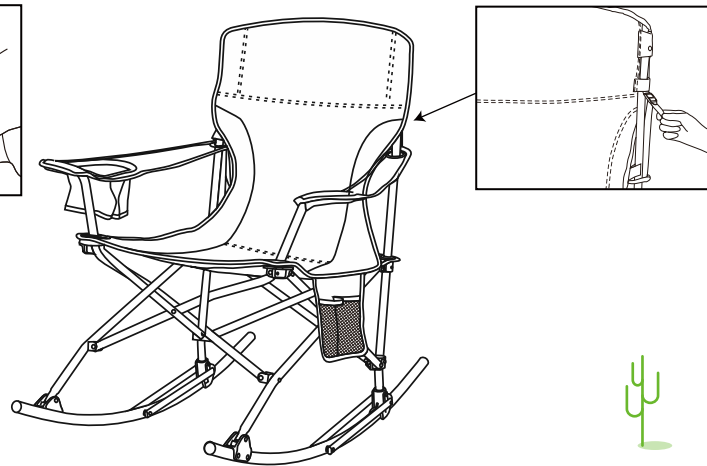


4 The height of the armrest can be adjusted through the webbing.

Fold the Chair

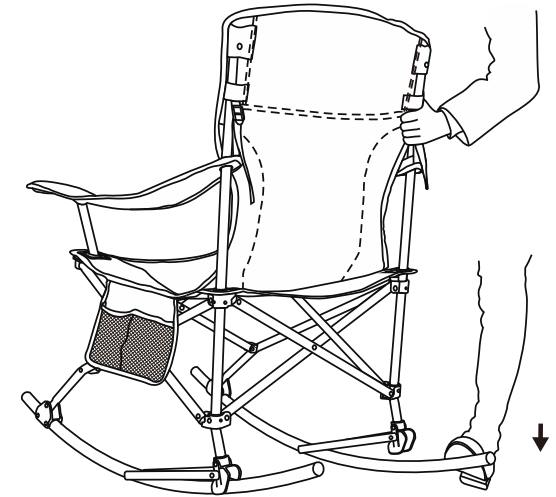

3 Unlock the rocker tube.

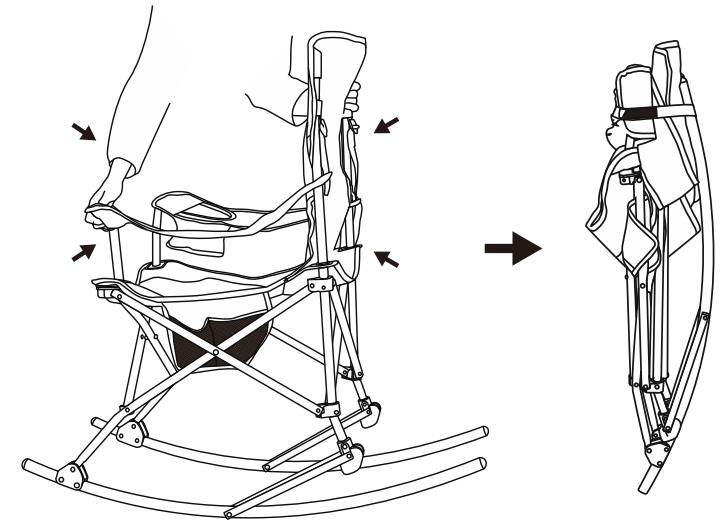

2 Fold the frame as shown and put the chair back in the carry bag.

DESIGNED, BUILT AND TESTED
IN THE WILD,
FOR THE WILD.

Warranty

Your Portal chair is covered by a 12-month quality warranty.

Questions? Talk to us

Email : Info@portaloutdoors.com
www.portaloutdoors.com

@PortalOutdoorsGear

@portaloutdoorsusa

Safety Tips

- This folding chair holds a maximum of 350 lbs. Do not exceed.
- No leaning on/over the chair's armrest
- Care should be taken to avoid tipping chair while in the act of sitting or while seated
- Use folding chair only on level ground
- To avoid injuries to fingers, use care when folding the chair