 



## Set up the wagon

1




1. Take the plates out of the side storage pocket.

2

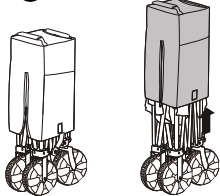


2. Open the bottom velcro and side zipper, and take off the carry bag.

3

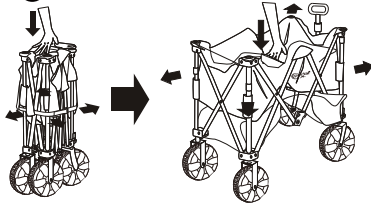


3. Unfasten the belt and push down on the middle of the wagon. Do not use excessive force if the wagon does not open easily.

4

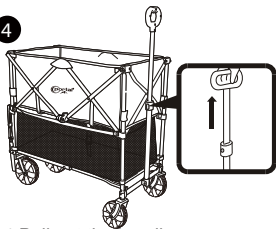


4. Pull out the handle.

5

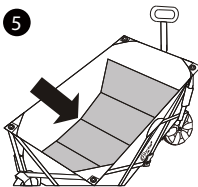


5. Put the plates on the bottom of wagon.

## Fold the wagon

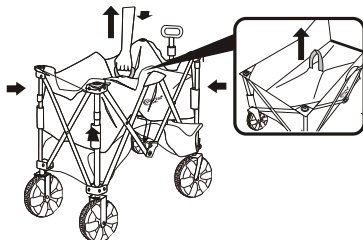

Take out the plates, and pull the handle in the middle of the bottom to fold the wagon.

## Correct rolling way

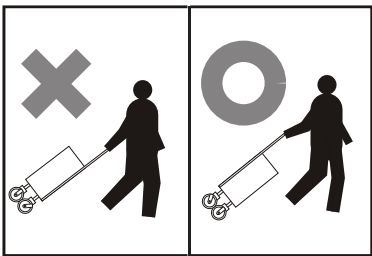

Please unfold the wagon before first rolling!

## Safety Tips

1. Do not put the wagon near fire or high temperature environment, which may cause damage of plastic parts.
2. Do not use it on uneven surfaces as it may shorten the products life.
3. This product has been designed for storing and transporting only.
4. This product is not a toy for children. Do not sit in it.
5. This wagon holds a maximum of 225LBS/102KGS on the flat ground. Exceeding maximum capacity limit may cause damage to product.
6. Please fix all goods in it to avoid anything dropping. Do not run or rush when moving.
7. Exert care when assembling/disassembling so that fingers are not pinched.
8. Do not store the product outside, which may cause damage to frame or plastic parts.
9. Please remove dirt and humidity after use.
10. If the fabric becomes dirty, please clean with a light neutral cleaning agent.