





1. Take out the plates, take off the velcro webbing from the buckles.

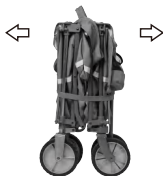

2. Unfold the cart as arrows show. Do not push hard if the cart doesn't open easily.




3. Put the plates onto the bottom of cart.

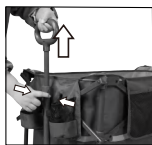


4. Press the button to pull out the plastic handle. Now the cart is ready for use.



Fold the wagon

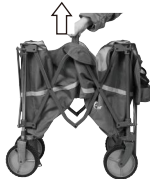

 1. Remove bottom plates. Pull the webbing handle found in the middle of the bottom to fold the cart.



To avoid front wheels hit the , make sure front wheels are facing toward the front of the cart then wrap the plates around the cart and fasten the side hook and loop tabs.

DESIGNED, BUILT AND TESTED
IN THE WILD,
FOR THE WILD.

Warranty

Your Portal wagon is covered by a 12-month quality warranty.

Questions? Talk to Us

Email : Info@portaloutdoors.com
www.portaloutdoors.com

@PortalOutdoorsGear
 @portaloutdoorusa

Safety Tips

- 1. Do not put the cart near fire or high temperature environment, which may cause damage of plastic parts.
- 2. Do not use it on uneven surfaces as it may shorten the product's life.
- 3. This product has been designed for storing and transporting only.
- 4. This product is not a toy for children. Do not sit in it.
- 5. Exceeding maximum capacity limit may cause damage to product.
- 6. Please fix all goods in it to avoid anything dropping. Do not run or rush when moving.
- 7. Use care when assembling/disassembling so that fingers are not pinched.
- 8. Do not store the product outside, which may cause damage to frame or plastic parts.
- 9. Please remove dirt and moisture after use.
- 10. If the fabric becomes dirty, please clean with a light neutral cleaning agent.