 


CHRONOFIXE

INSTRUCTION MANUAL

HOW TO USE THE WORLDTIMER BEZEL

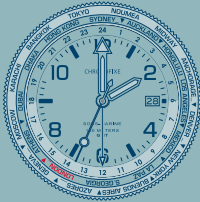

To set the bezel to a specific city location, rotate the bezel clockwise or anti-clockwise until your home time zone reaches the current time on the 24 hour dial ring (e.g. if you're in the UK and it's 2pm, move 'London' to 14.00).

From there you can work out the time in any part of the world (eg: at 14.00 in the UK, it's 22.00 in Hong Kong).

The rotating bezel with international cities has no relationship to the GMT hand. Instead it's a tool to gauge the time instantly in another part of the world. By rotating the bezel of your watch to the current GMT time, you can see the time in the other time zones separated by a full hour.

PRECAUTIONS AND PREVENTIVE MEASURES

Temperature

Do not expose your watch to sudden temperature changes (exposure to sunlight followed by immersion in cold water) or extreme temperatures [over 60°C (140°F) or below 0°C (32°F)].

Magnetic Fields

Do not expose your watch to intense magnetic fields such as loudspeakers, portable telephones, computers, refrigerators, and other electromagnetic appliances.

 
Shocks

Avoid thermal or other shocks as it may harm your watch. In the event of a violent shock, please contact CHRONOFIXE Customer Service for repair.

Harmful Products

Avoid direct contact with solvents, detergents, and perfumes, cosmetic products etc., since they may damage the bracelet, the case and/or the gaskets.

SETTING THE TIME (515.24H)

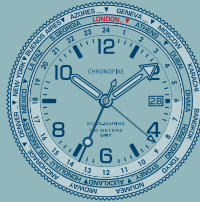

1. **A** Normal position.
2. Unscrew the crown and pull crown to the **C** position.
3. Turn the crown to set hour and minute hands (Check that AM/PM is set correctly)
4. Push the crown back to the **A** position and screw in the crown.

★ **Do not set the date between 9:00PM and 4:00AM as this may cause a malfunction.**

Care and Checks

 
Clean the case and bracelet regularly using a soft cloth to prevent any corrosion caused by perspiration. All water resistant watches can be cleaned with a toothbrush and soapy water, and then dried with a soft cloth.

Water Resistance

Water resistance of watches is rated based on laboratory pressure tests comparable to a swimmer or diver sitting still at that pressure level. However many water-based activities involve a lot of movement and other environmental changes. These exceptions to how the watch was rated may challenge or defeat the water protection features of a water resistant watch. The water resistance of a watch cannot permanently be guaranteed. It may be affected by the aging of gaskets or by accidental shock to the crown.

Never activate the time-setting crown and/or the pushers while the watch is underwater and make sure that the crown has been pushed/screwed down tightly after every operation. Do not under any circumstances open the watch yourself. Contact CHRONOFIXE Customer Service to arrange repair or inspection by CHRONOFIXE.

SETTING THE DATE & 24-HOUR HAND (515.24H)

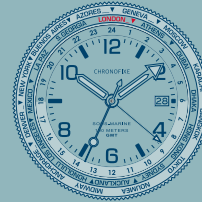

1. **A** Normal position.
 2. Unscrew the crown and pull crown to the **B** position.
 3. Turn the crown clockwise to set the date. Turn the crown counterclockwise to set the 24-hour hand
 4. Push the crown back to the **A** position and screw in the crown.
- ★ **Wind 15 ~20 times clockwise until second hand starts to move naturally.**

WATER RESISTANCE

There are different types of water resistance levels according to the watch construction.

◎ [3atm / 30m / 100ft]

Watches water resistant to 30 meters/100 feet.

◎ [5atm / 50m / 165ft]

Watches water resistant to 50 meters/165 feet.

◎ [10atm / 100m / 330ft]

Watches water resistant from 100 meters/330 feet.

● [20atm / 200m / 660ft]

Watches water resistant from 200 meters/660 feet.

Different water resistance levels explain the watch is protected against the below activities:

- ◎◎◎ Water splashes / Rain
- ◎◎ Shower
- ◎◎ Surface swimming
- ◎ Free diving / Water sports
- Scuba diving