
VAKOLE



CO26 Electric Mountain Bike

User Manual

CE RoHS FC MSDS UN38.3

Contents

Product Instruction	3
Routine operation.....	5
Display Manual	6
Installation Instructions	7
Rmove the battery.....	8

1. Product Instruction

1.1 Product overview



1. Product Instruction

1.2 Main part description



2. Routine operation

On/Off

Long press **Switch** button then the display will work normally, and the controller will power on at the same time.

Walk Assist Mode

Press and hold **Down** button for 2 seconds to enter the Walk assist mode. The E-bike will travel at a constant speed of 6km/h.




Walk Assist function can only be used as pushing the e-bike by hands. Please don't use this function when riding.

PAS Level Selection

Short press the **UP** or **DOWN** button to switch the PAS level. The default range of PAS level is 0-5 levels.

3. Display Manual

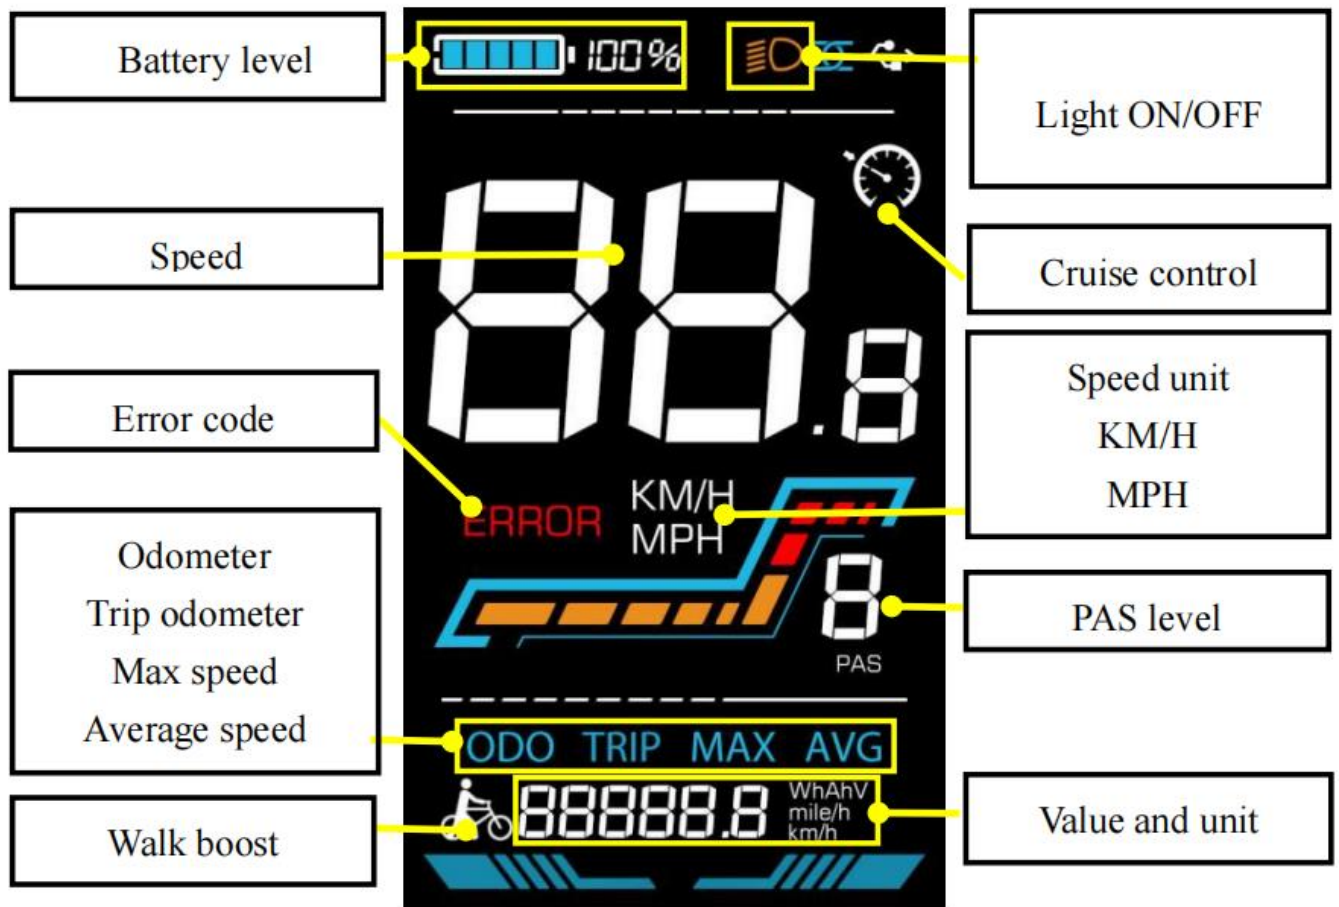

Don't modify system parameters to avoid parameters disorder.



If the e-bike is not used for more than 10 minutes, the display will automatically shut down.

4. Installation Instructions



① Put the wheel in the front fork, insert the front fork axle, fix the screw




② Install the handlebar



③ Tighten the screw



④ Tighten the screw

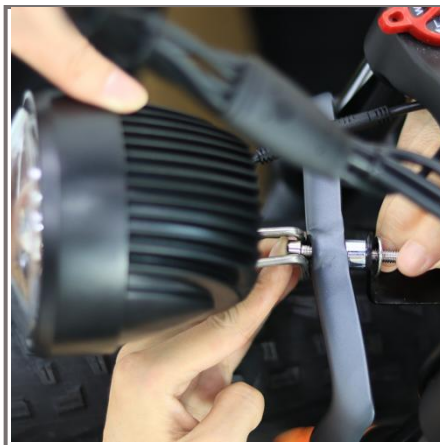

⑤ Install headlight and fender



⑥ Install the pedals



⑦ Install the rear rack



⑧ Done

5. Remove the battery



① Turn the key to unlock



② Keep the key pointing to the unlock, take out the battery



③ Remove the battery from the e-bike



When you are not riding the e-bike, please take out the battery and store it in a dry and ventilated place.

Appendix 1: Error Code Definition

Error code	Definition	Solution
05	Brake failure	Check whether the brake is restored to the initial state
06	Undervoltage protection	Check battery voltage
07	Motor failure	Check whether the outgoing cable of phase line is in good condition; Check whether the motor phase cable is well connected with the controller
08	Throttle abnormal	Check whether the throttle is restored to the initial state
09	Controller abnormal	Check whether the controller cable pins' sequence match.
10	Communication abnormal	Check whether the display and controller are well connected
11	Abnormal communication transmission	Check whether the display and controller are well connected