

SIGHT MARK®

USER MANUAL



**WRAITH 4K
MONOCULAR**
SM18050

ABOUT SIGHTMARK®

While Sightmark's MAKE YOUR MARK tagline perfectly illustrates our mission to provide uncompromising accuracy in virtually any environment, to us, those three words mean quite a bit more.

MAKE YOUR MARK represents our commitment; first, to those who serve; second, to our Constitutional right to bear arms, the right ensuring all others remain intact; and finally, every single professional and recreational shooting enthusiast embracing and sharing our Pro-2nd Amendment lifestyle.

MAKE YOUR MARK also symbolizes our desire to build more than a brand people know they can trust. It represents our higher calling to build an honorable, unapologetic legacy, truly appreciative of the fabric of a free society to pass on to future generations. Only accomplishing the latter truly embodies the gravity of what MAKE YOUR MARK means to us.

In the spirit of gratitude for those who preserve freedom as we know it to be, MAKE YOUR MARK is a call to action. One we take seriously when it comes to developing products worthy of our brand... and our lifetime warranty. The same brand countless professionals rely upon for performance in the best... and most assuredly, worst of times.



WRAITH 4K MONOCULAR

Sightmark's Wraith Monocular combines high quality imaging with durability and ease of use that make this digital night vision monocular an essential part of any night hunter's arsenal. Its 8x digital magnification, 4k sensor resolution (3840x2160) with object detection of up to 300 yards and a 1280x720 FLCOS screen, while its HD video capabilities at 720/1080/4K resolutions and IR illumination capabilities are a testament to the quality and reliability of its imaging. The Wraith Monocular's high recoil tolerance, IPX6 water resistance rating, long battery life and high temperature thresholds exemplify its durability and Sightmark's commitment to quality. Its built-in recorder takes AVI videos with audio in 1080p and/or 4K resolution, ensuring every moment is captured and preserved in incredible detail. Supremely durable, the Wraith 4K Monocular is made of solid aluminum that operates in temperatures ranging from 32-140°F (0-60°C). It is shockproof for drops up to 3ft, withstands a maximum caliber of .308 and features IPX6 water resistance, providing protection from heavy rain or snowfall.

FEATURES:

- 4K Digital Imaging
- 8x Digital Zoom
- 300-yard Night Detection Range
- Night Vision & Daytime Color Mode
- Built-in Video Recording with Audio
- LED IR Illuminator, 850nm Wavelength
- Built-in 4K Video Recording


INCLUDED:

- Flip-up Caps
- Eye Cups
- User Manual
- USB Cable

TECHNICAL SPECIFICATIONS	SM13140
Sensor Resolution	4K (3840x2160)
Sensor Type	CMOS
Display Resolution	1280x720
Display Type	FLCOS
Magnification (x)	1-8x
Objective Lens	17mm
Mount Type	Picatinny (not included)
NV Detection Range	300/274
IR Illuminator	LED
IR Wavelength	850 nm
Video/Audio Recording	Yes
Diopter Adjustment (+/-)	-6 to +3
Field of View, ft@100yd	51
Minimum Focusing Distance, ft/m	5/1.524
Eye Relief, in/mm	3 / 76
Maximum Caliber	.308
Battery type	2xCR123
Battery life (hours)	80 (Highest) - 1000 (Lowest)
Focal plane	Second
IP Standard (water rating)	IP67 - Water & Dustproof
Lens coatings	Fully Multi-coated
Operating temperature	-4° to 149° F / -20° to 65°C
Length (in/mm)	6.29 / 159.91
Width (in/mm)	3.03 / 76.96
Height (in/mm)	2.9 / 73.66
Weight (oz)	18

DIAGRAM

1. Eyepiece (diopter adjustment)
2. Area for Bridge Mount
3. Controls
4. Focus Adjustment
5. Objective Lens
6. IR Illuminator
7. IR Focus Adjustment
8. Battery Cover and Latch
9. Card Slot
10. USB Port

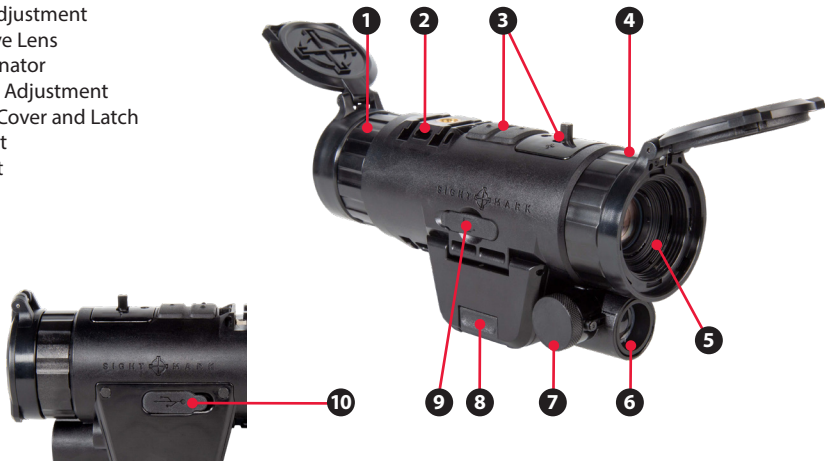

INSTALLING THE BATTERY

The Sightmark Wraith 4K Monocular uses two CR123A batteries. It is recommended to use batteries of the same type and same charge for best performance.

To install new batteries:

1. Open battery compartment by pressing the spring-loaded latch.
2. Insert batteries into slots by orientation indicated.
3. Close battery compartment confirming spring loaded latch fully locked shut.



EXTERNAL POWER SUPPLY

This unit is equipped with a Type C port for external power. The Type C port is located under the rubber cover on the side of the unit.



MEMORY CARD

This unit is equipped with a memory card slot used for recording. The card slot is located under the rubber cover on the side of the unit.



MOUNTING

The unit attaches to a head mount. (not included)

To attach:

1. Slide the optic onto the bridge mount.
2. Adjust the position to be correct for your eye.
3. Insert the screw into the top of the unit and tighten it.

DIOPTER ADJUSTMENT

Look through the unit at the screen while the unit is on. If the text and icons are not clear, rotate the diopter adjustment until the icons and text become clear. The diopter adjustment should only ever need to be set once per user.

To adjust diopter:

1. Locate the diopter adjustment. (1)
2. Turn the adjustment left or right until the display becomes focused.
(Use icons or numbers on the display to check screen focus as the actual image through the viewfinder may need to be focused as well.)

FOCUS ADJUSTMENT

To adjust focus:

1. Locate the focus adjustment. (4)
2. Turn the adjustment left or right until the image becomes focused.



VIEWFINDER

1. Profile



2. Magnification

1X 2X 3X 4X 5X 6X 7X 8X

3. Date

4. Time


5. Memory card status



6. Day/night mode



7. Battery status

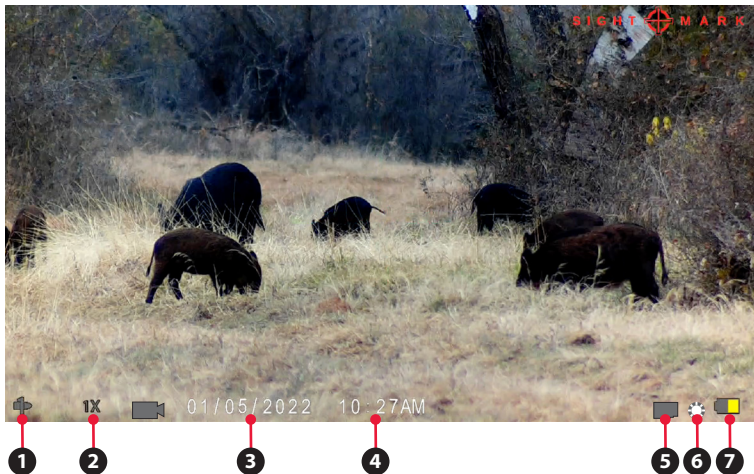

CONTROLS

Digital Zoom - Use the toggle on the top of the unit to adjust the magnification.
This unit has a digital magnification range up to 8x.



Day/Night/Green Mode - Press and hold the button with 2 dots for 2-3 seconds to toggle between day, night, and Night Custom.



Menu/Power - To power on the unit, hold the button with the single dot until the unit turns on. To turn it off hold until the display shuts off. To access the menu, click the button and the menu will open.



Video Record/Photo -Short press the button with the 2 dots to start/ stop recording.



IR ILLUMINATOR

The IR can be run automatically, where the IR automatically adjusts its brightness based on the environment; and manually, where you can pick a desired brightness level. To switch between modes and adjust manual brightness:

1. Open the menu by pressing the button with a single dot on it.
2. Use the toggle and power button to go into settings and then IR control.
3. If you would like to use automatic brightness, select that option and press the button with the single dot.
4. To set a manual brightness level, select manual and then use the toggle to adjust the level up or down.
5. Exit the menu. NOTE: The IR is only on when in night vision mode.






To focus the IR simply rotate the dial on the side of the IR either direction.

How to attach the bridge to PVS14 compatible head mount:

- Press the attachment into the receiver of the pvs-14 compatible headgear until the spring-loaded lock latches in.
- To remove press down the spring-loaded latch and slide the mount out.






RESOLUTION SETTINGS

To change resolution setting:





1. Open the menu and go to Settings and then Resolution.   Settings  Resolution
2. Use the toggle switch to select the desired resolution. 
3. Use the center button to save and exit the setting. 

VIDEO RECORDING AND PHOTO MODE

To switch between video recording and photo mode:





1. Open the menu and go to Settings and then Record Mode.   Settings  Record Mode
2. Use the toggle switch to select either photo or video. 
3. Use the center button to save and exit the setting. 

Take a video/photo:

1. When looking through the unit either, a photo or video symbol will be displayed in the lower left of the screen.  or 
2. Press the button with two dots to take a photo/start recording video. 
3. Press a second time to stop recording. 





VIDEO RECORDING AND PHOTO MODE (CONT.)

To watch playback of videos:

1. Open the menu and go to Playback.   Playback
2. Use the toggle switch to look through the existing photos and videos. 
3. Press the center button to watch the video. 






BRIGHTNESS SETTINGS

To Adjust Brightness:

1. Open the menu and go to Brightness.   Brightness
2. Adjust the brightness slider up or down using the toggle switch to adjust the brightness. 
3. Press the center button to save the setting and exit the menu. 




TIME AND DATE

To set the time/date:


1. Open the menu. 
2. Go to settings and then Time/Date.  Settings  Time/Date
3. Select Time Set or Date.
4. Adjust Time/Date using toggle switch. 
5. Press the center button to save and exit. 



FIRMWARE

To update the firmware:

1. Confirm the batteries are full and/or connect external power.
2. Download the latest firmware from our website at <http://sm-wraith.com/firmware/>.
3. Copy the firmware file on to the root of your micro memory card. The file should not be placed in a folder in the card.
4. Confirm the filename is SD_UPDATE.BRN.
5. Insert the micro memory card in to the riflescope card slot.
6. Open the menu. 
7. Go to Settings and then Firmware.  Settings  Firmware
8. Select Firmware Update.
9. When update is complete the unit will shut off. This can take a few minutes.

To perform a factory data reset:

1. Open the menu using the center button. 

2. Go to Settings and then Factory Data Reset.  Settings  Factory Data Reset

3. Use the arrow buttons to navigate to Yes and select it with the center button.

Warning: This will completely reset the unit to factory settings including all reticle zero settings.

MENUS

Use the up and down buttons to scroll through and the center button to select. The left button can be used to exit menus.

1. Brightness



2. Reticle Settings



- a. Reticle Color
- b. Reticle Style
- c. Reticle Zero



3. Playback



Use the up and down button to scroll through pictures and video, click the center button to play back video files. Use the left button to exit Playback.

4. Settings



- a. Resolution 
 - i. 1080
 - ii. 720
- b. Record Mode 
 - i. Video
 - ii. Photo

c. Format Card



- i. Are you sure? (Format Card)
- ii. Cancel

d. Factory Data Reset



- i. Yes
- ii. No

e. Firmware



- i. Firmware Version
- ii. Firmware Update

f. Time and Date



- i. Time Format
 - 1. 12 Hour
 - 2. 24 Hour
- ii. Time Set
- iii. Date

5. Weapon Select



- a. Profile 1
- b. Profile 2
- c. Profile 3
- d. Profile 4
- e. Profile 5

MAINTENANCE

Proper maintenance of the Sightmark Wraith is recommended to ensure longevity. **Attempts to disassemble or repair the unit will void the warranty.** It is recommended that when the unit becomes dirty that it is wiped down with a dry or slightly damp cloth. Blow dirt and debris off all optics and then clean lenses with a lens cleaning cloth. To remove oils or dried water spots, apply a small amount of denatured alcohol to a lens cloth or cotton swab. Clean the surface of the lens and let dry. Finally use your breath to clean the lens once more. No further maintenance is required.

TROUBLESHOOTING

Never ship back a product without getting proper authorization beforehand. Doing so could result in losing the product due to a multitude of reasons, i.e. sending it to the wrong address and other problems associated with unexpected packages.

The unit will not turn on:

1. Check the polarity of the batteries. Reinstall the batteries if necessary.
2. Clean the battery compartment contacts with denatured alcohol and a cotton swab.
3. Install fresh batteries.

The IR illuminator will not turn on:

1. Adjust the brightness of the IR. Adjust the display brightness. If no IR light is being detected the unit may need to be returned for service.

The image is dark:

1. Make sure the lens caps on the objective lens is opened and the IR illuminator is on. Adjust the display brightness and the IR illuminator brightness accordingly to obtain a bright, clear image.

TROUBLESHOOTING (CONTINUED)

There are light or black dots on the display:

1. The presence of dots on the display is caused by sensor production technology and is not a defect. No action is required.

The image is not in focus:

1. Make sure there is no dust or condensation covering the objective lens or eyepiece.
2. Adjust the focus ring near the objective lens to adjust focus for different viewing distances.
3. Make sure to adjust the diopter setting on the eyepiece for your specific vision.

The image is flickering:

1. This is common if the unit is viewing or pointing in the direction of a bright light source. Cease viewing the bright light source immediately. If flickering in normal dark conditions the unit may need to be returned for service.

FIRMWARE UPDATING

Visit <http://sm-wraith.com/firmware/> for updates and instructions.

SIGHTMARK WARRANTY

Please visit www.sightmark.com for warranty details and information.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two criteria: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes of modifications to this unit is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



SIGHT  MARK[®]

www.sightmark.com