

25 reasons to choose Flex Fireplaces

Versus a Gas Fireplace

	Gas Fireplace	Flex Fireplace Series: 219 Models
Number of pages in manual relating to installation	50 - 90+	2
Framing		
Fireplace is Zero Clearance - ie: can be framed with wood studs	Depends on model	Yes
Venting		
Venting rise to run ratio must be adhered to	Required	NA
Venting clearances to combustibles must be adhered to	Required	NA
Vent cap clearances on outside of home must be adhered to	Required	NA
Specific finishing material required around vent cap	Required	NA
Hole required in envelope of dwelling for vent cap	Required	NA
Code and HOA approval for exterior vent cap	Required	NA
Hole in envelope creates potential for future water leaks	Yes	NA
Cost of venting	Required	NA
Gas Supply		
Licensed plumber must properly size gas line to BTU input of fireplace	Required	NA
Licensed plumber must confirm Gas Pressure is Correct	Required	NA
Licensed plumber must conduct leak test on Gas Line	Required	NA
Costs of licensed plumber and materials	Required	NA
Electrical		
Electrician must supply power to fireplace junction box	Required	NA
Electrician must connect low voltage wall switch to fireplace	Required	NA
Cost of electrician and materials	Required	NA
Finishing Materials		
Finishing clearances and materials for each fireplace	Every model is different	219 models are all the same
# of pages in manual relating to finishing materials	3-6+	1
Maintenance		
Annual Service Recommended	Required	NA
Check ignitor, thermocouple or flame sensor, vacuum switch, vent cap	Required	NA
Costs of annual maintenance (labor and materials)	Required	NA
4 Fewer General Contractors	NO	YES
Easy Installation	NO	YES
No Service Issues in future	NO	YES
Green/Clean Burning	NO	YES
Renewable Energy Source	NO	YES

Flex Fireplaces 219 Models

Choose yours in 3 simple steps

1. Select fireplace style

Single room



Single Sided



Left Corner



Right Corner



Bay

Room dividers



Peninsula (install left or right)



Double Sided



Island




Bench

2. Select opening Size




3. Select your configuration

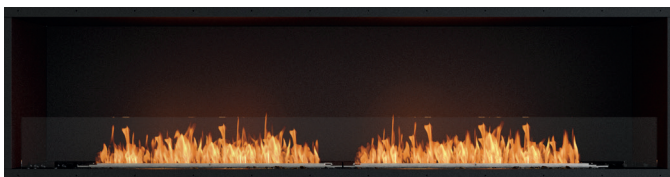


Flame only



Flame plus 2 side boxes (.BX2)

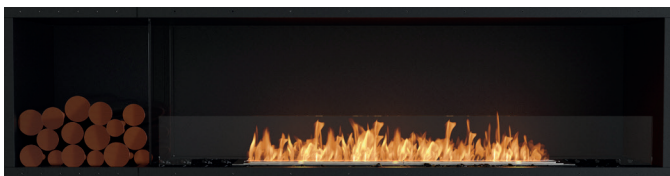

Flame plus 1 side box on the Left (.BXL)

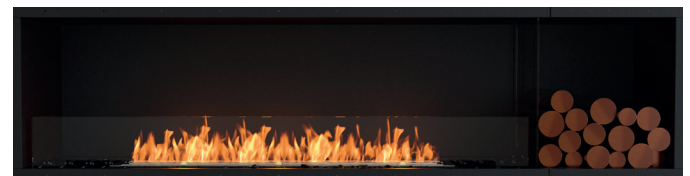

Flame plus 1 side box on the Right (.BXR)

To select the correct size for your Flex fireplace, consider:



The total dimensions of your wall



The viewing area of your appliance once installed



The room size to ensure you have enough ventilation available