

☎ 1 (844) 334-4203

🌐 www.thermomate.com

✉ support@thermomate.com

📍 3330-A Marathon Ct Charleston, SC 29418





Electric Induction Cooktop

Live Smart, Better Life!

IHTB302 / IHTB775

Instruction / Installation Manual

☎ 1 (844) 334-4203

🌐 www.thermomate.com

✉ support@thermomate.com

📍 3330-A Marathon Ct Charleston, SC 29418

Safety Warning

Your safety is important to us. Please read this information before using your cooktop.

Installation Electrical Shock Hazard

- Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance on it.
- Connection to a good earth wiring system is essential and mandatory.
- Alterations to the domestic wiring system must only be made by a qualified electrician.
- Failure to follow this advice may result in electrical shock or death.


Cut Hazard

- Take care - panel edges are sharp.
- Failure to use caution could result in injury or cuts.


Important Safety Instructions

- Read these instructions carefully before installing or using this appliance.
- No combustible material or products should be placed on this appliance at any time.
- Please make this information available to the person responsible for installing the appliance as it could reduce your installation costs.
- In order to avoid a hazard, this appliance must be installed according to these instructions for installation.
- This appliance is to be properly installed and earthed only by a suitably qualified person.
- This appliance should be connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.
- Failure to install the appliance correctly could invalidate any warranty or liability claims.



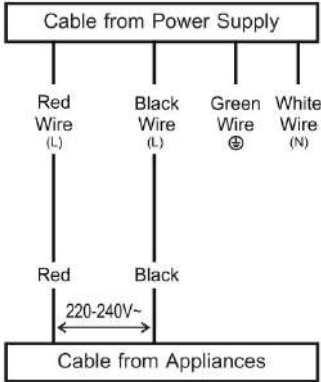

IHTB302

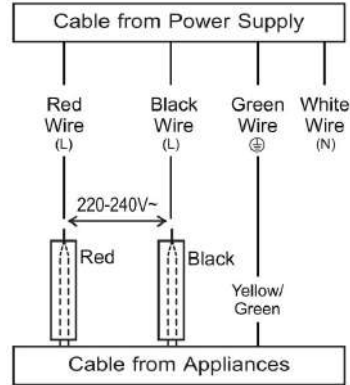

IHTB775



DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

This appliance is labeled in compliance with Australia directive 2012/19/EU for Waste Electrical and Electronic Equipment(WEEE). By ensuring that this appliance is disposed of correctly, you will help prevent any possible damage to the environment and to human health, which might otherwise be caused if it were disposed of in the wrong way.

The symbol on the product indicates that it may not be treated as normal household waste. It should be taken to a collection point for the recycling of electrical and electronic goods.

This appliance requires specialist waste disposal. For further information regarding the treatment, recover and recycling of this product please contact your local council, your household waste disposal service, or the shop where you purchased it.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Cautions

1. The induction cooktop must be installed by qualified personnel or technicians. We have professionals at your service. Please never conduct the operation by yourself.
2. The cooktop will not be installed directly above a dishwasher, fridge, freezer, washing machine or clothes dryer, as the humidity may damage the cooktop electronics.
3. The induction cooktop shall be installed such that better heat radiation can be ensured to enhance its reliability.
4. The wall and induced heating zone above the table surface shall withstand heat.
5. To avoid any damage, the sandwich layer and adhesive must be resistant to heat.

Connecting The Cooktop To The Mains Power Supply

The power supply should be connected in compliance with the relevant standard, or a single-pole circuit breaker. The method of connection is shown below.

1. If the cable is damaged or needs replacing, this should be done by an after-sales technician using the proper tools, so as to avoid any accidents.
2. If the appliance is being connected directly to the mains supply, an omnipolar circuit breaker must be installed with a minimum gap of 3 mm between the contacts.
3. The installer must ensure that the correct electrical connection has been made and that it complies with safety regulations.
4. The cable must not be bent or compressed.
5. The cable must be checked regularly and only replaced by a properly qualified person.



Operation And Maintenance

Electrical Shock Hazard

- Do not cook on a broken or cracked cooktop. If the cooktop surface should break or crack, switch the appliance off immediately at the mains power supply(wall switch) and contact a qualified technician.
- Switch the cooktop off at the wall before cleaning or maintenance.
- Failure to follow this advice may result in electrical shock or death.

Health Hazard

- This appliance complies with electromagnetic safety standards.
- However, persons with cardiac pacemakers or other electrical implants (such as insulin pumps) must consult with their doctor or implant manufacturer before using this appliance to make sure that their implants will not be affected by the electromagnetic field.
- Failure to follow this advice may result in death.

Hot Surface Hazard

- During use, accessible parts of this appliance will become hot enough to cause burns.
- Do not let your body, clothing or any item other than suitable cookware contact the Induction glass until the surface is cool.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the cooktop surface since they can get hot.
- Keep children away.
- Handles of saucepans may be hot to touch. Check saucepan handles do not overhang other cooking zones that are on. Keep handles out of reach of children.
- Failure to follow this advice could result in burns and scalds.




Cut Hazard

- The razor-sharp blade of a cooktop scraper is exposed when the safety cover is retracted. Use with extreme care and always store safely and out of reach of children.
- Failure to use caution could result in injury or cuts.


Important Safety Instructions


- Never leave the appliance unattended when in use. Boil over causes smoking and greasy spillovers that may ignite.
- Never use your appliance as a work or storage surface.
- Never leave any objects or utensils on the appliance.
- Do not place or leave any magnetizable objects(e.g. credit cards, memory cards)or electronic devices(e.g. computers, MP3 players) near the appliance, as they may be affected by its electromagnetic field.
- Never use your appliance for warming or heating the room.
- After use, always turn off the cooking zones and the cooktop as described in this manual(i.e. by using the touch controls). Do not rely on the pan detection feature to turn off the cooking zones when you remove the pans.
- Do not allow children to play with the appliance or sit, stand, or climb on it.
- Do not store items of interest to children in cabinets above the appliance. Children climbing on the cooktop could be seriously injured.
- Children or persons with a disability which limits their ability to use the appliance should have a responsible and competent person to instruct them in its use. The instructor should be satisfied that they can use the appliance without danger to themselves or their surroundings.
- Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be done by a qualified technician.
- Do not use a steam cleaner to clean your cooktop.
- Do not place or drop heavy objects on your cooktop.
- Do not stand on your cooktop.
- Do not use pans with jagged edges or drag pans across the Induction glass surface as this can scratch the glass.
- Do not use scourers or any other harsh abrasive cleaning agents to clean your cooktop, as these can scratch the Induction glass.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



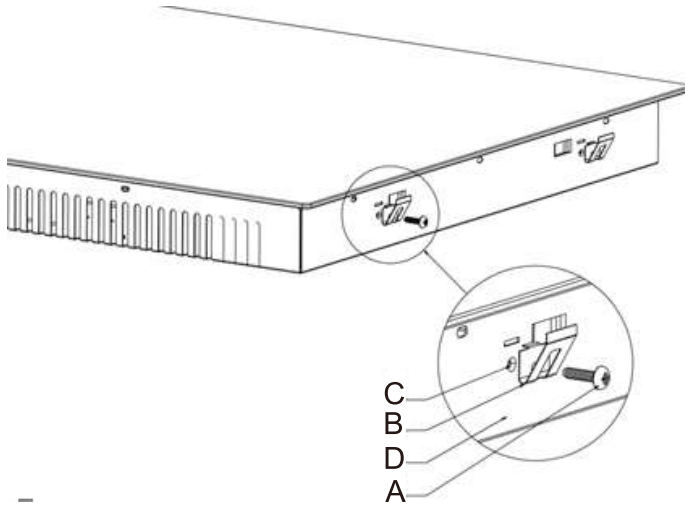

A	B	C	D
screw	bracket	screw hole	base

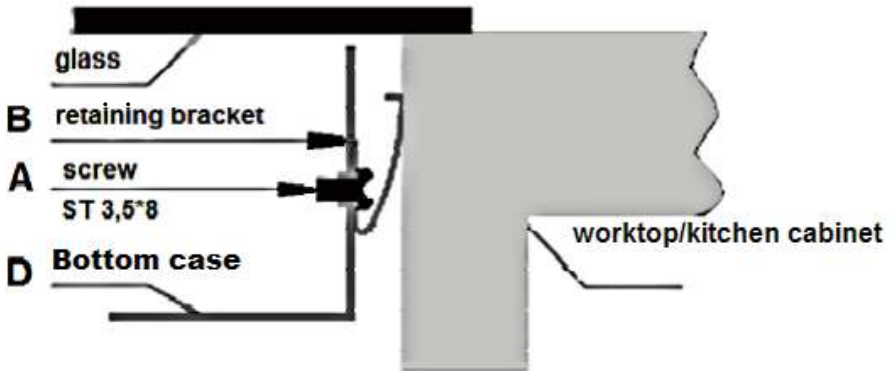

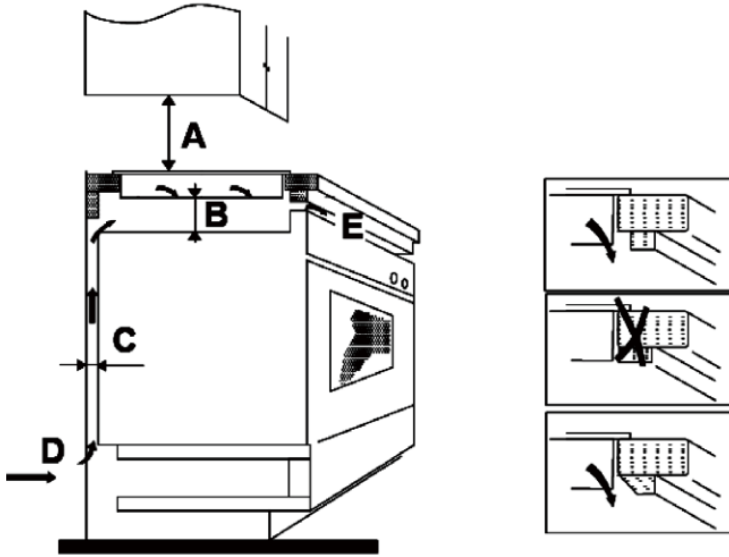

A	B	C	D	E
30 in	2 in mini	1.2 in mini	Air intake	Air exit 0.4 in

Before Locating The Fixing Brackets

The unit should be placed on a stable, smooth surface (use the packaging). Do not apply force onto the controls protruding from the cooktop. Fix the cooktop on the work surface by screw four brackets on the bottom of cooktop (see picture) after installation.



- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **WARNING:** Unattended cooking on the cooktop with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame with a lid or a fire blanket.
- **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

WARNING: In order to prevent tipping of the appliance, this stabilizing means must be installed. Refer to the instructions for installation.


WARNING: Use only cooktop guards designed by the manufacture of the cooking appliance or indicated by the manufacture of the appliance in the instruction for use as suitable or cooktop guards incorporated in the appliance. The use of inappropriate guards can cause accidents. This appliance incorporates an earth connection for functional purposes only.

Congratulations

On the purchase of your new Induction cooktop. We recommend that you spend some time to read this Instruction/Installation Manual in order to fully understand how to install correctly and operate it. For installation, please read the installation section. Read all the safety instructions carefully before use and keep this Instruction/Installation Manual for future reference.


Product Overview

Top view(IHTB302)

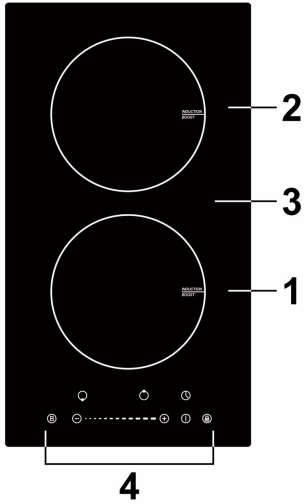

- 1. 2000 Boost 2300W zone(7.1in)
- 2. 1500 Boost 2000W zone(7.1in)
- 3. Glass plate
- 4. Control panel

Control panel(IHTB302)

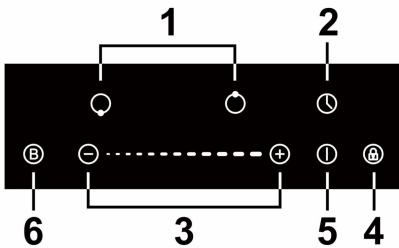

- 1. Heating zone selection controls
- 2. Timer control
- 3. Power/Timer regulating key
- 4. Keylock control
- 5. ON/OFF control
- 6. Boost function control




Installation

Selection Of Installation Equipment

Cut out the work surface according to the sizes shown in the drawing. For the purpose of installation and use, a minimum of 2.0" space shall be preserved around the hole.

Be sure the thickness of the work surface is at least 1.2". Please select heat-resistant work surface material to avoid larger deformation caused by the heat radiation from the cooktop. As shown below:

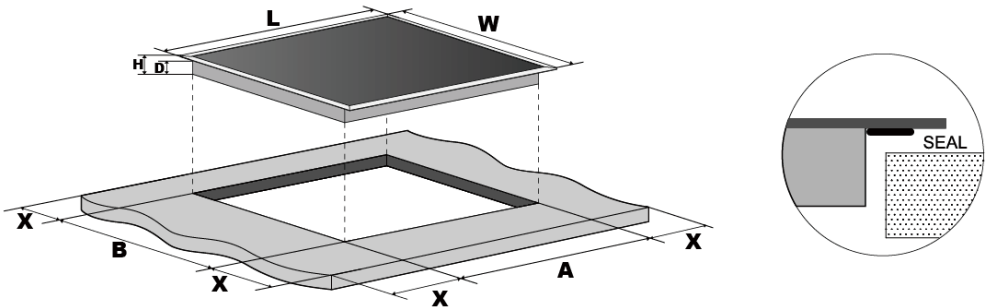

Model	L	W	H	D	A	B	X
IHTB302	11.5"	20.5"	2.4"	2.3"	10.6"	19.8"	2"
IHTB775	30.3"	20.5"	2.4"	2.3"	29.2"	19.4"	2"

Under any circumstances, make sure the Induction cooktop is well ventilated and the air inlet and outlet are not blocked. Ensure the Induction cooktop is in good work state. As shown below.



Note: The safety distance between the cooktop and the cupboard above the cooktop should be at least 30".

Failure Display And Inspection

If an abnormality comes up, the induction cooktop will enter the protective state automatically and display corresponding protective codes:

Problem	Possible causes	What to do
F3/F4	Temperature sensor of the induction coil failure	Please contact the supplier.
F9/FA	Temperature sensor of the IGBT failure.	Please contact the supplier.
E1/E2	Abnormal supply voltage	Please inspect whether power supply is normal. Power on after the power supply is normal.
E3	High temperature of the induction coil temperature sensor	Please contact the supplier.
E5	High temperature of the IGBT temperature sensor	Please restart after the cooktop cools down.

The above are the judgment and inspection of common failures. Please do not disassemble the unit by yourself to avoid any dangers and damages to the induction cooktop.


Technical Specification

Model	IHTB302	IHTB775
Cooking Zones	2 Zones	5 Zones
Supply Voltage	220-240V~	220-240V~
Frequency	50-60Hz	50-60Hz
Rating Power	3000-3800W	6800-7400W
Product Size L × W × H	11.5" x 20.5" x 2.4"	30.3" x 20.5" x 2.4"
Built-in Dimension A × B	10.6" x 19.8"	29.2" x 19.4"

Weight and Dimensions are approximate. Because we continually strive to improve our products we may change specifications and designs without prior notice.




Top view(IHTB775)

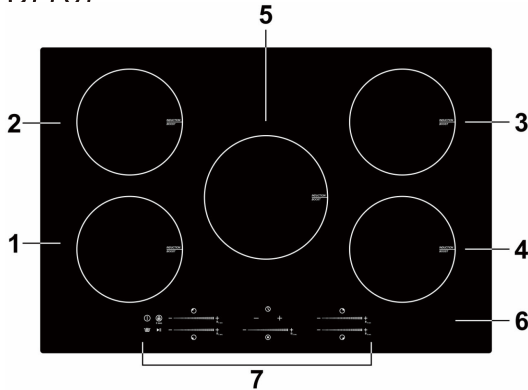

1. 2000 Boost 2600W zone(7.1in)
2. 1500 Boost 2000W zone(7.1in)
3. 2000 Boost 2600W zone(7.1in)
4. 1500 Boost 2000W zone(7.1in)
5. 2000 Boost 2600W zone(8.3in)
6. Glass plate
7. Control panel


Control panel(IHTB775)

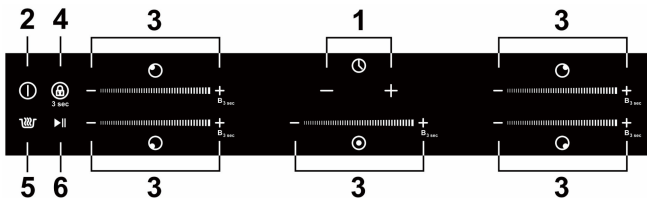

1. Timer control
2. ON/OFF control
3. Heating zone selection controls/Boost function
4. Keylock control
5. Keep warm function
6. Stop & go function control

A Word On Induction Cooking

Induction cooking is a safe, advanced, efficient, and economical cooking technology. It works by electromagnetic vibrations generating heat directly in the pan, rather than indirectly through heating the glass surface. The glass becomes hot only because the pan eventually warms it up.

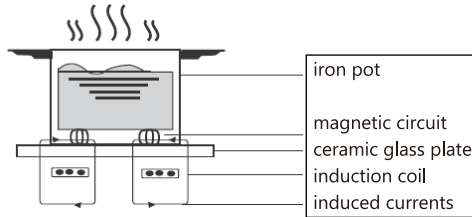


Before Using Your New Induction Cooktop

- Read this guide, taking special note of the “Safety Warnings” section.
- Remove any protective film that may still be on your Induction cooktop.

Using The Touch Controls

- The controls respond to touch, so you don’t need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

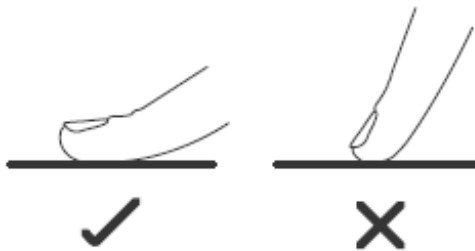

Hints And Tips

Problem	Possible causes	What to do
The induction cooktop cannot be turned on.	No power.	Make sure the induction cooktop is connected to the power supply and that it is switched on. Check whether there is a power outage in your home or area. If you've checked everything and the problem persists, call a qualified technician.
The touch controls are unresponsive.	The controls are locked.	Unlock the controls. See section "Using your induction cooktop" for instructions.
The touch controls are difficult to operate.	There may be a slight film of water over the controls or you may be using the tip of your finger when touching the controls.	Make sure the touch control area is dry and use the ball of your finger when touching the controls.
The glass is being scratched.	Rough-edged cookware.	Use cookware with flat and smooth bases. See "Choosing the right cookware".
	Unsuitable, abrasive scourer or cleaning products being used.	See "Care and cleaning".
Some pans make crackling or clicking noises.	This may be caused by the construction of your cookware (layers of different metals vibrating differently).	This is normal for cookware and does not indicate a fault.
The induction cooktop makes a low humming noise when used on a high heat setting.	This is caused by the technology of induction cooking.	This is normal, but the noise should quieten down or disappear completely when you decrease the heat setting.
Fan noise coming from the induction cooktop.	A cooling fan built into your induction cooktop has come on to prevent the electronics from overheating. It may continue to run even after you've turned the induction cooktop off.	This is normal and needs no action. Do not switch the power to the induction cooktop off at the wall while the fan is running.
Pans do not become hot and appears in the display.	The induction cooktop cannot detect the pan because it is not suitable for induction cooking.	Use cookware suitable for induction cooking. See section "Choosing the right cookware".
	The induction cooktop cannot detect the pan because it is too small for the cooking zone or not properly centred on it.	Centre the pan and make sure that its base matches the size of the cooking zone.
The induction cooktop or a cooking zone has turned itself off unexpectedly, a tone sounds and an error code is displayed (typically alternating with one or two digits in the cooking timer display).	Technical fault.	Please note down the error letters and numbers, switch the power to the induction cooktop off at the wall, and contact a qualified technician.


Care And Cleaning


What?	How?	Important!
<p>Everyday soiling on glass(fingerprints, marks, stains left by food or non-sugary spillovers on the glass</p>	<ol style="list-style-type: none"> 1. Switch the power to the cooktop off. 2. Apply a cooktop cleaner while the glass is still warm(but not hot)! 3. Rinse and wipe dry with a clean cloth or paper towel. 4. Switch the power to the cooktop back on. 	<ul style="list-style-type: none"> • When the power of the cooktop is switched off, there will be no “hot surface” indication but the cooking zone may still be hot! Take extreme care. • Heavy-duty scourers, some nylon scourers and harsh/abrasive cleaning agents may scratch the glass. Always read the label to check if your cleaner or scourer is suitable. • Never leave cleaning residue on the cooktop: the glass may become stained.
<p>Boil over, melts, and hot sugary spills on the glass</p>	<p>Remove these immediately with a fish slice, palette knife or razor blade scraper suitable for Induction glass cooktops, but beware of hot cooking zone surfaces:</p> <ol style="list-style-type: none"> 1. Switch the power to the cooktop off at the wall. 2. Hold the blade or utensil at a 30° angle and scrape the soiling or spill to a cool area of the cooktop. 3. Clean the soiling or spill up with a dish cloth or paper towel. 4. Follow steps 2 to 4 for “Everyday soiling on glass” above. 	<ul style="list-style-type: none"> • Remove stains left by melts and sugary food or spillovers as soon as possible. If left to cool on the glass, they may be difficult to remove or even permanently damage the glass surface. • Cut hazard: when the safety cover is retracted, the blade in a scraper is razor-sharp. Use with extreme care and always store safely and out of reach of children.
<p>Spillovers on the touch controls</p>	<ol style="list-style-type: none"> 1. Switch the power to the cooktop off. 2. Soak up the spill 3. Wipe the touch control area with a clean damp sponge or cloth. 4. Wipe the area completely dry with a paper towel. 5. Switch the power to the cooktop back on. 	<ul style="list-style-type: none"> • The cooktop may beep and turn itself off, and the touch controls may not function while there is liquid on them. Make sure you wipe the touch control area dry before turning the cooktop back on.



Choosing The Right Cookware




- Only use cookware with a base suitable for induction cooking. Look for the induction symbol on the packaging or on the bottom of the pan.
- You can check whether your cookware is suitable by carrying out a magnet test. Move a magnet towards the base of the pan. If it is attracted, the pan is suitable for induction cooking.
- If you do not have a magnet:
 1. Put some water in the pan you want to check.
 2. If  does not flash in the display and the water is heating, the pan is suitable.
- Cookware made from the following materials is not suitable: pure stainless steel, aluminium or copper without a magnetic base, glass, wood, porcelain, ceramic, and earthenware.

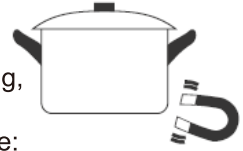


Do not use cookware with jagged edges or a curved base.



Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Use pans whose diameter is as large as the graphic of the zone selected. Using a pot a slightly wider energy will be used at its maximum efficiency. If you use smaller pot efficiency could be less than expected. Pot less than 5 1/2 inch could be undetected by the cooktop. Always centre your pan on the cooking zone.

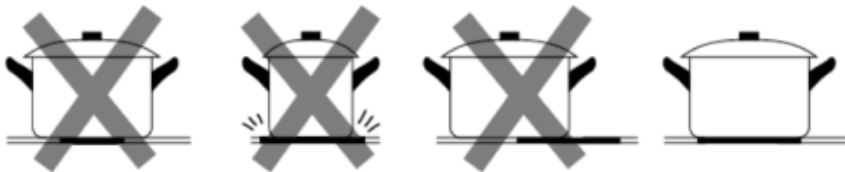

Always lift pans off the Induction cooktop – do not slide, or they may scratch the glass.

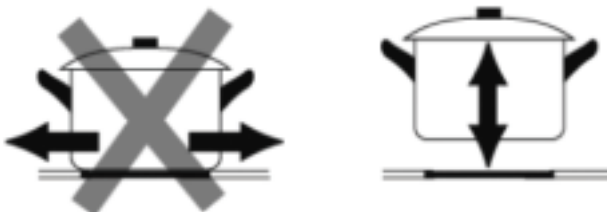

Using Your Induction Cooktop

To start cooking


1. Touch the ON/OFF control.

After power on, the buzzer beeps once, all displays show “-” or “--”, indicating that the induction cooktop has entered the state of standby mode.




2. Place a suitable pan on the cooking zone that you wish to use.


- Make sure the bottom of the pan and the surface Of the cooking zone are clean and dry.

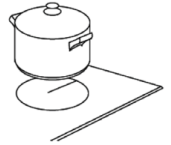

 3. Touching the heating zone selection control, and an indicator next to the key will flash.




IHTB302

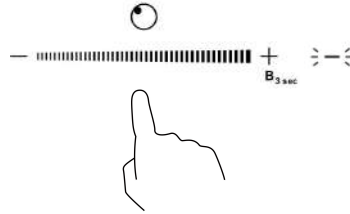


IHTB775

4. Select a heat setting by touching the “-” or “+” control or slider along the power level control.

- If you don't choose a heat setting within 1 minute, the induction cooktop will automatically switch off. You will need to start again at step 1.
- You can modify the heat setting at any time during cooking.
- By holding down either of these buttons, the value will adjust up or down.

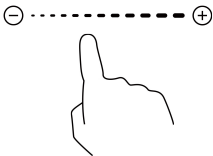

IHTB302

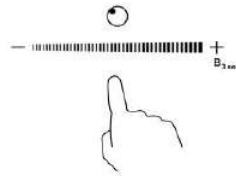

IHTB775



5. Leave the steak to rest on a warm plate for a few minutes to allow it to relax and become tender before serving.

For stir-frying

1. Choose an induction compatible flat-based wok or a large frying pan.
2. Have all the ingredients and equipment ready. Stir-frying should be quick. If cooking large quantities, cook the food in several smaller batches.
3. Preheat the pan briefly and add two tablespoons of oil.
4. Cook any meat first, put it aside and keep warm.
5. Stir-fry the vegetables. When they are hot but still crisp, turn the cooking zone to a lower setting, return the meat to the pan and add your sauce.
6. Stir the ingredients gently to make sure they are heated through.
7. Serve immediately.

Heat Settings

The settings below are guidelines only. The exact setting will depend on several factors, including your cookware and the amount you are cooking. Experiment with the induction cooktop to find the settings that best suit you.

Heat setting	Suitability
1 - 2	<ul style="list-style-type: none"> • Delicate warming for small amounts of food • Melting chocolate, butter, and foods that burn quickly • Gentle simmering • Slow warming
3-4	<ul style="list-style-type: none"> • Reheating • Rapid simmering • Cooking rice
5-6	<ul style="list-style-type: none"> • Pancakes
7-8	<ul style="list-style-type: none"> • Sauteing • Cooking pasta
9	<ul style="list-style-type: none"> • Stir-frying • Searing • Bringing soup to the boil • Boiling water

NOTE: If you want to change the time after the timer is set, you have to start from step 1.

Cooking Guidelines



Take care when frying as the oil and fat heat up very quickly, particularly if you're using power boost. At extremely high temperature oil and fat will ignite spontaneously and this presents a serious fire risk.

Cooking Tips

- When food comes to the boil, reduce the temperature setting.
- Using a lid will reduce cooking times and save energy by retaining the heat.
- Minimize the amount of liquid or fat to reduce cooking times.
- Start cooking on a high setting and reduce the setting when the food has heated through.

Simmering, cooking rice

- Simmering occurs below boiling point, at around 85°C(185°F), when bubbles are just rising occasionally to the surface of the cooking liquid. It is the key to delicious soups and tender stews because the flavor develops without overcooking the food. You should also cook egg-based and flour thickened sauces below boiling point.
- Some tasks, including cooking rice by the absorption method, may require a setting higher than the lowest setting to ensure the food is cooked properly in the time recommended.

Searing steak

To cook juicy flavor some steaks:

1. Stand the meat at room temperature for about 20 minutes before cooking.
2. Heat up a heavy-based frying pan.
3. Brush both sides of the steak with oil. Drizzle a small amount of oil into the hot pan and then lower the meat onto the hot pan.
4. Turn the steak only once during cooking. The exact cooking time will depend on the thickness of the steak and how cooked you want it. Times may vary from about 2 – 8 minutes per side. Press the steak to gauge how cooked it is the firmer it feels the more 'well done' it will be.



If The Display Flashes Alternately With The Heat Setting

This means that:

- You have not placed a pan on the correct cooking zone or,
- The pan you're using is not suitable for induction cooking or,
- The pan is too small or not properly centred on the cooking zone.


No heating takes place unless there is a suitable pan on the cooking zone. The display will automatically turn off after 1 minutes if no suitable pan is placed on it.

When You Have Finished Cooking

1. Touching the heating zone selection control that you wish to switch off.




IHTB302

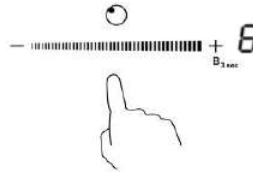


IHTB775

 2. Turn the cooking zone off by touching the “-” and scrolling down to “0” or slider along the power level to the left side. Make sure the display shows “0”, then shows “H”.



 3. Turn the whole cooktop off by touching the ON/OFF control.



4. Beware of hot surfaces, “ H ” will show which cooking zone is hot to touch. It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans, use the cooktop that is still hot.




Using The Boost Function

Boost function is the function that one zone rising to a larger power in one second and lasting for 5 minutes. Then you can get a more powerful and faster cooking.


Using the Boost to get larger power

1. Touch the heating zone selection button that you hope to boost, an indicator next to the key will flash.

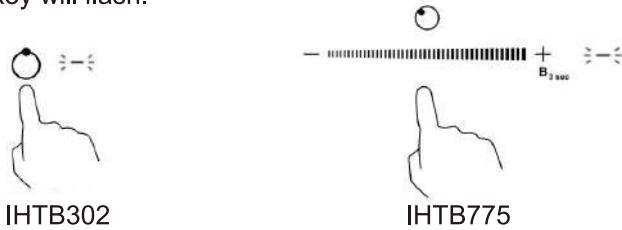


2.1 For Model IHTB302:

Touch the boost button, the heating zone will begin to work at boost mode. The power display will show “P” to indicate that the zone is boosting.

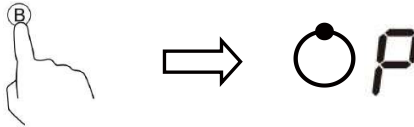

2.2 For Model IHTB775:


Touch and hold the boost button for a while(3 second) the heating zone will begin to work at boost mode. The power display will show “P” to indicate that the zone is boosting.

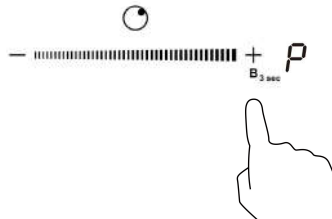

3. The boost power will last for 5 minutes and then the zone will go back to the power stage which was set before boost.



 5. When the time is set, it will begin to count down immediately. The display will show the remaining time and the timer indicator flash for 5 seconds.




IHTB302




IHTB775

 NOTE: The red dot next to power level indicator will illuminate indicating that zone is selected.




IHTB302

 

IHTB775

 6. When cooking timer expires, the corresponding cooking zone will be switch off automatically.




Other cooking zone will keep operating if they are turned on previously.

Setting The Timer To Turn More Than One Cooking Zone Off

1. If more than one heating zone use this function, the timer indicator will show the lowest time.(e.g. zone 1 # setting time of 3 minutes, zone 2 # setting time of 6 minutes, the timer indicator shows “3”.)

 NOTE: The red dot next to power level indicator will flash.



(set to 6 minutes)



(set to 3 minutes)



2. When cooking timer expires, the corresponding cooking zone will be switch off automatically and show “H”.




Setting The Timer To Turn One Cooking Zone Off

Cooking zones set for this feature will


1. Touch the heating zone selection control that you want to set the timer for. (e.g. zone 2#)

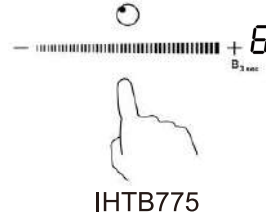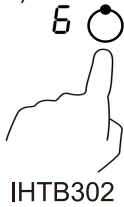

2. Touch timer control, the minder indicator will start flashing and “30” will show in the timer display.

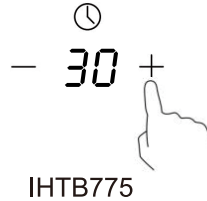


3. Set the time by touching the “-” or “+” control of the timer.
Hint: Touch the “-” or “+” control of the timer once will decrease or increase by 1 minute.
Touch and hold the “-” or “+” control of the timer will decrease or increase by 10 minutes.

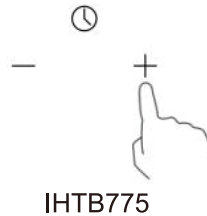


4. Touch the “-” control, if the “00” will show in the minute display, the timer is cancelled.



4. If you want to cancel the boost during this 5 minutes, touch the heating zone selection button, an indicator next to the key will flash. And then touch or hold the boost button for a while. The heating zone will go back to the power stage which was set before boost.

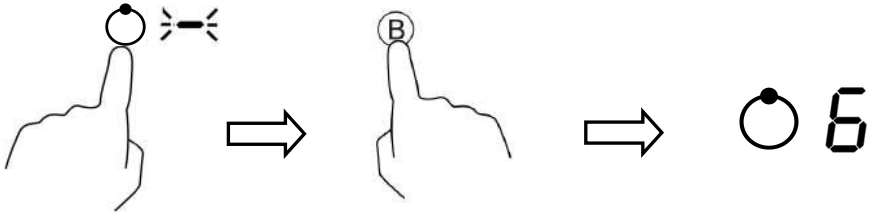


IHTB302

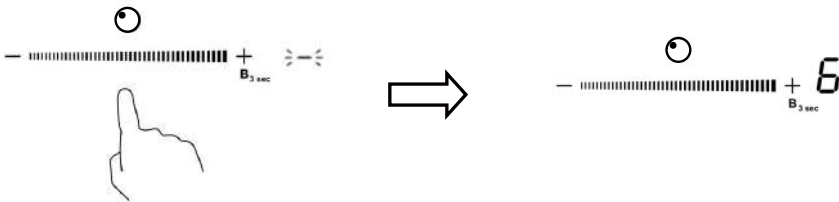

IHTB775

Power Management For IHTB302


In this cooktop every zone can work with Boost function. If you need to use boost, first make sure that the other zone is at the maximum power level of 5. Otherwise the ρ and \mathcal{G} symbols will flash on the display of the selected zone and power level \mathcal{G} is automatically set.

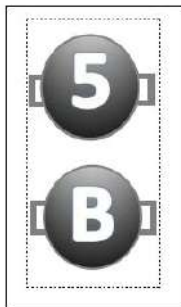


Power Management For IHTB775

In this cooktop every zone can work with Boost function.

- In group a, if you need to use boost please decrease the power level of the other zone in the same group to 5 or less first, otherwise P and 9 symbols will flash on the display of the selected zone and power level 9 is automatically set. When one zone is on boost P, the other one is on power level 5, and if you want to increase the power level from 5 to P, and then the other zone will decrease the power level from P to 5 automatically.

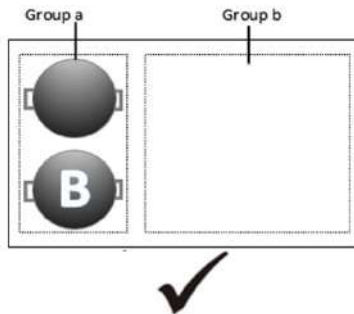

- In group b, if you need to use boost, you can only use two zones on right at the same time. When you active one zone to boost, you have to decrease the power level of the other zone in the same group to 5 or less first, otherwise the P and 9 symbols will flash on the display of the selected zone and power level 9 is automatically set. If middle zone use boost function, the other 2 zones set level 0.

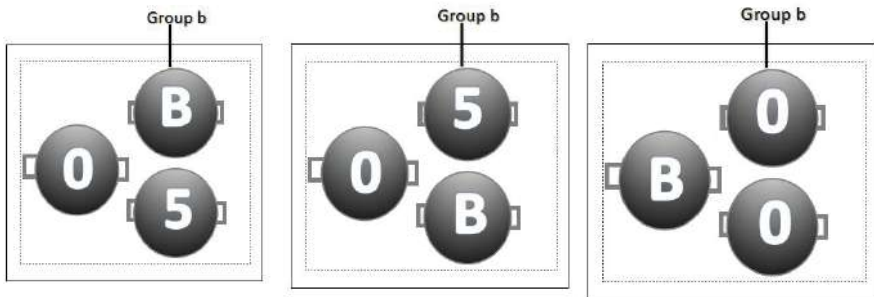

Using The Timer As A Minute Minder

If you are not selecting any cooking zone


1. Make sure the cooktop is turned on.

Note: you can use the minute minder even if you're not selecting any cooking zone.

2. Touch timer control, the minder indicator will start flashing and "30" will show in the timer display.



IHTB302

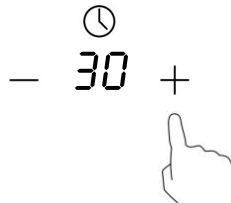


IHTB775


3. Set the time by touching the "-" or "+" control of the timer.

Hint: Touch the "-" or "+" control of the timer once to decrease or increase by 1 minute.

 Touch and hold the "-" or "+" control of the timer to decrease or increase by 10 minutes.




IHTB302

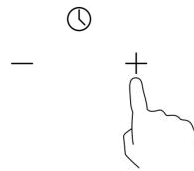

IHTB775

 4. When the time is set, it will begin to count down immediately. The display will show the remaining time and the timer indicator will flash for 5 seconds.




IHTB302



IHTB775

 5. Buzzer will beep for 30 seconds and the timer indicator shows "--" when the setting time finished.



NOTE: The cooktop will continue to cook, this timer function is a minute minder only, it does not turn the cooktop ON or OFF.

Over-Temperature Protection

A temperature sensor equipped can monitor the temperature inside the Induction cooktop. When an excessive temperature is monitored, the Induction cooktop will stop operation automatically.

Detection Of Small Articles

When an unsuitable size or non-magnetic pan(e.g. aluminium), or some other small item(e.g. knife, fork, key) has been left on the cooktop, the cooktop automatically go on to standby in 1 minute. The fan will keep cooling down the induction cooktop for 1 minute.

Auto Shutdown Protection

Auto shut down is a safety protection function for your induction cooktop. It shut down automatically if ever you forget to turn off your cooking. The default working times for various power levels are shown in the below table:

Power level	1	2	3	4	5	6	7	8	9
Default working timer (hour)	8	8	8	4	4	4	2	2	2

When the pot is removed, the induction cooktop can stop heating immediately and the cooktop automatically switch off after 2 minutes.



People with a heart pace maker should consult with their doctor before using this unit.


Using The Timer

You can use the timer in two different ways:

- You can use it as a minute minder. In this case, the timer will not turn any cooking zone off when the set time is up.
- You can set it to turn one cooking zone off after the set time is up.
- You can set the timer up to 99 minutes.




3. In group b, you can use three zones at the same time if you don't active the boost, but the max. power level collocation is 7-level, 7-level, 7-level.

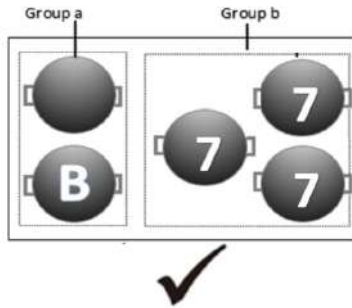


Using The Pause Function- STOP+GO

Pause function can be used at any time during cooking. It allows to stop the induction cooktop and come back to it.


1. Make sure the cook zone is working.
2. Touch the heating zone selection button that you wish to use STOP + GO, an indicator next to the key will flash.

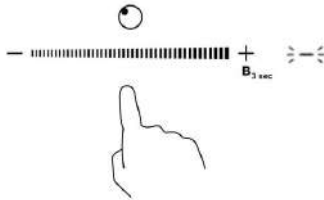

3. Touch the button STOP+GO, the cooking zone indicator will show "II". And then the operation of the induction cooktop will be deactivate within the scope of all cooking zones, except the STOP+GO, on/off and lock keys.

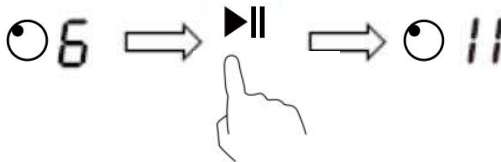

- To cancel the pause status, touch the button STOP+GO , then the cooking zone will go back to the power stage which you set before.

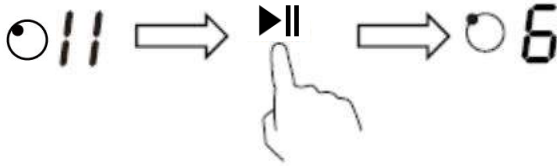


Using The Keep Warm


Keep warm function is suitable for keeping food warm.

Using The Keep Warm To Get Stable Temperature


- Touch the heating zone selection button that you wish to use keep warm, an indicator next to the key will flash.

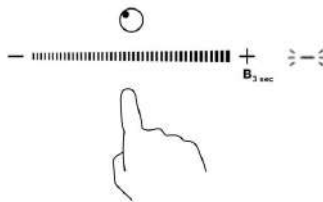

- Touch the keep warm function control, the cooking zone indicator will display "A".

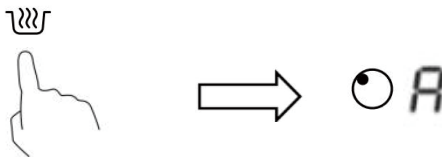

3. If you want to cancel the keep warm, touch the heating zone selection button, an indicator next to the key will flash. And then touch the keep warm function control, the heating zone will go back to “0” power stage.

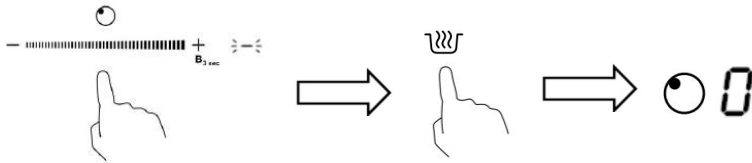


Locking The Controls

 
- You can lock the controls to prevent unintended use (for example children accidentally turning the cooking zones on).
- When the controls are locked, all the controls except the ON/OFF control are disabled.

To lock the controls



For Model IHTB302: Touch the keylock  control. The timer indicator will show “Lo”.

For Model IHTB775: Touch and hold the keylock  control for a while (3 second). The timer indicator will show “Lo”.

To unlock the controls

1. Make sure the Induction cooktop is turned on.
2. Touch and hold the keylock control  for a while.
3. You can now start using your Induction cooktop.



When the cooktop is in the lock mode, all the controls are disabled except the ON/OFF control , you can always turn the induction cooktop off with the ON/OFF control  in an emergency, but you shall unlock the cooktop first in the next operation.