Faema Faemina Plumb in Instructions



You will need a Phillips screwdriver and 2 small adjustable wrenches.

Start by removing the top tray. Unscrew the 4 Phillips screws.




Next, remove the 4 Phillips screws holding on the side and rear panel.



Watch for the electrical connection! Make sure to detach the connector.




Locate the PTFE tube coming from the tank to the pump inlet.

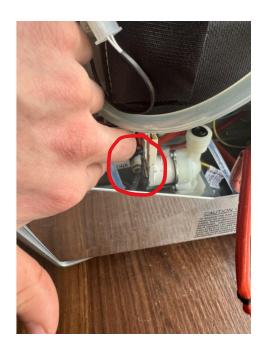

Remove the push-to-connect PTFE hose. Press in on the tube and the locking ring, keep the locking ring pressed in, and pull the PTFE hose out of the connection.

Using a wrench to hold the ring back as you pull the PTFE hose may help.

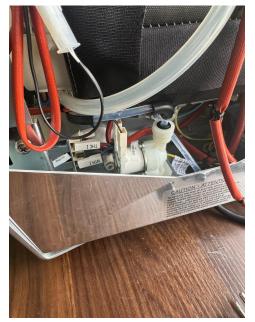

Insert the PTFE hose into the water inlet solenoid connection. Make sure the hose is all the way in.




Pull out the tank and remove the 2 lids.



Remove the metal clip and the magnetic float.




Press the metal clip most of the way into the corner.

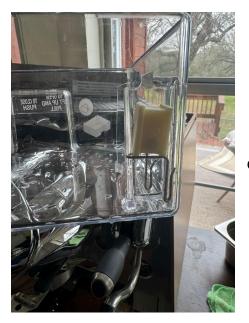

Set the magnetic float on the metal clip and reassemble the tank. If the machine still doesn't detect the water, you can flip the float around or adjust the position of the metal clip.



You may remove this cap from the drain bin to add a hose for an external drain.

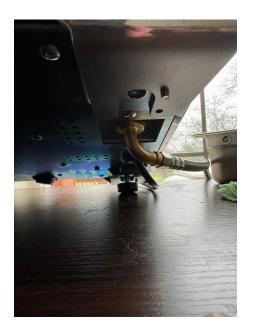

Lift the machine and screw on the ¾ to ¾ comp adapter.

Turn on the water as well as the machine and be sure to check for leaks.

Put all the panels back together.