

# 1. Machine configuration and overall dimensions

Select your colour:	Select your region:	
Tempest	Asia	Oceania
Earth	Central - South America	North America
	Europe	Middle East

Classic	C'2ct	C'2s	C'2m		
Weight	53 kg	60 kg	62 kg		
Performance (up to)					
Espresso/h (23 s)	175				
Hot water/h (200 ml)	170				
Cappuccino/h (23 s)	-	-	175		
Adjustable hot water temperature	-	Yes	Yes		
e'Foam Micro Air Dosing (MAD) system (controlled electronically)	-	Yes	Yes		
Milk system with EMT (Electronic Milk Texturing)	-	-	Yes		
Voltage/Power					
Power consumption (standby mode)	Less than 2 W				

#### C'2m/Classic

Technical data		
Brew chamber	24 g	
Grinder	2 x Ceramic burrs - 64 mm	
User Interface	Touch screen 400 mm (15.7")	
Bean hopper	2 x 1.2 kg or 1 x 2.4 kg (option)	
Coffee outlet height*	165 mm max.	
Hot water outlet height*	145 mm max. or 195 mm max. (option)	
Interface	1 x USB, 1 x SD-Card, 1 x Ethernet, 1 x CCI/CSI	
Cup heater panel	Up to 50 espresso cups	
Coffee boiler size	0.8 L	
Steam boiler size	1.6 L	
Grounds drawer	400 g	
Water Connection		
Water hose	Inox braided pipe G3/8" female x 2 m	
Drain hose	Ø 22 mm x Ø 16 mm x 2 m	


<sup>\*</sup>measured from the drip tray

## Water pressure and flow

2.5 - 4 bars (36.3 - 58 psi) If pressure exceeds 4 bars (58 psi), it is necessary to install a pressure valve reducer.

If the main flow rate is under 140 L/h, there is a risk of damaging the water pump.



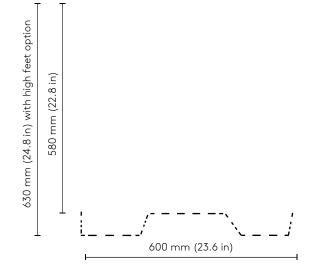





# Cameo Installation sheet

Countertop cutout for

Ø 80 mm (3")

Ø 127 mm (5'')

cables and hoses

# 2. Prior to the installation READ SAFETY INSTRUCTIONS

- Check water quality and pressure
- Define filter type and size and check space inside counter
- If no descaling cartridge is used, install carbon filter as minimum •
- Check that the machine is on flat and stable surface
- Check counter cut out
- Check water supply installation
- Check that power supply conforms to local standards
- Check that power supply conforms to the machine settings
- Check that the machine is the only device on this power line
- Check all with customer on site
- Make sure original coffee is available
- Make sure cold milk is available (option)
- Check drink recipes and cup sizes

125 mm

(4.9 in)

58 mm

(2.3 in)

E E (6.9 in) 175

133 mm .2 in)

(5.

Check that a milk pitcher is available.


### 3. After installation

- Explain cleaning and instruct staff using Quick Reference Card (QRC). Download here: https://bit.ly/2VYO08O.
- Save the machine data to an USB stick and send it to <u>data-upload@eversys.com</u>. Refer to: <u>https://bit.ly/3yTzsWo</u>.

# 4. Desk preparation and countertop cut out dimensions

- Download the pre-commissioning requirements check list here: <a href="https://bit.ly/3CQ4zop">https://bit.ly/3CQ4zop</a>.
- Download the 1:1 scale countertop cutout here: <a href="https://bit.ly/3xT5TTM">https://bit.ly/3xT5TTM</a>.

#### Min. height required to refill/remove bean hopper

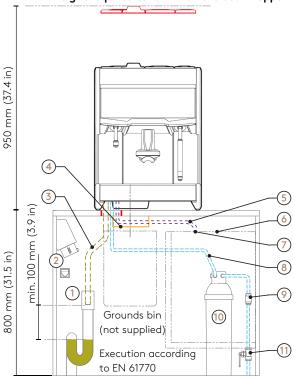

Countertop cutout for the Undercounter ground coffee disposal (option) === Drain hose Water pipe

IIII Milk tube

- 1. Drain with siphon, input min. Ø 56 mm.
- 2. Electrical socket according to local regulation and RJ-45 connection (e'Connect).
- 3. Drain hose Make sure that there is no dip or any back pressure in the hose. The hose must always flow downwards.
- 4. Undercounter ground coffee disposal (option).
- 5. Cut milk tubes as short as possible.
- 6. Place the fridge as close as possible to the machine.
- 7. Drill hole according to instruction of refrigerator manufacturer.
- 8. Main water braided pipe.
- 9. Check valve according to local regulation.
- 10. Descaling cartridge or carbon filter as minimum.
- 11. Pressure reducer output Only if water pressure exceeds 4 bars (58 psi).
- 12. Water inlet 3/8".
- Refer to the commissioning manual (https://bit.ly/2W0Wl6l) for more information.

# Water quality recommendation

Total hardness: 5 - 8° dGH (89-142 ppm) Carbonate hardness: Max. 6° dKH (107 ppm)

pH value: ideal 7.0 - 7.2

Your local distributor:	