



## BATTERY OPERATED MAGNIFIER DESK LAMP WITH FLEXIBLE GOOSENECK

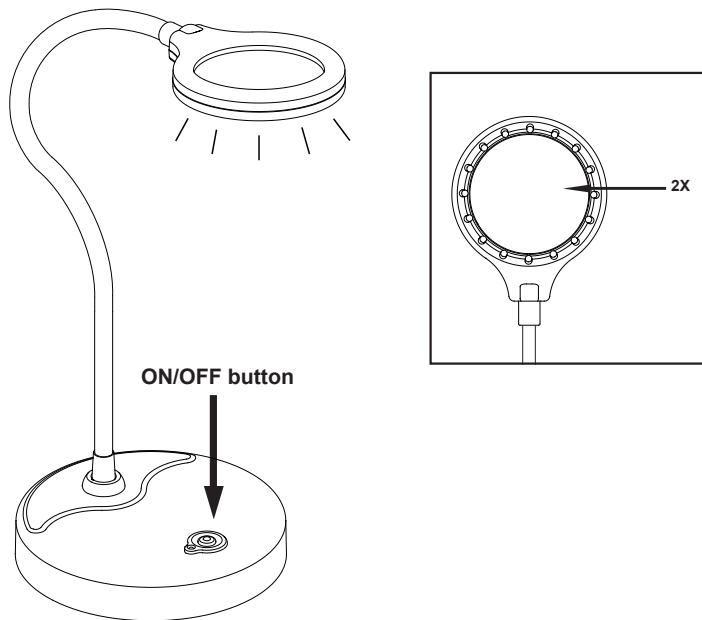

### IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter this safety feature.

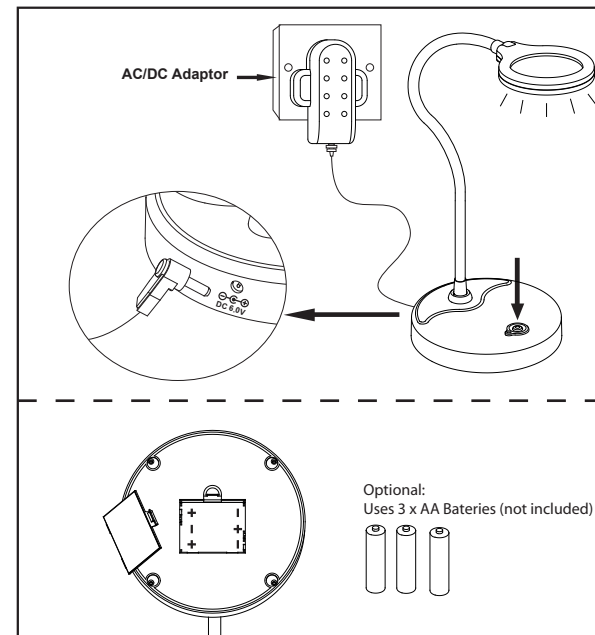

Replacing batteries:  
Insert 3 "AA" batteries into the battery compartment.  
Make sure the direction shown is correct.  
Close the battery compartment.