
 


INSTRUCTION MANUAL

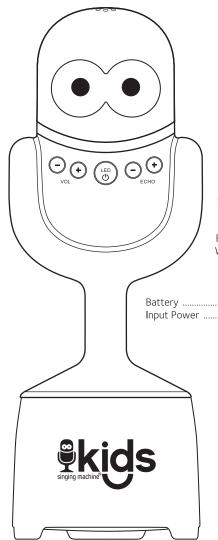

Included

What's in the box



Manual

USB Charging Cable

Specifications

AUDIO SECTION

BLUETOOTH

Working Distance

Up to 10 meters measured in open space

POWER SECTION

Battery Lithium ion battery 3.7 V 1,200 mAh Input Power Micro USB DC 5 V 1 A

DIMENSIONS

3.3 x 2.9 x 9.1 (inches) / 8.3 X 7.3 X 23.2 (cm)

WEIGHT

0.25 (kgs) / 0.55 (lbs)

Specifications are subject to change without notice. Please retain the instructions for further reference. as they contain important information.

> The Singing Machine Company, Inc. 4060 E Jurupa Street, Unit B Ontario, CA 91761-1413 USA

Copyright © 2017 All Rights Reserved. Please retain this sheet as it contain important notes.

> PRINTED IN CHINA 445-1706-ENG01

Warnings



CALITION: TO REDUCE THE RISK OF ELECTRI SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO OUALIFIED SERVICE PERSONNEL. The Caution marking is located on the bottom panel

DRIPPING WARNING: This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority

to operate the equipment.

To parents recommending that the adaptor be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the adaptor should not be used until properly repaired.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception. which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The rating information is located at the back of the unit.

INDUSTRY CANADA NOTICE:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference, and
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

Important Safety Information

- Read these Instructions
- 2. Keep these Instructions.
- 3. Heed all Warnings.
- 4. Follow all Instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- 7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8. Only use attachments/accessories specified by the manufacturer.
- 9. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 1. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
- 12. CAUTION: To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

www.singingmachine.com/kids

The Bluetooth® word mark and logos are registered

The Singing Machine Company, Inc. is under license.

Other trademarks and trade names are those of their


trademarks owned by Bluetooth SIG, Inc.

and any use of such marks and logos by

respective owners.

The Singing Machine® is a registered trademark of The Singing Machine Co., Inc.

Before you get started

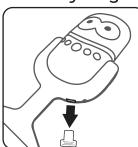

REMOVING THE TRY ME TAB

Before you operate the unit, please make sure the illustrated TRY ME tab has been removed. The unit cannot function normally if the tab has not be removed.

CHARGING THE UNIT





The charging indicator will light while the unit is charging. The indicator will turn off once the unit is fully charged.

NOTE: Please charge the unit when you see the disco light on the body flashing red.

Operation

1 Press and hold the **POWER/LED** button to turn the unit on; the unit lights will start changing gradually.


LIGHT MODE

Press the **POWER/LED** button repeatedly to select mode as follows:

Light Mode 1: The unit will light up with changing light colors. When there is music playback or singing, the lighting will flash with the audio signal.

Light Mode 2: The unit will light up with color changing lights continuously.


Light Mode 3: The light will be turned off.

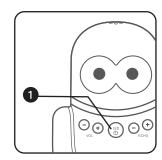

USING A BLUETOOTH DEVICE

Once the unit is switched on, you will hear the Bluetooth sound indicating it is ready to be paired. You may also press and hold the MIC VOL +/- buttons together to initiate

the pairing mode.
Switch on the Bluetooth function of your
Bluetooth compatible device within three feet
of the unit. You will see "Singing Machine"
appear on your device's search list.
Select "Singing Machine" to start pairing.
Wait for completion of the pairing until you
hear a beep from the unit. Please always refer
to the user manual of your bluetooth device
for detailed instructions.

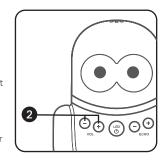

Note:

If your Bluetooth device prompts you for a passcode during the pairing process, please enter "0000" to connect. If pairing fails, repeat steps. If you have paired before, a list of previously searched results will be displayed. Select "Singing Machine" again. On some Bluetooth devices (i.e.,computers), once pairing is complete, you must select your Bluetooth device as "Use as Audio Device" or similar.

MUSIC PLAYBACK AND MUSIC VOLUME

Song selection and volume can be controlled from your Bluetooth Device. Adjust the music volume to a comfortable level.

SING-ALONG MICROPHONE

The microphone can be easily located on top of the unit. You can always sing through it when the unit has been switched on.


You can adjust the microphone volume by pressing the MIC VOL +/- buttons on the

NOTE: You will hear a beep when it is at the maximum level

5 You can press the ECHO +/- buttons to increase/decrease an echo effect to your

NOTE: You will also hear a beep when it is at the maximum level

6 Press and hold the **POWER/LED** button to turn the unit off; all lights will turn off.

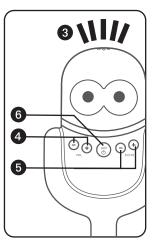

Energy Saving Mode (Auto Power System-APS)

The unit will automatically switch off after 30 minutes in the following situations:

- 1. There is no singing into the microphone;
- 2. The Bluetooth music has been stopped.

The unit can be switched on again by press and hold **POWER/LED** button. APS is for energy saving purposes.

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- Power is not on; press and hold the **POWER/LED** button to turn power on.
- · Confirm that the unit is charged.

No Sound - General

 \cdot Volume is set to minimum; raise volume of your Bluetooth music device by its volume control.

No sound from the microphone

- · Make sure the TRY ME tab has been removed.
- Microphone volume is set to minimum; raise microphone volume by pressing $\,$ MIC $\,$ VOL + button.

Bluetooth reception failure

- Put the external Bluetooth device close to the unit.
- Pair the unit with the Bluetooth Device as the procedures stated in this manual.