 


SMM230 INSTRUCTION MANUAL

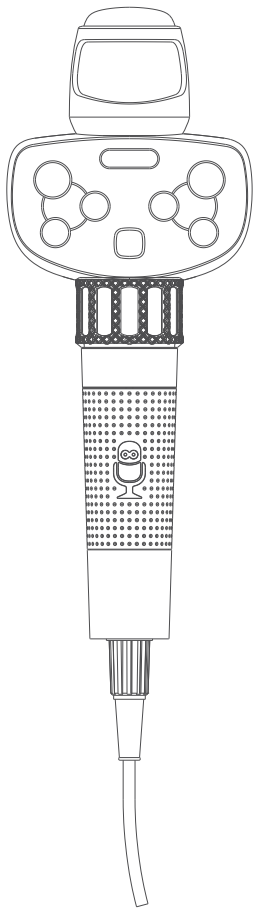

Specifications

Microphone

-74 dB 600 Ohms impedance with 6.3 mm Dynamic Microphone

Power Source

DC4.5V (3 X "AAA" size)

Dimensions

3.7 x 1.9 x 11.2 (inches) / 9.3 X 4.9 X 28.5 (cm)

Weight

0.4 (kgs) / 0.88 (lbs)

Specifications are subject to change without notice.
Please retain the instructions for further reference,
as they contain important information.

The Singing Machine Company, Inc.
4060 E Jurupa Street, Unit B
Ontario, CA 91761-1413 USA

Copyright © 2018 All Rights Reserved.

Please retain this sheet as it contain important notes.

PRINTED IN CHINA
230-1803-ENG01-US

Warnings

DRIPPING WARNING: This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

Warnings:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the back of the unit.

INDUSTRY CANADA NOTICE:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

Important Safety Information

 
1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
12. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

Install Batteries

- 1 Remove the battery compartment cover on the back of the microphone by using a Philips-head screw driver.
- 2 Insert three (3) "AAA" size alkaline batteries (not included) as indicated on the below diagram.
- 3 Replace the cover tightly before operating.
- 4 Connect the Hype Mic into the microphone jack of your Singing Machine unit.

Note:

- Replace all batteries at the same time.
- Do not mix old batteries with new batteries.
- Do not drop or tap the microphone as damage to the microphone or speaker may occur.
- Do not twirl the microphone cord as it will cause damage to the encased wiring.

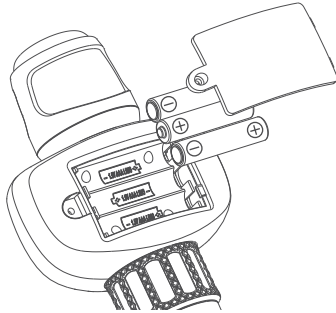

BATTERY PRECAUTIONS

The precautions below should be followed when using batteries in this device:

1. Warning – Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
2. Use only the size and type of batteries specified.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. A reversed battery may cause damage to the device.
4. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
5. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
6. Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow the battery manufacturer's directions.)
7. Remove the batteries promptly once its charge is low.
8. Clean the battery contact and also those of the device prior to installing the battery.

Operation

- 1 Connect the Hype Mic into the mic jack of your Singing Machine unit. (visit: www.singingmachine.com for more information).
- 2 Press and hold the **POWER** button to turn the unit on; the voice changer ring indicator will light up.

SING-ALONG WITH BUILT-IN SONGS

 
 
- 3 There are 3 built-in songs. Press 1, 2 or 3 buttons to play them one by one.
- 4 Press **STOP** button to stop.

PLAYING BUILT-IN EFFECTS

- 5 Press or buttons to play three different built-in sound effects.

SING-ALONG WITH BUILT-IN VOICE CHANGERS

- 6 There are 6 built-in voice changers in this Hype Mic. When rotating towards center (as indicated on the right diagram indicator will light up. The voice will change when the singer starts to sing through the microphone.
Purple light – ECHO
Pink light – Female voice
Orange light – Male voice
Lime light – Chipmunk
Cyan light – Robot
Blue light – Radio
Select NONE to sing without any voice effect and indicator will light up red.
- 7 You can adjust the microphone volume on your Singing Machine unit. (Also refer to the Singing Machine's User Guide.)

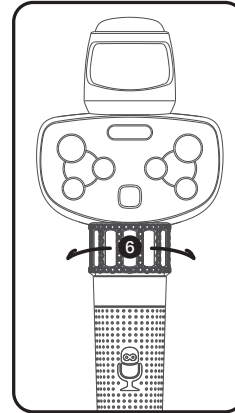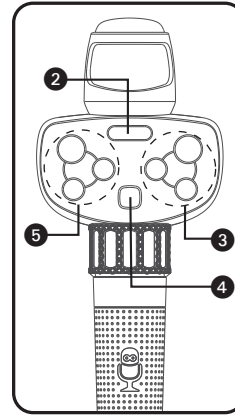

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- Replace with new batteries.

No sound from the microphone

- Make sure the Hype Mic is firmly connected to your Singing Machine unit's mic jack.
- Press and hold the **POWER** button to turn the Hype Mic on.
- Your Singing Machine unit's **MASTER VOLUME** or **MIC VOLUME** is set to minimum; raise volume.

ENERGY SAVING (AUTO POWER SYSTEM-APS)

The unit will automatically enter the Standby mode after 15 minutes in the following situations:

1. No button being pressed for 15 minutes.
2. Not singing to the microphone for 15 minutes.

The unit can be turned on by pressing the **POWER** button once. APS is for energy saving purposes.