

Sensor

Basically you will:

- small screw driver



- Thread seal tape



Start by getting the abrasive out from sandblaster tank, than:



1. Very important is to make sure the sensor is not "lose", you should not be able to move it around or get it out with ease. Probably you will have to apply some thread seal tape in the middle

2. When there is no abrasive in the tank

Now when the sensor is inside there is a time for final regulating, use the screw driver up to the point in which the red light will disappear, refill the abrasive and do take a look at the light, when you put abrasive back in the red light should be on.

3. When there is abrasive in the tank

When you regulate get to the point where red light appears and then turn one more full rotation.