

Elite Screens Slow Retract Manual Series Square Housing Dimension Table
Manual SRM Pro Series

Unit: mm													Packing dimension					
Model	Screen diagonal		Overall case length (A)	Screen material Width. (A2)		Weight bar length (A3)	black masking border with weight bar (B2)	Screen material Height with weight bar (B3)	View Height (B1)	Screen overall height with weight bar (B)	End cap height (B4)	End cap width (C)	Distance from screen material to the wall (C1)	Top black masking border (B5)	G.W. (KGS)	L (mm)	W (mm)	H (mm)
M84HSR-Pro	84"	16:9	2014	1936	1860	2010	62	1298	1046	1394	96	80	20	190	8,24	2112	140	132
M100HSR-Pro	100"	16:9	2374	2290	2214	2370	62	1517	1245	1613	96	80	20	210	9,58	2472	140	130
M120HSR-Pro	120"	16:9	2816	2733	2657	2812	62	1746	1494	1842	96	80	20	190	####	2984	160	140
M84VSR-Pro	84"	4:3	1867	1783	1707	1863	62	1432	1280	1528	96	80	20	90	9,24	1965	150	140
M100VSR-Pro	100"	4:3	2192	2108	2032	2188	62	1766	1524	1862	96	80	20	180	9,48	2290	145	140
M120VSR-Pro	120"	4:3	2598	2514	2438	2594	62	2066	1829	2162	96	80	20	175	####	2666	140	135

\* Dimension Table is only for reference, actual item might be different. Subject to change w/o notice.

Note: Data Error ±1"

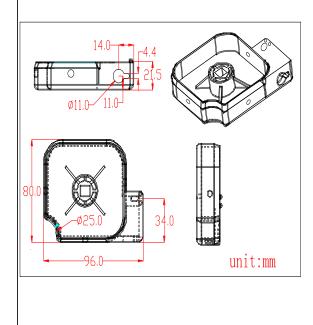

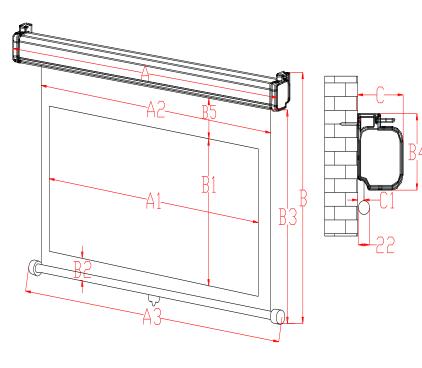



## **Manual SRMPro OUICK USER'S GUIDE**


3

# Screen Installation

#### A. Flush Wall Installation

- 1. Measure the distance of the keyholes on the end caps and mark the location of where the screen is to be installed for the pre-drilled hole.
- 2. After marking the area and drilling the hole, insert the proper screw into the drilled hole and leave about 1/8" of an inch from the wall to mount the screen.
- 3. Mount your screen from the keyhole located on back of screen's left and right end caps. Note: Do not remove the end caps to mount the screen to the wall. Removing the end caps will release the tension of the internal spring mechanism.

### **B.** Ceiling Installation

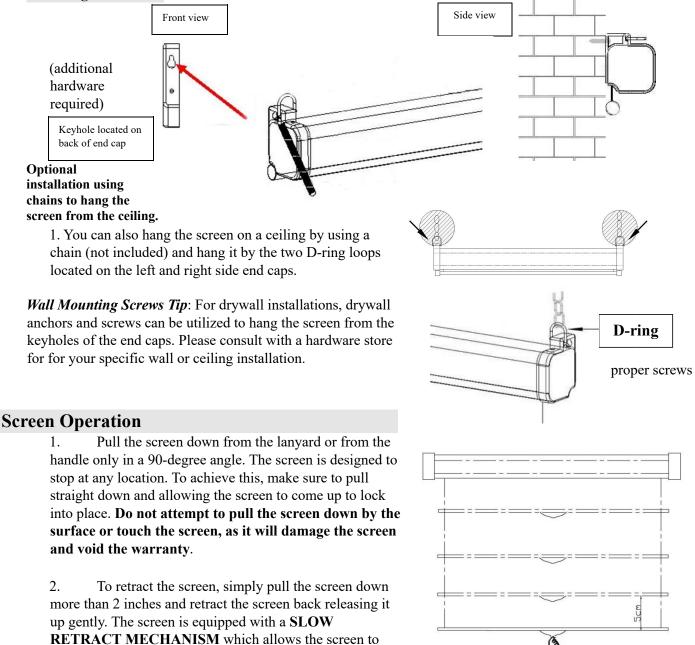

lanyard. Simply release the handle and the screen will retract by itself into the housing.

slowly retract without the need to hold on to the handle or

Attention: If the screen does not unlock, carefully pull the screen straight down with a little force. Always pull the screen down at a 90 degree angle.



# How to adding the spring force for Manual SRM Pro screen


1. Put the screen on the clean table, pull the material down a little and make it is in the

locked state. As the picture shown below.



2. Remove the screws on the left end cap with a screwdriver, and remove the left end cap,

and move the axis out a little. As the picture shown below.

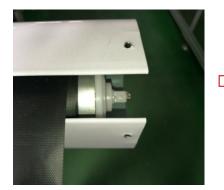



3. Install the left end cap , rotating it in clockwise direction, release the locking, use one hand to hold the axis, remove the end cap to release the spring force. (This step need to be operated twice, to prevent the original spring force didn't remove completely

www.elitescreens.eu shop@elitescreens.eu and affect the effect of re-adding the spring force)






4. Install the left end cap on the plastic part of the spring, rotating it in clockwise direction to add the spring force(rotating 10 laps), rotating it to a jammed point, that is, you feel the spring will not reverse by itself ,then you can release your hand.(when adding the spring force, pay attention to hold the end cap tightly to avoid it turn over and hitting hand)






5. Hold the right end cap with hand, pull up the axis with a rope, then at the other end need another person to pull the axis into the housing ,insert the axis into the right end cap inner slot .

right end cap left end cap

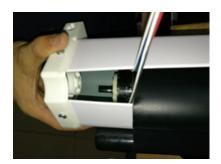






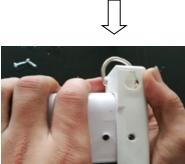





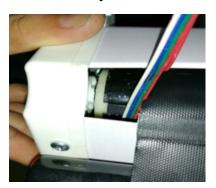

Д



6. Fixed the left end cap with the screws.

