

STINGER


GOLF PRODUCTS

SG-4 OPERATING INSTRUCTIONS & USER MANUAL



PART LIST

- A Ergonomic Handle
- B Handle Tube
- C Scorecard Holder
- D Upper Adjustable Bag Straps
- E Joint
- F Adjustable Handle Mechanism
- G Main Upper Frame Tube
- H Connecting Rods
- I Leg Bracket
- J Leg Frame
- K Leg Frame
- L Weight Stabilizer
- M Sliding Connecting Rods
- N Anti-Splay Wire
- O Umbrella Holder
- P Right Wheel Lock Mechanism
- P1 Left Wheel Lock Mechanism
- Q Umbrella Holder Base
- R Main Lower Frame Tube
- S Front Wheel Assembly
- T Front Fork Assembly
- U Lower Adjustable Bag Straps
- V Rear Wheel
- W Sand Bucket Hook

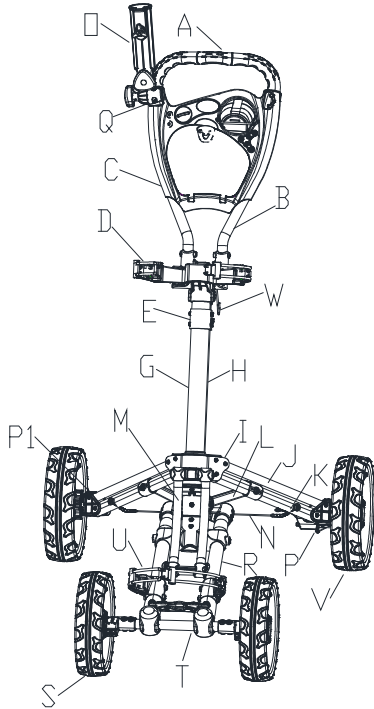


MAINTENANCE

To clean, wipe buggy with a soft, damp cloth. Do not use harsh cleaning chemicals. Lubricate moving parts every 6 months.


WARNING:

For your own safety, please read and understand the following warnings and keep this user guide for future reference.

1. Always make sure the buggy is fully extended and locked before use.
2. Always make sure the buggy is folded and locked properly before lifting or transporting.
3. Do not run while using this product.
4. Do not use accessories other than those designed for use with your carts.
5. Keep all packing materials away from children and recycle where possible or where required by law.

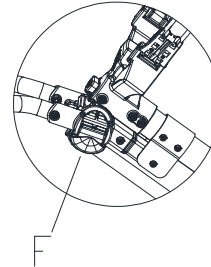

UMBRELLA HOLDER

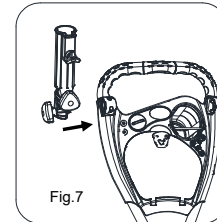

To Install:
Simply attach the umbrella holder onto the buggy as in Fig. 7

ASSEMBLE AND EXTEND THE BUGGY

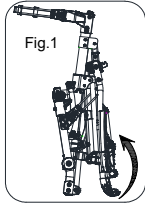


Fig.1

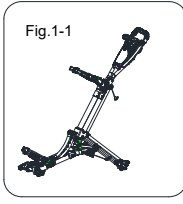


Fig.1-1

Pull the handle up until you hear the buggy 'Click', and the handle is locked as in Fig.1 and Fig. 1-1.

INSTALL WHEELS

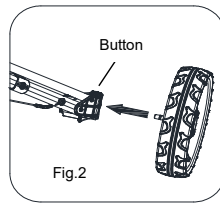


Fig.2

Press the button on the leg frame and insert the wheels as shown in Fig. 2 to install the rear wheels.

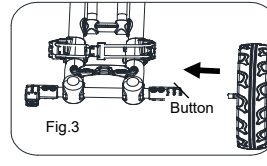


Fig.3

Press the button on the front wheel axle and insert the wheels as shown in Fig. 3 to install the front wheels.

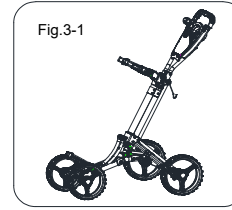


Fig.3-1

The buggy is now assembled completely as in Fig. 3-1.

USE THE FOOT OPERATED BRAKE

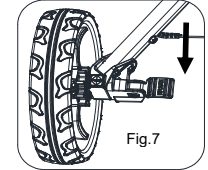


Fig.7

Push on the brake pedal to apply the rear wheel and lift up to release as in Fig.7.

FOLDING THE BUGGY

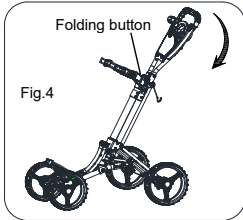


Fig.4

Press the folding button and push the handle downwards as shown in Fig. 4 until the buggy clicks into the holding slot as in Fig. 5.

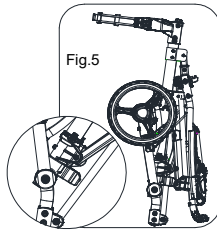


Fig.5

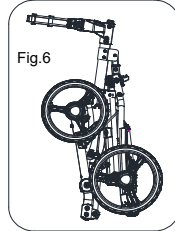


Fig.6

Fig.6 shows the folded position.

FRONT WHEEL ALIGNMENT


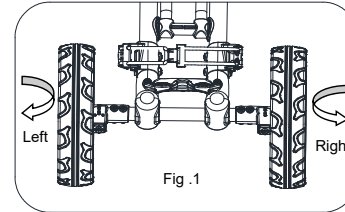


Fig.1

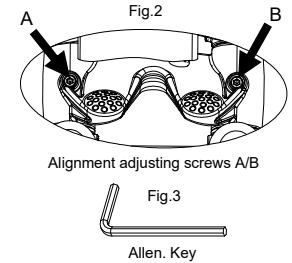

Alignment adjusting screws A/B

Fig.3

Allen Key

If the buggy veers to the left, please use the Allen Key to turn screw A counterclockwise and Screw B clockwise to adjust the alignment.

If the buggy veers to the right, please use the Allen Key to turn screw A clockwise and screw B counterclockwise to adjust the alignment.



EXCEEDING IMAGINATION IN QUALITY & PRICE

www.stingergolf.com.au

info@stingergolf.com.au