

STINGER

GOLF PRODUCTS



 
Operating Instructions & User Manual

www.stingergolf.com.au

info@stingergolf.com.au

PARTS LIST

- A Umbrella holder
- B Umbrella holder base
- C Upper bag bracket
- D Upper frame
- E Sliding block connect rob
- F Leg bracket
- G Cable for swivel front wheel to control
- H1 Leg frame left (Back)
- H2 Leg frame right (Back)
- H3 Leg frame right (Front)
- H4 Leg frame left (Front)
- I Rear wheel
- J1 Left wheel locking mechanism
- J2 Right wheel locking mechanism
- K Lower bag bracket
- L Front wheel set
- M Grip
- N Scorecard holder
- O Adjustable handle mechanism
- P Sand hook
- Q Lower frame
- R Stabilizer connect rob
- S1 Lever for 360 front wheel control
- S2 Lever for rear wheel braking to control
- T Cable for rear wheel to brake
- U Storage bag for accessories
- V Anti-splay wire
- W Adjustable front wheel mechanism
- X Drink holder

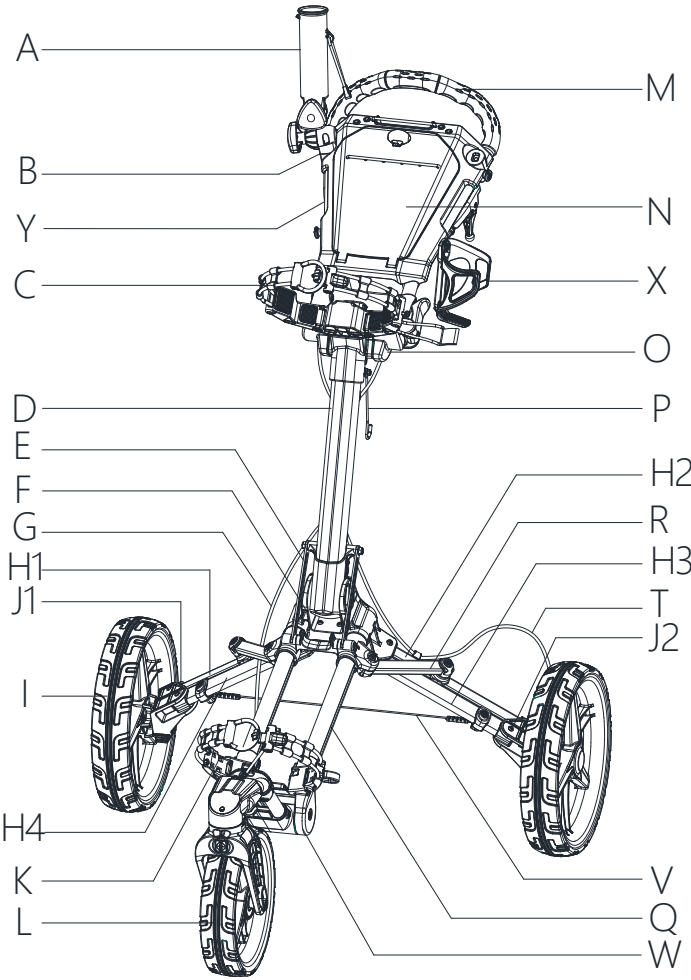

MAINTENANCE

To clean the cart, wipe with a soft, dry cloth. Car polish may be used to maintain finish. Lubricate moving parts every 6 months.

Warning:

 
For your own safety, please read and understand these warnings and keep this user guide for future reference. Always make sure the cart is fully extended and locked before use.

Always make sure the cart is folded and locked properly before lifting or transporting.

Do not run while using this product.

Do not use accessories other than those designed for use with this cart.

Keep all packing materials away from children and recycle where possible or where required by law.

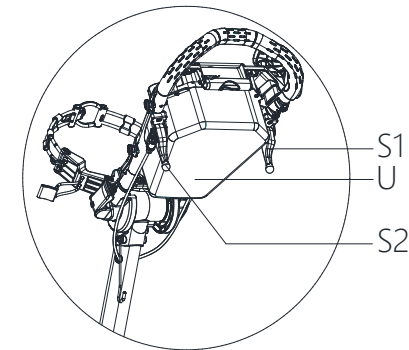

SETTING UP THE BUGGY

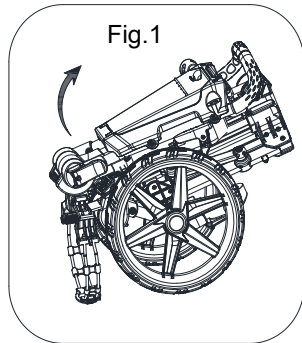 


Fig.1

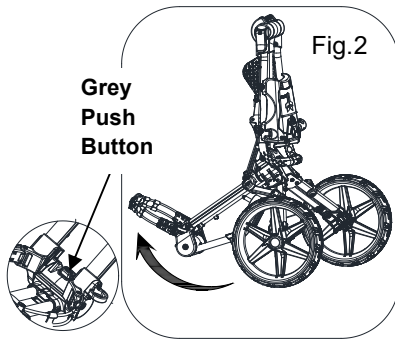 


Fig.2

Grey Push Button

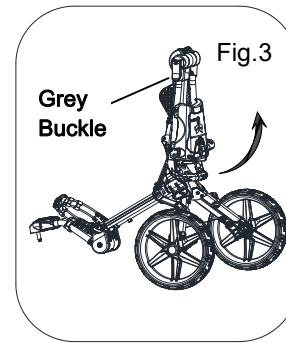 


Fig.3

Grey Buckle

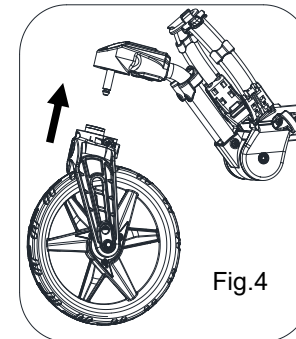 


Fig.4

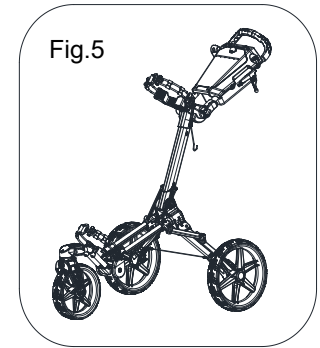 


Fig.5

Lift up the adjustable handle mechanism and extend the buggy all the way as per Fig. 1. Then with one hand, tilt the buggy backwards and push the grey button to rotate the front fork (where the front wheel will soon be - refer Fig. 4.) clockwise as Fig. 2.

Unlock the grey buckle, and lift up the handle to adjust to the desired position, then re-lock the grey buckle. The buggy is now fully extended as shown in Fig. 3. Insert the front wheel onto the front fork as shown in Fig.4.

The buggy is now assembled as per Fig.5.

FOLDING DOWN THE BUGGY

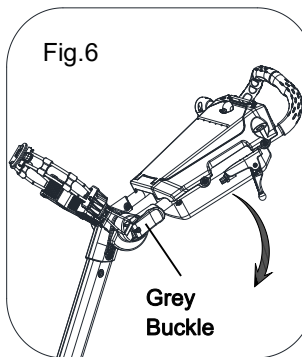 


Fig.6

Grey Buckle

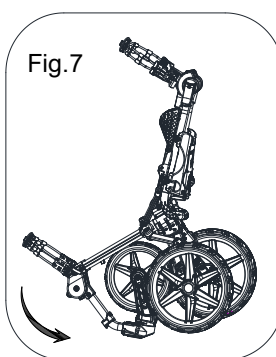 


Fig.7

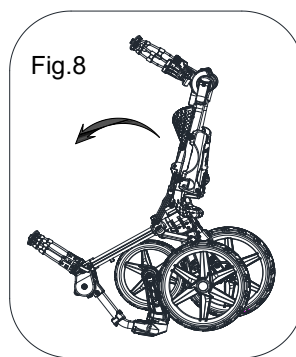 


Fig.8

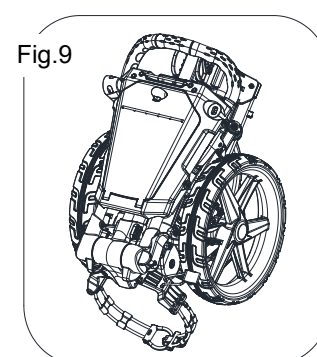 


Fig.9

Unlock the Grey Buckle and fold down the handle until the handle is touching the lower main frame. Then re-lock the Grey Buckle. With one hand, tilt the buggy backwards and press the Grey Push button to fold in the front wheel until you hear the 'lock' as shown in Fig. 7 & 8.

With one hand on the front fork and the other on the bag support, fold the buggy inwards to form a cube as shown in Fig. 8.

The buggy has been folded successfully as shown in Fig. 9.

USING THE 360 SWIVEL SYSTEM & HAND BRAKE

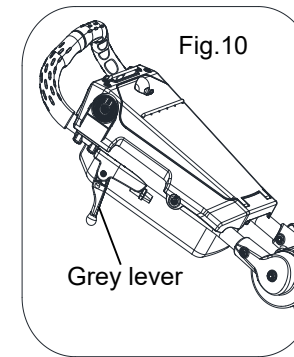 


Fig.10

Grey lever

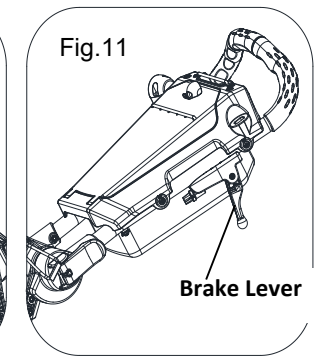 


Fig.11

Brake Lever

To activate the 360 Swivel Wheel, push the grey lever down. To put the 360 wheel into fixed wheel mode, pull the grey lever up as per Fig. 10.

To activate the brake, push the grey hand brake lever down. To disengage the brake, pull the grey lever up as per Fig. 11.

UMBRELLA HOLDER

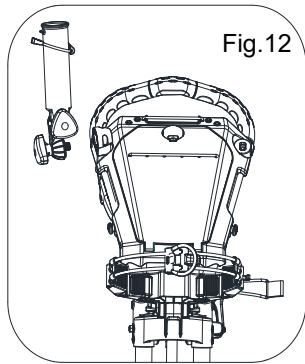 


Fig.12

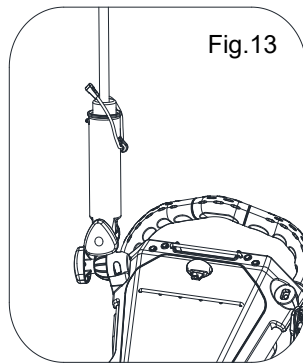 


Fig.13

1. Simply attach the umbrella holder onto the buggy. The two large triangle bolts can be used to adjust the angle of the umbrella holder as Fig. 1 2.

2. The elastic rope on the umbrella holder can be used to secure the umbrella as Fig. 13.

USING THE UMBRELLA HOLSTER

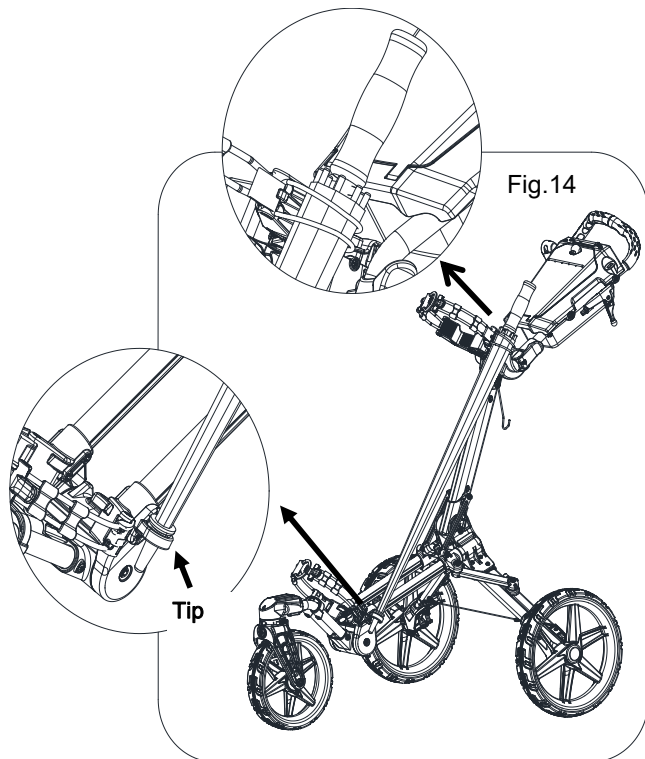 


Fig.14

Pass the umbrella through the elasticised loop until the spike on the end of the umbrella fits snugly into the tip holder as per Fig.14.

BAG HOLDER STRAP LENGTH ADJUSTMENT

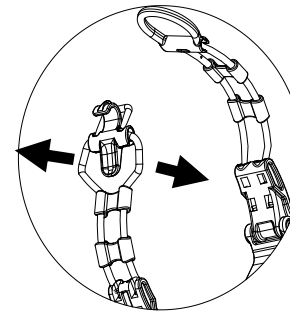 


Fig.15

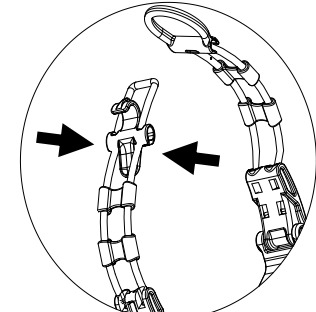 


Fig.15-1

Refer to Fig.15& Fig.15-1.

1. Pull the elastic strap out of the strap buckle as in Fig. 15.
2. Adjust the strap to the desired length.
3. Push the elastic strap back to the strap buckle as in Fig. 15-1.

INSTALL THE DRINK HOLDER

Fig .16


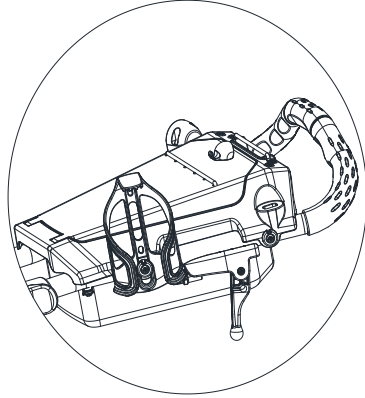 


Fig .17

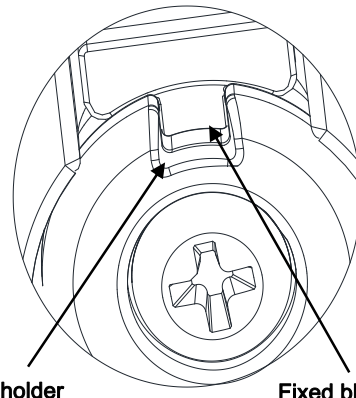 

Slot on holder

Fixed block on base notch

Fig .18


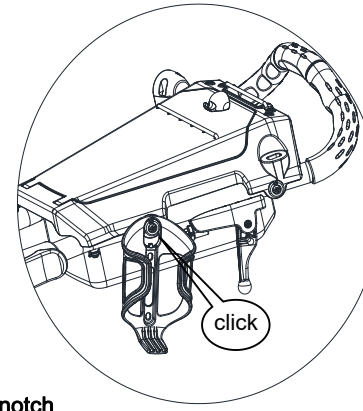 


Fig .19

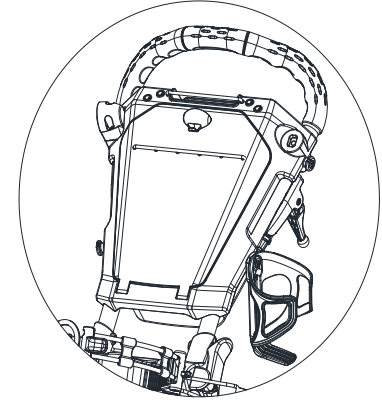 

When installing the drink holder as in Fig. 16, align the smallest part of the slot on the holder with the fixed blocks as Fig. 17. Then pull horizontally to fit the holder on the base as shown in Fig. 18 and 19.

FRONT WHEEL ADJUSTABLE SYSTEM

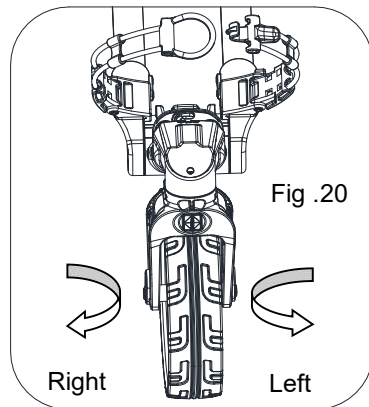 


Fig .20

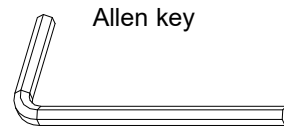 


Fig.21

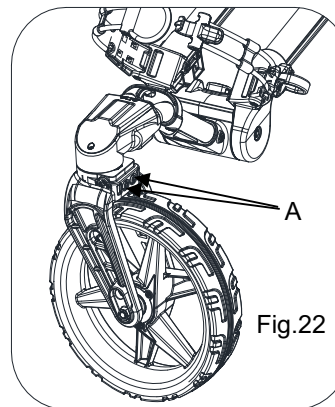 


Fig.22

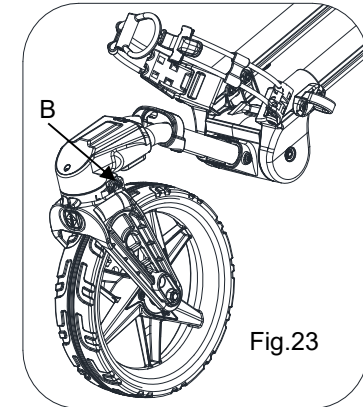 


Fig.23

FRONT WHEEL ADJUSTABLE SYSTEM:

If the buggy veers to the RIGHT: use the Allen key (as shown in Fig. 21) to loosen the 2 screws (A) on the backside of the front wheel frame, as shown in Fig. 22. Then adjust the front wheel to center position by turning the screw (B) counterclockwise, as in Fig. 23. Tighten the 2 screws (A) after the front wheel alignment is done.

If the buggy veers to the LEFT: use the Allen key (as shown in Fig. 21) to loosen the 2 screws (A) on the backside of the front wheel frame, as shown in Fig. 22. Then adjust the front wheel to center position by turning the screw (B) clockwise, as in Fig. 23. Tighten the 2 screws (A) after the front wheel alignment is done.

STINGER

GOLF PRODUCTS

www.stingergolf.com.au

info@stingergolf.com.au