 


# EP1

## Sleep Sound Machine

### User Manual

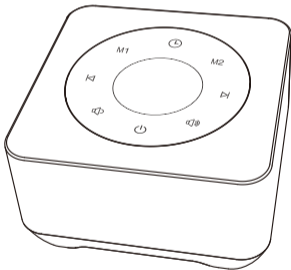 


Thank you for purchasing our product. This manual addresses the safety guidelines, warranty and operating instructions. Please review this manual thoroughly before operating your device.


## Contents

|  |   |
|--|---|
| <b>Package Contents</b> .....              | 1 |
| <b>At a Glance</b> .....                   | 2 |
| <b>Powering On / Off</b> .....             | 3 |
| <b>Setting and Using the Machine</b> ..... | 4 |
| Choose Your Sound .....                    | 4 |
| Volume Control .....                       | 5 |
| Set Auto-Off Timer .....                   | 5 |
| Set Custom Mode .....                      | 5 |
| <b>Restoring Factory Defaults</b> .....    | 6 |
| <b>Specifications</b> .....                | 6 |
| <b>SAFETY AND WARRANTY</b> .....           | 7 |


## Package Contents

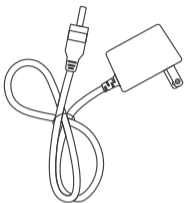

● Power Adapter × 1

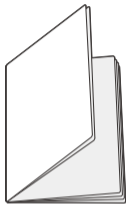 


● User Manual × 1

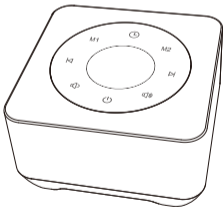 


● Sleep Sound Machine × 1


## At a Glance

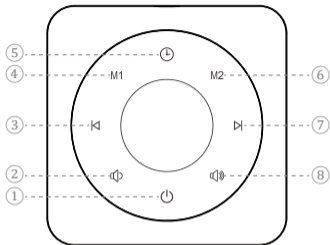 

Top view

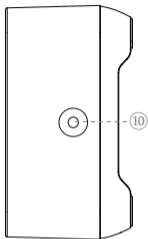 

Back view

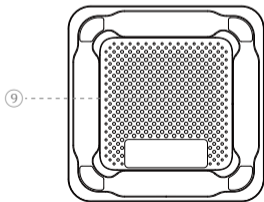 


Bottom view


- ① Power Switch
- ② Decrease Volume
- ③ Previous Track
- ④ Custom Mode 1
- ⑤ Timer
- ⑥ Custom Mode 2
- ⑦ Next Track
- ⑧ Increase Volume
- ⑨ Speaker
- ⑩ Power Jack

## Powering On / Off

 - 1) Connect the machine to a power source using the power adapter provided.

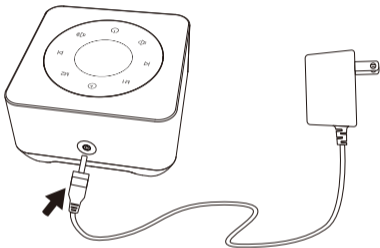

 - 2) Tap the "⏻" button to turn on / off the machine.

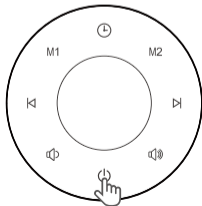

## Setting and Using the Machine

### Choose Your Sound

Tap the "⏪" or "⏩" button to choose the sound you wish to listen to. The machine provides 20 soothing sounds:

- *White noise sound*

- |                        |                     |
|------------------------|---------------------|
| 1) White Noise         | 4) Brown Noise      |
| 2) Pink Noise          | 5) Baby Brown Noise |
| 3) Smoothed Pink Noise |                     |

- *Fan sound*

- |                       |                  |
|-----------------------|------------------|
| 6) Sleeping Fan Noise | 9) Clothes Dryer |
| 7) Desk Fan Noise     | 10) Hair Dryer   |
| 8) Laundry            |                  |

- *Natural sound & lullaby*

- |                          |                                 |
|--------------------------|---------------------------------|
| 11) Flame                | 16) Thunder Rain                |
| 12) Train Voice          | 17) Sea Waves                   |
| 13) Nothing But Crickets | 18) Twinkle Twinkle Little Star |
| 14) Forest               | 19) Hush Little Baby            |
| 15) Spring Water         | 20) Rock-A-Bye Baby             |

## **Volume Control**

Tap the "🔊" / "🔇" button to increase / decrease the volume by one level. Or hold the "🔊" / "🔇" button to increase / decrease the volume continuously.

## **Set Auto-Off Timer**

When the music is playing, tap the "⌚" button to set the timer for 15/30/60/90/120mins or turn it off. You can also tap and hold the "⌚" button to turn off the timer directly.

### **Note:**

Turn off the timer if you wish to listen to the sounds continuously.

## **Set Custom Mode**

Tap and hold the "M1" / "M2" button to save the current music and volume. Tap the "M1" / "M2" button to play the last saved music.

## Restoring Factory Defaults

Tap and hold the "⏻" button for about 5 seconds until you hear a voice prompt "Factory Recovery" and the machine will turn off.

## Specifications

Model: EP1

Speaker Power: 3W

Adapter Input: 100-240V~50/60Hz

Adapter Output: 5V=1A

Working Temperature: -10°C to 50°C

Working Humidity: 20% to 90%; non-condensing

Dimension: 90 x 90 x 50mm



## **SAFETY AND WARRANTY**

### **Important Safety Instructions**

- This machine is designed for indoor use only. Do not use it outdoors.
- Clean the machine regularly with a soft, dry cloth. Do not use any liquids or sprays (including solvents, chemicals or alcohol) or abrasives to clean.
- The machine should not be used near water, such as a bathtub, swimming pool, faucet or basin, which may cause risks.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Avoid placing the machine in areas that are exposed to direct sunlight or close to heat-radiating products such as electric heaters. Do not place it on top of the stereo equipment that radiates heat.
- Avoid placing the machine in areas that are dusty, humid, moist, lack ventilation, or are subject to constant vibration.
- The machine may be subject to interference from external sources such as transformers, electric motors or other electronic devices. To avoid distortion from such sources, place it as far away from them as possible.

- Do not apply excessive force when using any of the control buttons.
- Power cords should be routed to avoid being walked on or pinched by items placed on or against them.
- Disconnect power supply of the machine when it is unused for an extended period of time or when moving the machine.
- Use this machine only for its intended use as described in this manual.
- Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
- Never operate this machine if it has a damaged cord, cable or housing.

## **Warranty**

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty to all our devices as we continue to make amazing products. Please contact us if you have any questions about our devices.