 


T3

Sleep Sound Machine

User Manual

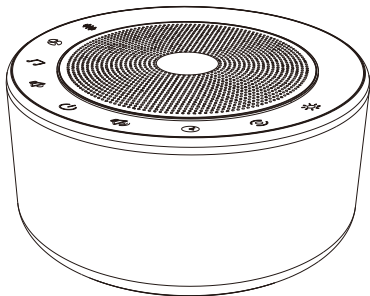 


Thank you for purchasing our product. This manual addresses the safety guidelines, warranty and operating instructions. Please review this manual thoroughly before operating your device.

Package Contents

- Sleep Sound Machine × 1
- Power Adapter × 1
- User Manual × 1

At a Glance

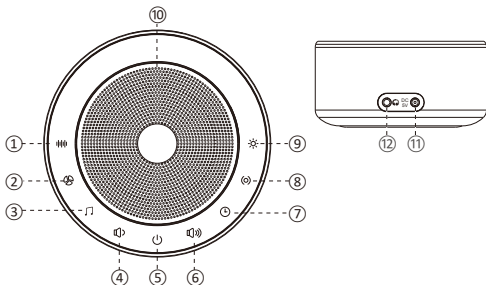

- ① White noise sound
- ② Fan sound
- ③ Natural sound & lullaby
- ④ Volume -
- ⑤ Power switch
- ⑥ Volume +

 
- ⑦ Timer
- ⑧ Sound effect
- ⑨ Night light
- ⑩ Speaker
- ⑪ Power jack
- ⑫ 3.5mm audio port

Getting Started

Power On / Off

Note:

The machine does not have a built-in battery. Please connect the machine to a power source using the power adapter provided before use.

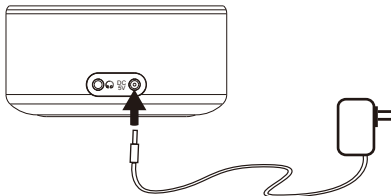

Tap the "⏻" button to turn on / off the machine and it will not affect the use of night light and ambient light.


Choose Your Sound

● *White noise sound*

Tap the "🔊" button to choose a white noise sound you wish to listen. The machine provides 8 white noise sounds:


- | | |
|-----------------------------|-------------------------|
| 1) TV white noise | 5) Pink noise |
| 2) Radio white noise | 6) Ambient pink noise |
| 3) Original mix white noise | 7) Brown noise |
| 4) Torrential pink noise | 8) Soothing brown noise |

● *Fan sound*

Tap the "" button to choose a fan sound you wish to listen. The machine provides 8 fan sounds:

- | | |
|-------------------|------------------|
| 1) Humidifier fan | 5) Machine fan |
| 2) Home fan | 6) Healing fan |
| 3) Electric fan | 7) Big fan |
| 4) Cement fan | 8) Clothes dryer |

● *Natural sound & lullaby*

Tap the "" button to choose a natural sound or a lullaby you wish to listen. The machine provides 10 natural sounds and 4 lullabies:

- | | |
|----------------------------|---------------------------------|
| 1) Water stream | 8) Campfire |
| 2) Thunder rain | 9) Choo choo |
| 3) Ocean wave | 10) Strong breeze |
| 4) Seagulls and ocean wave | 11) Twinkle twinkle little star |
| 5) Cricket | 12) Hush little baby |
| 6) Forest bird song | 13) Rock-a-bye baby |
| 7) Brook bird | 14) Brahms' lullaby |

Volume Control

Tap the "🔊" button once to increase the volume by one level. Tap and hold the "🔊" button to increase the volume continuously.

Tap the "🔇" button once to decrease the volume by one level. Tap and hold the "🔇" button to decrease the volume continuously.

Auto-Off Timer Set

When the machine is on, tap the "⌚" button to set the timer for 15/30/60/90/120mins or turn it off. You can also tap and hold the "⌚" button to turn off the timer directly.

Note:

Turn off the timer if you wish to listen to the sounds continuously.

Night Light

Tap the metal speaker grill to turn on / off the night light. When the night light is on, you can tap and hold the "☀️" button to adjust the brightness.

Colorful Ambient Light


Tap the "☀️" button to choose an ambient light (6 colors: red, yellow, blue, pink, aqua, and purple, and a color-changing mode). Tap and hold the "☀️" button to adjust the brightness. Tap the metal speaker grill to turn off the ambient light.

EQ Set

Tap the "(o)" button to choose a sound effect (4 sound effects for you to choose: pop, rock, jazz, and classical). Tap and hold the "(o)" button to turn off the sound effect function and you will hear a tone.

Use T3 with Your Headphones

You can play the sounds with your headphones. Plug the 3.5mm audio connector of your headphones into the audio port of the machine.

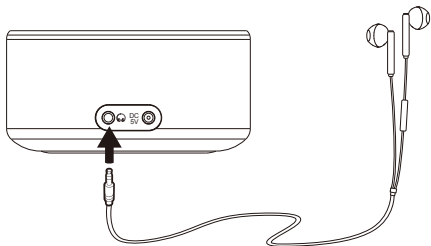

Restore Factory Defaults

Tap and hold the "⏻" button for about 5 seconds until you hear a voice prompt "Factory Recovery" and the machine will be turned off.

Specifications

- Model: T3
- Audio Output: 3W
- Working Voltage: DC 5V / 1A
- Output Connector: 3.5mm audio connector
- Working Temperature: -10°C to 50°C
- Working Humidity: 20% to 90%; non-condensing
- Dimension: 101 x 101 x 51mm

SAFETY AND WARRANTY

Important Safety Instructions

- This machine is designed for indoor use only. Do not use it outdoors.
- Clean the machine regularly with a soft, dry cloth. Do not use any liquids, sprays (including solvents, chemicals, alcohol) or abrasives to clean.
- The machine should not be used near water, such as a bathtub, swimming pool, faucet or basin, which may cause risks.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Avoid placing the machine in areas that are exposed to direct sunlight or close to heat-radiating products such as electric heaters. Do not place the device on top of the stereo equipment that may emit heat.
- Avoid placing the machine in areas that are dusty, humid, moist, lack ventilation, or are subject to constant vibration.
- The machine may be subject to interference from external sources such as transformers, electric motors or other electronic devices. To avoid distortion from such sources, please make sure you place the device as far away from these disturbances as possible.

- Do not apply excessive force when using any of the control buttons.
- Power cords should be routed to avoid being walked on or pinched by items placed on or against them.
- Disconnect power supply of the machine when it is unused for an extended period of time or when moving the machine.
- Use this machine only for its intended use as described in this manual.
- Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
- Never operate this machine if it has a damaged cord, cable or housing.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of defect.

We are happy to offer a one-year hassle-free warranty to all our products as we continue to support our customers and make amazing products. Please contact us if you have any questions about our devices.