ENGLISH

Operation & Installation Guide



Steel Fire & Security Safe

Model 2412, 2431, 2432 & 2434
Read this manual carefully and never store it inside the safe!

INDEX

Welcome / Package Contents / Safe Overview	Page 1
2 Hour Fire Protection / Moving Your Safe / Placement of Your Safe / Loading Your Safe	Page 2
Setup & Operation	Page 3
How to Operate the Anti-Burglary Alarm / How to Change Alarm Batteries	Page 4
To Change The Combination Number	Page 5
Adjustable / Removable Shelves / Locking Drawer	Page 6
Lost Combinations / Replacement Keys / Locating Safe Identification Numbers	Page 7
Consumer Assistance	Page 8
Warranty Information	Back Cover

For Your Protection

- Do not Remove the Serial Number tag from the safe.
- Save this manual and NEVER keep it inside the safe.

WELCOME

Your Honeywell Steel Security Safe will provide years of safe and secure protection for your valuables, important documents and other personal items. All Honeywell safes are designed and built using the highest manufacturing standards to ensure maximum user satisfaction under a variety of conditions. With proper care, your Honeywell safe will provide "Peace of Mind" for many years to come.

Thank you and enjoy!

PACKAGE CONTENTS

Please carefully check the list to confirm all items have been received. If any item is missing, please contact Consumer Assistance (See Page 5 for contact information.)

- 1 Steel Fire & Security Safe
- 1 Operation and Installation Guide
- 2 Entry Keys
- 1 Silica Gel Pack

SAFE OVERVIEW



- A Door Handle
- B Entry key hole
- C Combination dial
- D Door Hinges
- E Safe body
- F Steel Casters
- G Safe Door
- H Serial Number Label

ATTENTION: DO NOT RETURN SAFE TO STORE

If you are missing parts or have difficulty operating your safe, please contact our Consumer Assistance department by telephone. Store will not accept returned products without prior authorization. You must first contact our Consumer Assistance department. (See page 5 for contact information)

2 HOUR FIRE PROTECTION

This Steel Fire Safe protects records and many other valuables. Testing shows that the interior temperature of the safe remains below 350°F (177°C) for 2 hours during a fire up to 1850°F (1010°C) when used properly. Your safe must be closed and locked in order to properly protect the contents from fire.

Warning: This Fire Safe is not intended for the storage of medications, firearms, ammunition, or combustible items of any kind. You should not store pearls in this Fire Safe because they may sustain damage at temperatures below 350°F.

MOVING YOUR SAFE

Before moving your safe, verify the load bearing weight of the floors and stairs, and types of flooring the safe will be moved over (tile, wood, and other flooring can be damaged by the weight of the safe). To determine whether or not your safe will make it through doorways, stairs or corners take the empty safe box and see if it will fit all the way through to its final location.

PLACEMENT OF YOUR SAFE

Locate your safe near a load-bearing wall to support the weight of the safe. To help protect the exterior finish of your safe, install inside in a dry location where there is climate control (heat in the winter and cooling in the summer).

This safe has been designed to withstand a certain amount of heat during a fire. Fire safes perform better in lower levels of a home (like the basement) where fire temperatures are lower. Additionally, placement of your safe away from potential hot spots (areas where flammable materials are stored) will improve your chances that your safe will perform better in a fire. No safe is completely fireproof. If the fire reaches a high enough temperature for long periods, fire damage will occur.

LOADING YOUR SAFE

Store documents in the bottom of the safe for greatest protection against fire damage. Do not put anything in your safe that will put pressure against the door when it is closed. If you live in a humid environment, it is recommended that you use a dehumidifier or desiccant to protect the contents from rust or mildew.


SETUP & OPERATION

STEP 1: OPEN SAFE USING COMBINATION

- 1. Insert the entry key into the cylindrical lock.
- 2. Starting with the combination dial positioned on "0" at the center index mark, turn the dial to the left passing "0" three times and stopping on the first number.
- Turn the dial to the right passing the first number two times and stopping on the second number.
- Turn the dial to the left passing the second number once and stopping on the third number.
- 5. Turn the dial right stopping at the fourth number.

6. Turn the key clockwise to the right, then turn handle clockwise upwards to open safe.

TO LOCK SAFE: Close door and turn key counterclockwise (left). Turn the dial to right at least 4 times to secure lock.

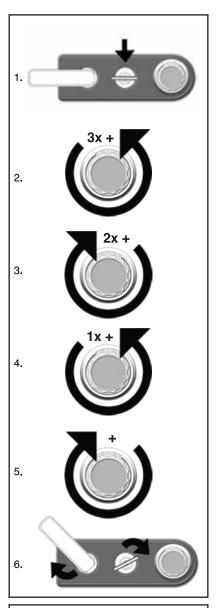




HOW TO OPERATE THE ANTI BURGLARY ALARM

- 1. Open the safe door
- Switch on the alarm switch (D) at the back of the door, and the red LED (C)will light up for a few seconds.
- 3. The alarm is armed when the safe door is closed and the key is locked.
- 4. Alarm bell (E) will sound when the handle is lifted up or when there is impact on the door.
- 5. To stop the alarm, insert the door key (in front) and turn clockwise to the right.
- Replace the alarm batteries (B) if the red LED no longer lights up when the alarm switch is turned on or when the alarm sound is weak.
- A Alarm Bell
- B Alarm LED
- C Alarm Switch
- D Combination Change Tool Hole
- E Handle Stopper Bar
- F Battery Cover

(Inside Safe Door)

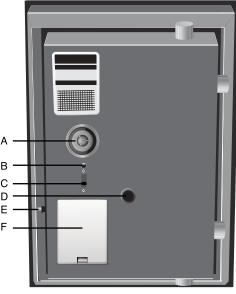

(Fig. 1)

HOW TO CHANGE ALARM BATTERIES

- 1. Unlock & open the safe.
- Remove battery compartment (Fig. 2) cover located on interior door panel.
- Insert four "AA" batteries (included). Ensure the batteries are installed in the correct direction, with regard to polarity (+ and -) See Fig.2.
- 4. Replace the battery cover.





(Fig. 2)


TO CHANGE THE COMBINATION NUMBER

IMPORTANT! Write down the new combination and store it in a secure place. If the new combination is lost, there is no way to unlock and open the safe without permanently damaging the lock and the safe. Note: Changing the combination voids the warranty.

- Determine your new combination and write it down. New combination must be (4) groups of numbers and offers better security if interval of each number is 15 or more. (Example: 08-28-58-75).
- Using the current combination, open the safe and locate change keyhole on inside of safe door. (Fig. 1)
- 3. While combination dial is in the unlocked position, insert the change key into the small change keyhole at the back of the lock through the hole at the back of the door. (Fig. 2) as illustrated. IMPORTANT: Do not rotate dial after combination is entered.
- 4. Make sure the change key is fully inserted into the change keyhole at the back of the lock (Fig. 3) and rotate 90° counter clockwise to the left. (Fig. 4) If the change key does not go in easily, you will need to redial the current combination before proceeding.
- With the safe door open, enter the new four number combination written down earlier. Use the same procedure as opening safe (Page 3)
- 6. Once entered, carefully hold the combination dial with one hand to prevent movement and rotate the change key 90° to the right and carefully pull out to remove.
- 7. Test the new combination. With the door open, push the "handle stopper bar" (Fig. 5) at the left side of the door to allow the handle to drop to closed positions. Rotate the dial several times to lock and enter the new combination to unlock. ALWAYS perform this test with the safe door open. Test several times before closing the door.


Note: If experiencing any problems while changing the code, contact Customer Service to assist you.


Do not open the back cover of the combination lock, as it will void the warranty of the lock.

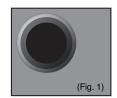





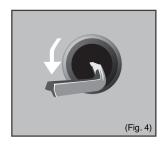

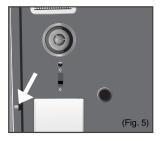

ADJUSTABLE / REMOVABLE SHELVES

To remove or reposition shelves:

- 1. Remove shelves and shelf support clips from current position.
- Determine the desired location of your shelf and note the corresponding support guide slots on the vertical standards that are best suited to support the shelf in that location.
- 3. Insert (1) support clip into each of the vertical standards. The top of the support clip should be placed into the selected slot first and then the bottom of clip will lock in place when pushed down.

IMPORTANT: Make sure all (4) clips are installed at the same height on the vertical standards so that the shelf is level.

4. Install the shelf into position by placing inside the safe (tilting if necessary) and lowering into position on the support clips.

LOCKING DRAWER

To open:

Insert supplied key and turn fully to the right and pull drawer open.

To close:

Push door to closed position, turn key fully to the left until it stops. The door is now in the locked position. Remove key and store in a safe place away from the safe.

Note: If drawer replacement keys are needed please refer to page 7 of this manual. You will need the key number which is a 4 digit number etched on the metal collar located around the key hole.

LOST COMBINATIONS / REPLACEMENT KEYS

The following information is required to obtain a Key:

1. PROOF OF OWNERSHIP (1 of 2 Options Below)

SALES RECEIPT & IDENTIFICATION - INTERNATIONAL ORDERS ONLY!

- Copy of sales receipt showing Store, Date & Product Description.
- · Copy of your picture I.D. (Drivers license, passport, regular I.D.).

PRODUCT OWNERSHIP VERIFICATION FORM

If sales receipt is not available, contact us by email or telephone to request a "Product Ownership Verification Form".

2. CONTACT & PRODUCT INFORMATION

CONTACT INFORMATION

- · Name & Mailing Address
- E-mail address (If Available)
- Telephone Number
- · Best Time to Contact You

PRODUCT INFORMATION

- · Safe Model #
- Safe Serial #

3 METHOD OF PAYMENT

· Telephone:

Visa or MasterCard

· Mail:

Check or Money Order

NOTE: For pricing please contact Consumer Assistance. Contact information is located on the back cover of this manual

Terms subject to change without prior notification.

LOCATING SAFE IDENTIFICATION NUMBERS

SERIAL NUMBER

Located on lower right corner on front of safe. Do Not Remove Safe I.D. Tags!



KEY NUMBER

4 Digit Number etched on the metal collar located around the key hole.



CONSUMER ASSISTANCE

EMAIL: support@taruna-jaya.com

WEBSITE: www.taruna-jaya.com

ADDRESS: Consumer Assistance Dept.

LH Licensed Products, Inc 860 East Sandhill Avenue. Carson, CA 90746 USA

TELEPHONE: Indonesia 62-21-6410845, 64701938 (Toll Charge Apply)

US/Canada 1-877-354-5457 (Toll Free)

Mexico 01-800-288-2872 After English voice recording stops you must then enter 800-860-1677 to complete your call.(Toll Free)

Austrailia 0011-800-5325-7000 (Toll Free)

Germany/New Zealand 00-800-5325-7000 (Toll Free)
Other Countries XX*-310-323-5722 (Toll Charge Apply)

XX*- Dial U.S. Country Code first

CALL CENTER HOURS: US/Canada 7am - 5pm (PST**) Mon - Fri
CALL BACK HOURS: Other Countries 7am -8pm (PST**) Mon - Fri

PST**- Local time in Los Angeles, CA, USA

INTERNATIONAL CALL BACK HOURS:

If you need to speak with a consumer assistant and cannot contact us during the call center hours above, please send an email or leave a telephone message, including your name, telephone number and the best time for us to contact you during the call back hours above and we will make our best effort to contact you and help to answer any of your questions or concerns.

^{*} Insert correct Country Code

^{**}Local Time based on Los Angles, California USA

LIMITED WARRANTY

LH Licensed Products, Inc., ("LHLP, Inc.") warrants that for a period of seven (7) years from the date of purchase, this product will be free from structural or mechanical defects resulting from materials or workmanship. LHLP, Inc., sole option and as the purchaser's sole remedy under this warranty, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement or repair will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value.

THIS IS YOUR EXCLUSIVE WARRANTY.

Our goods come with guarantees that cannot be excluded under the Indonesia Consumer Law. You are entitled to a replacement or refund for major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. You must keep the original sales receipt. Proof of purchase is required to obtain warranty service. This warranty is void if the original factory preset combination has been changed.

LHLP, Inc. dealers, service centers, or retail stores selling this product do not have the right to alter modify or in anyway change the terms and conditions of this warranty.

This warranty does not apply to the finish on the product. This warranty does not cover normal wear and tear of parts or damage resulting from any of the following: negligent use or misuse of the product, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than LHLP, Inc. Or an authorized service center, improper installation, or exposure to extremes of heat or humidity. Further, the warranty does not cover Acts of God, such as fire, flood, earthquakes, hurricanes and tornadoes.

LHLP, Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty or otherwise relating to the sale of this product. LHLP, Inc. is also not responsible for : costs associated with removing or installing the product; damage or loss of the contents of the product; nor for the unauthorized removal of the contents; or damages incurred during shipment.

THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE, AND LHLP, INC. DISCLAIMS ANY AND ALL OTHER COVENANTS AND WARRANTIES.

Except to the extent prohibited by applicable law, and implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty period. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty, lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, or province to province, or jurisdiction to jurisdiction.

LIFETIME AFTER-FIRE REPLACEMENT GUARANTEE

If this Honeywell fire resistant product was purchased from LH Licensed Products, Inc. ("LHLP") and is damaged by fire at any time while still owned by you (the original owner), LHLP will ship a free replacement if you send the following to Customer Service, LH Licensed Products, Inc., 860 E. Sandhill Ave., Carson, CA 90746 USA:

- 1. Your name, mailing address, email address, and phone number with area code;
- 2. A description of the fire, the model number and a photo of the burned unit, and a copy of the report from the fire department, insurance or police.

Freight on the replacement unit is not included in the guarantee and must be paid by the consumer. If an identical product is no longer available, LHLP will provide a similar unit from its current product line. LHLP is not responsible for any loss or damage to the contents of the safe.



Manufactured by LH Licensed Products, Inc. 860 East Sandhill Avenue Carson, CA 90746

The Honeywell Trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product.