


User Guide

## 12-Sheet Micro-Cut Paper Shredder

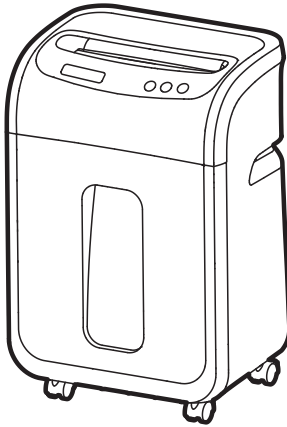

---

Model 9342/9342DS


---

### Package Includes:

- 1 - Shredder
- 1 - Removable Waste Bin
- 1 - User Guide



1 Shredder

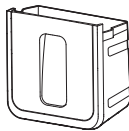

1 Removable  
Waste Bin



1 User Guide

Please carefully check the above list to confirm all items have been received. If any items are missing, please contact Consumer Assistance. (See page 5 for contact information).

**Read and save this user guide for future reference.**

## DO NOT RETURN SHREDDER TO STORE

If you are missing parts or have difficulty operating your paper shredder, please contact our Consumer Assistance Department by telephone. Store will not accept returned products without prior authorization. You must first contact our Consumer Assistance Department (See page 5 for contact information).

### INDEX

PRODUCT OVERVIEW.....	PAGE 1
3 FUNCTION CONTROLS .....	PAGE 1
LED INDICATORS .....	PAGE 1
PRODUCT SPECIFICATIONS.....	PAGE 1
IMPORTANT SAFETY GUIDELINES .....	PAGE 2
OPERATION .....	PAGE 2
EMPTY WASTE BIN.....	PAGE 2
CLEARING PAPER JAMS .....	PAGE 2
OVERHEAT PROTECTION .....	PAGE 2
TROUBLESHOOTING TIPS.....	PAGE 3
MARKING AND INSTRUCTIONS.....	PAGE 3
LIMITED WARRANTY .....	PAGE 4
CONSUMER ASSISTANCE .....	PAGE 5

## PRODUCT OVERVIEW



- A - LED Indicators
- B - 3 Function Control Buttons
- C - Paper Feed Opening
- D - Power Switch (back of unit)
- E - Handle
- F - Removable Waste Bin
- G - Window
- H - Castor Wheels (with locks)

## 3 FUNCTION CONTROL BUTTONS



FWD (>) - Activates shredder and begins shredding

ON/OFF (⏻) - Turns on/off standby mode, shredding starts when paper sheets are inserted into the feed opening.

REV (<) - Shredder will rotate in opposite direction, forcing paper to exit blades.

## LED INDICATORS



Waste Bin is Open



Power



Waste Bin is Full



Paper Jam



Overheated Motor

## PRODUCT SPECIFICATIONS

Model #: 9342/9342DS	Weight: 19.36 lbs. / 8.8 kg.
Capacity: 12 Sheets of Paper (at once), 1 Credit Card	Power Input: 120v ~ 60Hz
Shred Type: Paper/Card - Micro Cut	Motor Power: 320W
Avg. Shred Size: 0.16 in. x 0.47 in. / 4 mm x 12 mm	Bin Capacity: 5.3 gal. / 20L
Feed Opening: 8.7 in. / 220 mm	Noise Level: ≤68dB Load
Height: 20.6 in. / 523 mm	Max. Run Time: 10 min. on / 60 min. off
Width: 13.6 in. / 345 mm	Speed: 5.85 ft. per min.
Depth: 9.4 in. / 239 mm	Can Shred: Paper, Credit Cards, Staples, Small Clips

## IMPORTANT SAFETY GUIDELINES

- Do not exceed maximum recommended number of sheets when feeding paper into shredder.
- Always unplug the shredder before cleaning the waste bin.
- Unplug the shredder if not in use for extended periods of time.
- Keep ties, jewelry, hair, etc. away from the shredder feed opening to ensure personal safety.
- Avoid touching the feed opening with hands.
- Keep aerosol products away from shredder as these can damage motor.
- Do not place near heat sources or in humid environment for extended periods of time.
- Place shredder far away from areas frequented by children and pets.
- Product is not intended for use by children (product is not a toy).
- Shredder will perform better if staples and clips are removed from paper before shredding. Over time, shredding of staples and clips will reduce the life of the shredder blades.

## OPERATION

Read and follow all safety instructions before using the shredder.

1. Make sure that the waste bin is fully inserted.
2. Insert the power cord into electrical outlet.
3. Locate the Power Switch on the back of the unit and switch to the On (I) position.
4. Press the On/Off (⏻) button on top of the shredder, putting shredder in standby mode.
5. Insert paper or credit card into feed opening and shredder will begin shredding.
6. Once paper or credit card has cleared the head, shredder will return to standby mode.

Your shredder is equipped with four castor wheels that allow you to easily move the shredder around your home or office. You can lock the wheels in place by pressing down on the lock tabs built into each wheel. When you are ready to move the shredder, simply lift the lock tabs to unlock the wheels.

## EMPTY WASTE BIN

1. Remove the waste bin by sliding the bin out of the shredder.
2. Empty the waste bin.
3. Return the waste bin by sliding it back into the shredder.

## CLEARING PAPER JAMS

1. Push the REV (<) button.
2. Shredder will rotate in opposite direction expelling any jammed paper out top of shredder head.
3. Once the paper has been cleared, press the FWD (>) button to continue shredding.
4. Reduce the number of sheets to be shredded at one time.

## OVERHEAT PROTECTION

1. Frequent or continuous use may cause motor to exceed normal operating temperature.
2. After approximately 10 minutes of continuous operation, the overheat protection feature causes motor to shut off.
3. Unplug the shredder power cord from the electrical outlet and allow shredder motor to cool (approximately 60 minutes to completely cool).
4. Once the motor has cooled it will return to normal operation.

## TROUBLESHOOTING TIPS

**PROBLEM:** Shredder does not power up.

**CAUSE:** Main power switch is not on.

**SOLUTION:** Locate the power switch on the back of the unit and make sure it is in the On (I) position. Press the On/Off (⏻) button on the top of the unit.

**CAUSE:** Waste bin is ajar.

**SOLUTION:** Make sure the waste bin is pushed all the way into the main shredder body.

---

**PROBLEM:** Shredder motor continues to run after shredding is complete.

**CAUSE:** The waste bin is full and not allowing paper to exit shredder head.

**SOLUTION:** Unplug the shredder and empty the waste bin.

---

**PROBLEM:** Shredded paper does not completely exit shredder head.

**CAUSE:** Shredded paper is caught in the blade slots.

**SOLUTION:** Press the REV (<) button to clear. You may also need to unplug shredder and manually remove paper from shredder exit.

---

**PROBLEM:** Shredder does not run when paper is fed into feed opening.

**CAUSE:** Paper is not entering feed opening at a proper angle to touch activating sensor.

**SOLUTION:** Remove and adjust the position of the paper so that activates the motor.

**CAUSE:** Paper is too thin, soft, wrinkled to activate shredder motor.

**SOLUTION:** Remove paper and fold it before inserting it into shredder.

---

**PROBLEM:** Paper is jammed and shredder does not run.

**CAUSE:** Too many sheets of paper are being fed into shredder at one time. Press the

**SOLUTION:** REV (<) button to clear.

---

**PROBLEM:** Shredder shuts off. Shredder does not run when FWD (>) or REV (<) buttons are pushed.

**CAUSE:** Motor overheated.

**SOLUTION:** Unplug the shredder and allow it to cool for 60 minutes before using again.

**CAUSE:** Waste bin is full or paper is stuck in blades.

**SOLUTION:** Turn off shredder. Clear paper from blades and/or empty waste bin.

---

## MARKING AND INSTRUCTIONS



Warning



Operation, maintenance, and service requirements are covered in the instruction manual. Read the entire instruction manual before operating shredders.



Avoid hair touching the document feed opening.



Avoid touching the document feed opening with hands.



Avoid clothing touching the document feed opening.



Product is not intended for use by children (product is not a toy).



Keep aerosol products away.

## LIMITED WARRANTY

LH Licensed Products, Inc., (“LHLP, Inc.”) warrants that for a period of three (3) years (cutter) / one (1) year (parts except cutter) from the date of purchase, this product will be free from structural or mechanical defects resulting from materials or workmanship. LHLP, Inc., at its sole option and as the purchaser’s sole remedy under this warranty, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement or repair will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. THIS IS YOUR EXCLUSIVE WARRANTY.

This warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. You must keep the original sales receipt. Proof of purchase is required to obtain warranty service.

LHLP, Inc. dealers, service centers, or retail stores selling this product do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not apply to the finish on the product. This warranty does not cover normal wear and tear of parts or damage resulting from any of the following: negligent use or misuse of the product, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than LHLP, Inc. or an authorized service center, improper installation, or exposure to extremes of heat or humidity. Further, the warranty does not cover Acts of God, such as fire, flood, earthquakes, hurricanes and tornadoes.

LHLP, Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty or otherwise relating to the sale of this product. LHLP, Inc. is also not responsible for: costs associated with removing or installing the product; damage or loss of the contents of the product; nor for the unauthorized removal of the contents; or damages incurred during shipment.

THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND LHLP, INC. DISCLAIMS ANY AND ALL OTHER COVENANTS AND WARRANTIES.

Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty period. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, or province to province, or jurisdiction to jurisdiction.

## CONSUMER ASSISTANCE

**EMAIL:** LHLPCustomerService@LHLPinc.com

**WEBSITE:** www.honeywellsafes.com

**ADDRESS:** Consumer Assistance Dept.  
LH Licensed Products, Inc.  
860 East Sandhill Avenue  
Carson, CA 90746 USA

**TELEPHONE:** US/Canada 1-877-354-5457 (Toll Free)

Mexico 01-800-288-2872 After English voice recording stops you must then enter 800-860-1677 to complete your call. (Toll Free)

Australia 0011-800-5325-7000 (Toll Free)

Germany/New Zealand 00-800-5325-7000 (Toll Free)

Other Countries XX\*-310-323-5722 (Toll Charges Apply)  
XX\*- Dial U.S. Country Code first

### **CALL CENTER HOURS:**

US/Canada 7am – 5pm (PST\*\*) Mon – Fri (Subject to change)

### **CALL BACK HOURS:**

Other Countries 7am – 8pm (PST\*\*) Mon – Fri (Subject to change)  
PST\*\*- Local time in Los Angeles, CA, USA

### **INTERNATIONAL CALL BACK HOURS:**

If you need to speak with a consumer assistant and cannot contact us during the Call Center hours above, please send an email or leave a telephone message, including your Name, Telephone Number and the best time for us to contact you during the Call Back hours above and we will make every effort to contact you and help answer any of your questions or concerns.

\* Insert correct Country Code

\*\* Local Time based on Los Angeles California USA



**LHLP**

Manufactured by:  
LH Licensed Products, Inc.  
860 East Sandhill Avenue  
Carson, CA 90746

The Honeywell Trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product.