

# 6-Balloon Cluster Pole Kit Assembly



## 1.1

#### **HUB & BALLOON ASSEMBLY**


Put threaded buttons in cups and screw into the four hub inserts that are separate from the hub. The other two inserts are already on the hub.



### DO NOT ATTACH INSERTS TO HUB UNTIL STEP 1.3


Screw the remaining two cups with buttons into the inserts on the hub and attach deflated balloons by pulling the flaps over the cup and onto balloon hooks.

TIP: Inflate balloons slightly before attaching to inserts.

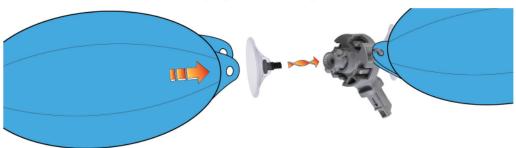


Attach the four remaining partially inflated balloons to assembled cups/inserts from step 1.1 and snap into hub.

NOTE: Make sure the notch on the insert is on the outside of the hub when snapping into place.

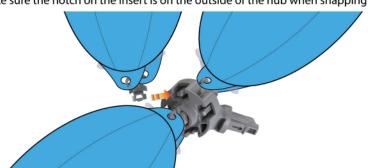


With all six balloons on the hub, before inflation, attach the hub to the stem by click-locking them together. The hub should not be able to come off without pressing the release button on the stem.

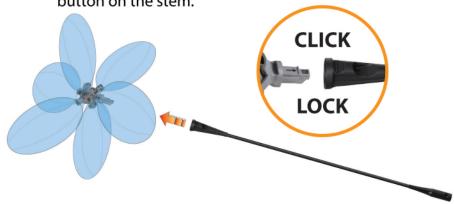

Remove the air plug cap and inflate to a maximum diameter of 17" and replace the plug immediately. If you have access to an inflator, a tapered fill nozzle tip (as shown below) is recommended.

**NOTE**: Balloon inflation shown separate from hub for instructional purposes only. Balloons must be attached to hub as described in previous steps before inflation.

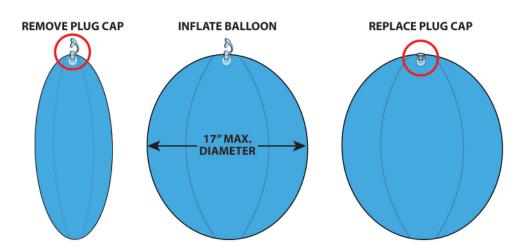

#### REPEAT INFLATION STEPS ON ALL BALLOONS



DO NOT OVER-INFLATE!



2.3

Slide the end of the pole with the snap button directly into the receiving end of the stem, locking the snap-button into place.



**2.4** 

Assemble your chosen mounting option shown below using Step 3 to complete your 6-Balloon Cluster Pole Kit.





BAND CLAMP or SCREW POLE BRACKETS

