

18" Hanging Balloon Kit Assembly




Please inflate all balloons within 30 days of purchase to comply with Warranty Guidelines.

1.1

18" BALLOON INFLATION


Remove air plug from balloon. Inflate the balloon to a maximum 18" diameter. Once fully inflated, push the air plug back into the inflation hole. Make sure the plug is completely seated in the port to ensure no air leaks out.

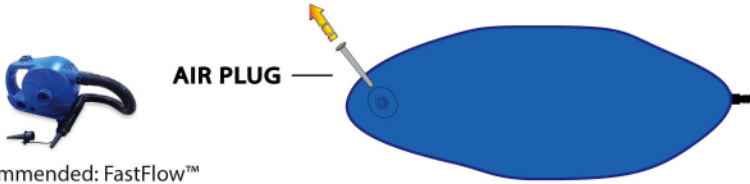

ATTACH HANGER CAP AND MONOFILAMENT

1.2

Locate the black threaded plug opposite of the air plug. Push the Hanger Cap onto the threaded plug until it's fully seated.

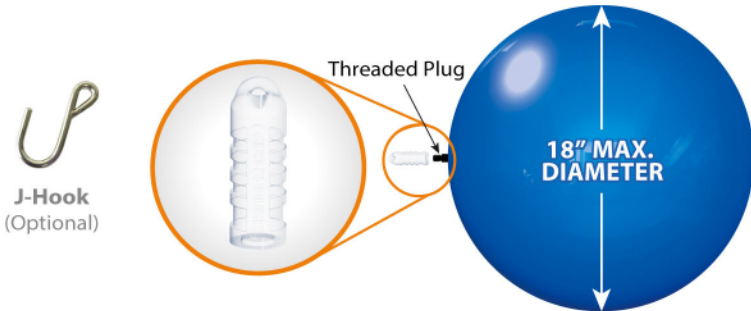

Tie Monofilament Line directly to Hanger Cap or tie to J-Hook (optional/sold separately) and then attach to Hanger Cap.

MAGNET/CEILING PLACEMENT

(Products sold separately)

Attach Kit to any metal surface with the magnet and monofilament. If the ceiling is not accessible by ladder, refer to the Install/Removal How-To Guide that is provided with the Install/Removal Head.



Install/Removal Head



25lb Strength
Monofilament



15lb Strength
Magnet for Hanging

