

STEP
2

ADJUSTABLE CAR WINDOW KIT ASSEMBLY



Please inflate all balloons within 30 days of purchase to comply with Warranty Guidelines.

WHAT YOU'LL NEED



ADJUSTABLE CAR WINDOW BRACKET

INFLATED BALLOON, CUP & STEM ASSEMBLY



Right Side View



Left Side View

PUSH-BUTTON ON STEM
GOES INTO STEM HOLDER
AND SECURES HERE.



WARNING!



INSPECT WINDOWS FOR INTEGRITY BEFORE INSTALLING THE BRACKET. NEVER INSTALL PROMOTIONAL PRODUCTS ON DAMAGED OR CRACKED WINDOWS. REAR WINDOWS ARE STRONGER THAN FRONT WINDOWS. DAMAGE MAY OCCUR IF PLACED ON THE FRONT WINDOWS.

2.1 PLEASE COMPLETE **STEP 1** ON SEPARATE CARD BEFORE CONTINUING HERE.

Position bracket on the most horizontal part of the rear window.

Lower rear window approximately halfway down and clean both sides of the window in the location the bracket will be seated. Slide the bracket all the way down into place so that it's seated firmly in position. Press the bottom of the bracket in towards the glass to seal the suction cup to the window.

Position bracket on the most horizontal part of the rear window.

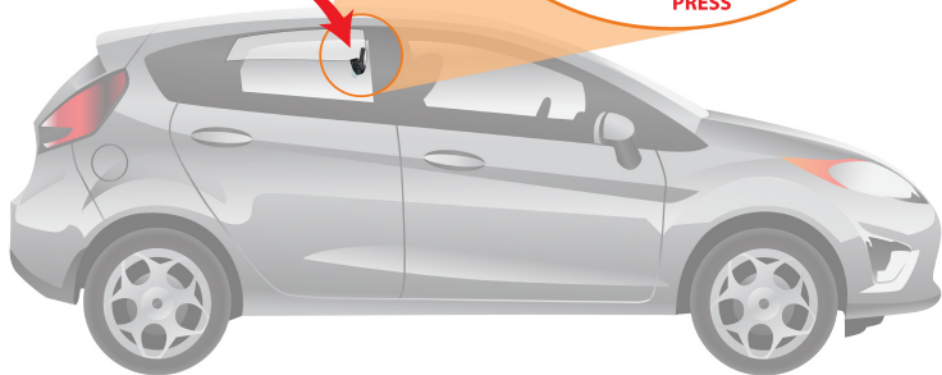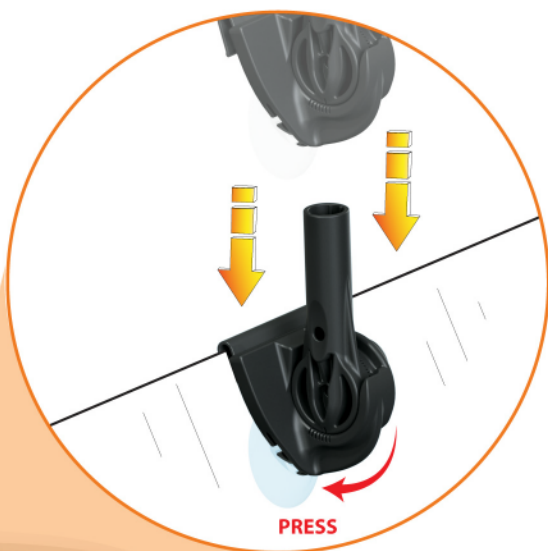

2.2

Roll the window **ALL THE WAY** up so the bracket is fully secured in the window seal. With the balloon inflated and attached to the stem, slide the bottom of the stem into the push-button stem holder and snap into place. Gently pull up on stem to make sure it is locked in place and will not come out of its socket.



ROLL WINDOW ALL THE WAY UP



2.3

It is recommended to position the balloon in the most upright/vertical position. To adjust the angle of the stem, flip the rotating locking lever outward and loosen by rotating counterclockwise. **DON'T LOOSEN SO MUCH THE BRACKET COMES APART.** Set stem to desired angle and rotate lever clockwise to tighten. When slightly tight, push the lever down to lock into place.

