
JUMBO Balloon Kit Assembly




Please inflate all balloons within 30 days of purchase to comply with Warranty Guidelines.


BALLOON DIAGRAM & PARTS

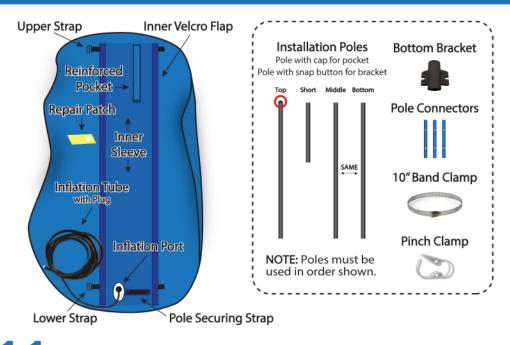

1.1

INITIAL BALLOON & PARTS ASSEMBLY

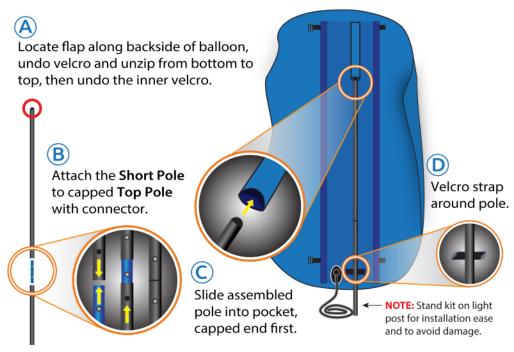

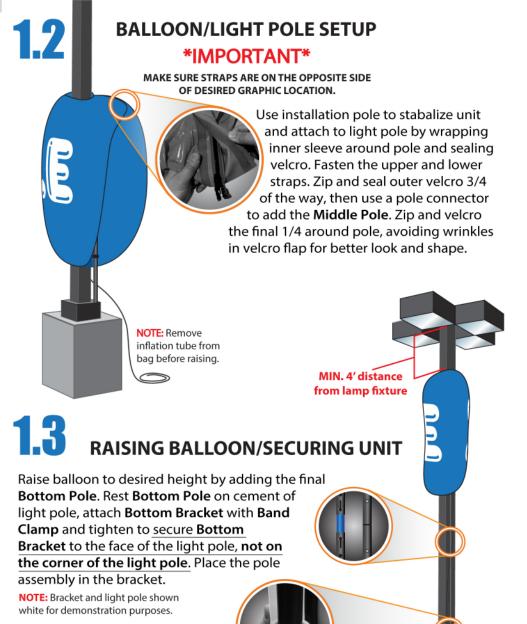

TIPS:

Make sure balloon does not rotate when raising. Secure inflation tube between bracket and light pole.

1.4

COMPLETING THE JUMBO BALLOON KIT



Remove plug from tube (DO NOT LOSE) and begin inflation. Make sure balloon does not rotate.





NOTE:

We recommend using an air compressor with 6' air hose for inflation.



Once the balloon is inflated, tighten slack in tube and seal with the pinch clamp.



TIP: We recommend adding air to balloon after a 3hr stretch period.



Finally, cut excess tube and press plug into the tube to prevent any leaking.



NOTE: Bracket shown white for demonstration purposes.