

KAHUNA  CHAIR®

**Product** Massage Chair

**Model** HANI 3800

Distributed by AJX Distribution INC

11125 Knott Ave, Suite D

Cypress, CA 90630


**Tel** 1-855-646-9500

**Email** INFO@KAHUNACHAIR.COM

KAHUNA MASSAGE CHAIR

**HANI3800**

 **MANUAL**

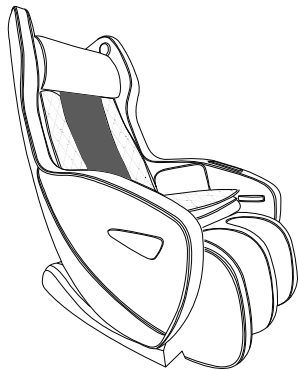

You must register warranty at  
[www.kahunachair.com/services/](http://www.kahunachair.com/services/)

INSTRUCTION MANUAL  
MODEL : HANI 3800


Please read this user manual thoroughly  
prior to operating the massage chair.  
Store this booklet for future reference.





# KAHUNA MASSAGE CHAIR®

 BEST 3D ZERO GRAVITY MASSAGE CHAIR®

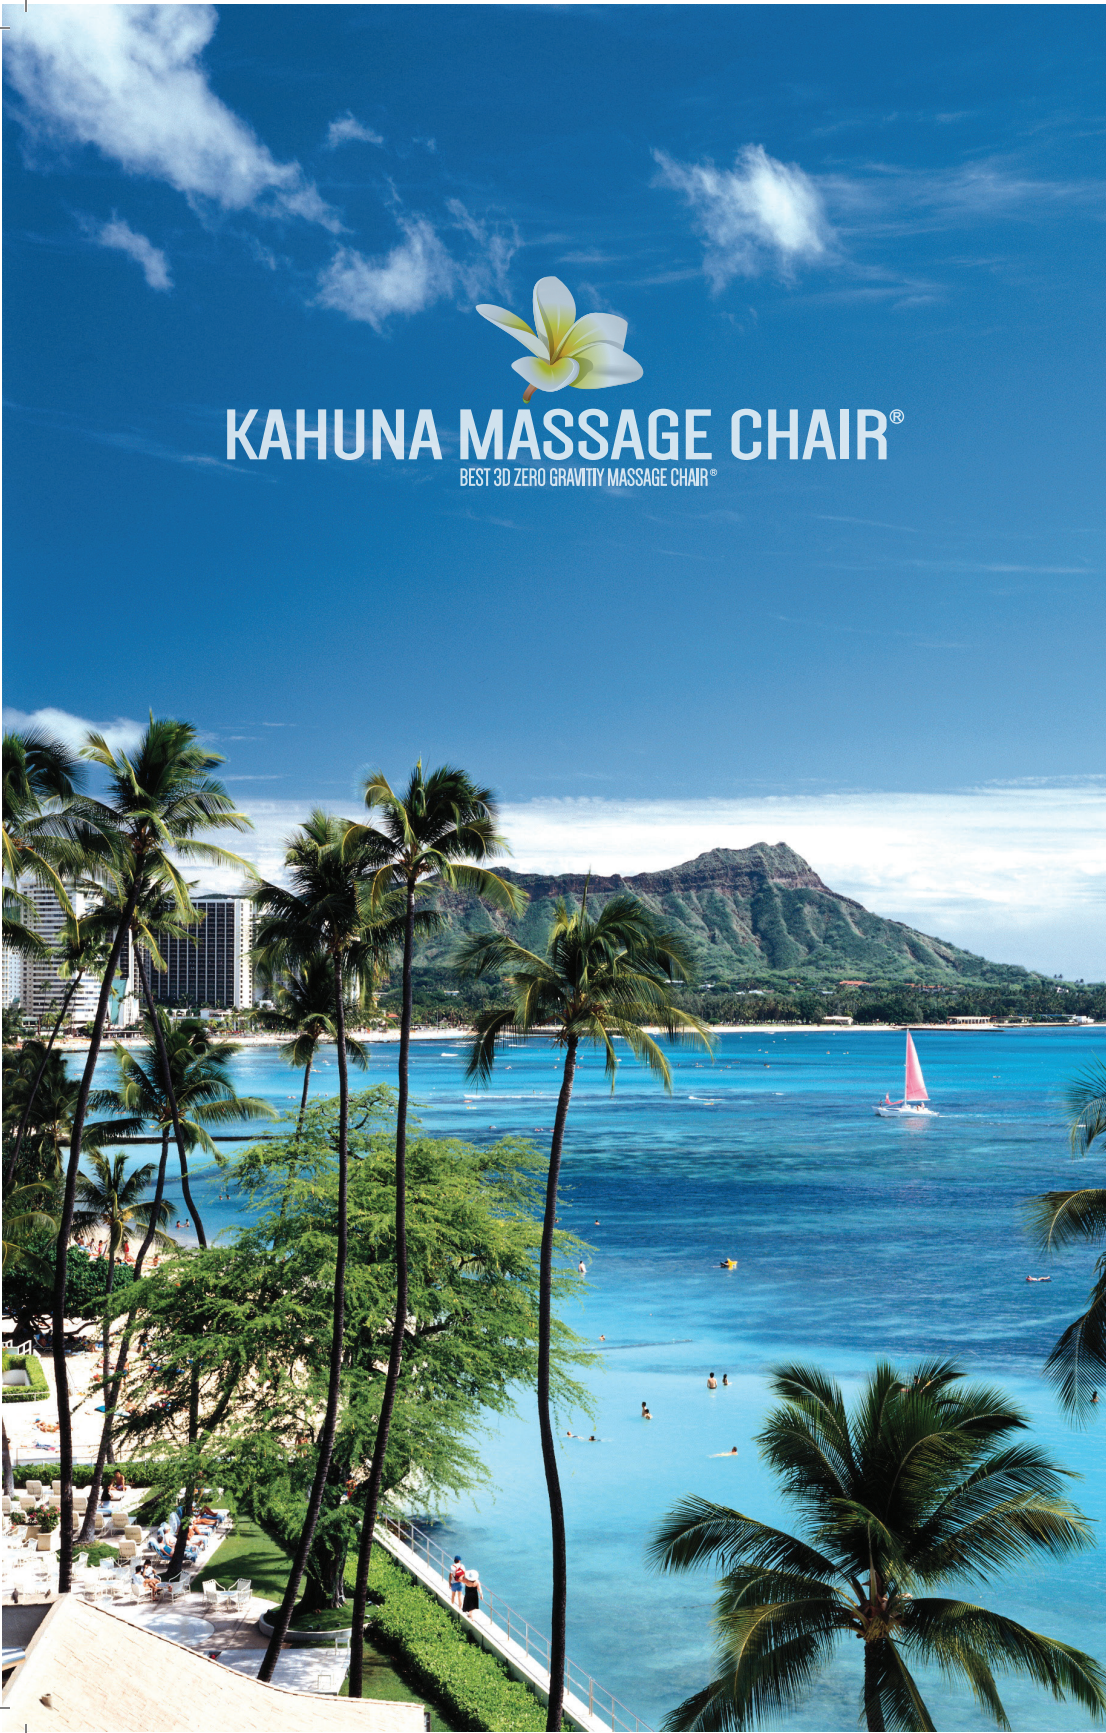

## KAHUNA CHAIR® WARRANTY CERTIFICATION FOR HANI 3800

Thank you for purchasing Kahuna massage chair

When you purchase Kahuna **HANI 3800**, it gives full warranty for 1 years.

You must register our warranty within a month after you receive the product to avoid the warranty.

Warranty will be voided if we don't receive registration within a month period.

You must register at [www.kahunachair.com/services/](http://www.kahunachair.com/services/).

This product is for home use. Any commercial use of the product will also void warranty.

Warranty will not be covered if it was damaged by customer such as drop, damage by moving the product, accidents or neglect such as stains, fluids, mold, water damage, animal damage, cuts, and burns.

Warranty is non-transferable and it will be voided if you buy from end user.



First 1 Years	It covers all parts and labor cost. Customers do not pay anything within the five year. We offer on site repair services.
Not Included	We do not cover shipping expenses if this occurs. We do not cover normal wear and tear including velcro, zipper, or tears in any fabric or leather covering by abuse. We do not cover if the product has been damaged by physically and intentionally. Also, we do not cover customers' accidents or neglect such as stains, fluids, mold, water damage, animal damage, cuts, and burns.

**Registration must be filled out within 30 days from delivery date.**

**To fill out online, go to [www.kahunachair.com/services](http://www.kahunachair.com/services).**

Customers must have a return authorization number in order to return shipments to a service center. This warranty provides you specific legal rights.

You may also have other rights that vary from state to state. Customer service: (855)646-9500 (U.S. Toll Free) or email us at [service@kahunachair.com](mailto:service@kahunachair.com)

11125 Knott Ave, Suite D Cypress, CA 90630

## PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Kahuna Massage Chair
Model No.	HANI 3800
Rated Voltage	100-240V~
Rated Frequency	50/60Hz
Rated Power Consumption	96W
Dimension (LxWxH) Inches	45.7 x 27.6 x 46.5 inches
Weight (LBS)	Net Weight:110.2 lbs/Gross Weight:143.3lbs



KAHUNA CHAIR PRODUCT WARRANTY REGISTRATION  
<https://www.kahunachair.com/services/>



## CONTENTS

Please read and follow all safety and operating instructions listed in this user manual prior to use. Basic precautions should always be used when operating an electrical appliance.

Safety Instructions	.....	2
Product Components	.....	5
Remote Controller	.....	6
Manual control	.....	7
The adjustment before massage	....	8
Operation Guide	.....	9
Maintenance	.....	10
Troubleshooting	.....	11
Product Specifications	.....	12
Warranty card	.....	13





- Thank you for purchasing the HANI 3800 massage chair.
  - Please read this manual thoroughly before using.
  - Please keep this manual for further use.
  - Please pay attention to the safety precaution.





**NOTE**

Right to make changes: We reserve the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication here of. The picture is for reference only. Please adhere to the original products in case of any mistake.

- Two parts for safety precaution: warning and attention.

 <b>Warning</b>	Alarm for serious accident as hurt or death.
 <b>Attention</b>	Alarm for hurt or damages for goods.

- Presentation from below symbols.

	The activities which were forbidden to do.
	Request user to follow the instruction.
	Self-dismount was forbidden.
	The correct operating way to pull out power plug.

- Carefully read and follow this instruction book to assemble and operate.


If the sounds or movements are not normal, please turn off the massage chair and remove the plug from the electric outlet. Please contact the customer service department for further assistance.

**855.646.9500 / 1.714.388.2625, [service@kahunachair.com](mailto:service@kahunachair.com)**

Problem	Solution
The massage chair is connected to power but is not functioning.	Check to see if the power plug is inserted or if the power outlet is functioning properly.
The remote controller is responding, but the massage chair is not functioning.	The massage chair may have automatically shut down due to overheating protection devices. Please turn off the power and allow the chair to cool off for 30 to 50 minutes.
Both the remote controller and massage chair are not responding.	The massage chair automatically turns into "full stop" mode when a massage program is completed. Please press the power button again to turn off the chair.




**KAHUNA CHAIR PRODUCT WARRANTY REGISTRATION**  
<https://www.kahunachair.com/services/>

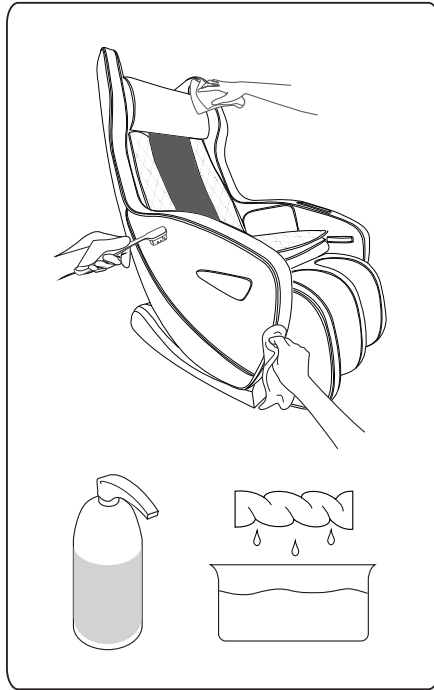

Use dry cloth to clean

Turn off and pull out the plug before cleaning the massage chair, do not touch the plug with wet hands.

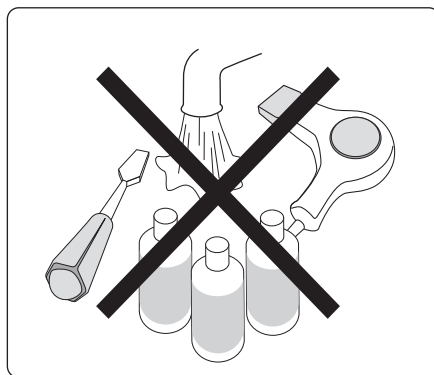





Prohibit using liquid cleaning products like water, alcohol, or other cleaning product to maintain a good quality.

**Warning**

	<ul style="list-style-type: none"> <li>• Patients with serious hyerostosis.</li> <li>• Swollen lump and patient of thrombosis. Patients with serious heart troubles.</li> <li>• Women are pregnant or may become pregnant.</li> <li>• Children or people who over drunk.</li> <li>• Do not sleep on this machine.</li> </ul>	Not recommended
!	<ul style="list-style-type: none"> <li>• Before using this machine, please confirm there has enough space for chair reclining.</li> <li>• Any uncomfortable feeling from massage is suggested to consult with doctor.</li> <li>• Do not offer hard massage for head.</li> <li>• Do not massage the abdominal region and knee cap.</li> <li>• Special care while massaging neck.</li> <li>• Do not allow the kids using or playing near the chair, especially at working.</li> <li>• Need keeper, if the user is mobility impaired or has communication barrier.</li> </ul>	Accident or hurt
	<ul style="list-style-type: none"> <li>• Just allow to connect the power cable of this machine on suitable socket.</li> <li>• Confirm fully pushed the plug in the socket.</li> <li>• Plug out after massage.</li> <li>• Stop all the massage functions and power switch before plug the cord out.</li> </ul>	Fire or electric shock
	<ul style="list-style-type: none"> <li>• Please do not store the cushion of this machine under folded.</li> </ul>	Accident
⊘	<ul style="list-style-type: none"> <li>• Do not disconnect or connect the plug to the socket with a damp hand, which may result in electrical shock or mechanical trouble.</li> <li>• Please make sure that power plug is completely inserted into the socket without attaching any pin or rubbish, for which may cause electrical shock, short circuit or fire.</li> </ul>	Fire or electric shock
⊘	<ul style="list-style-type: none"> <li>• If this machine is not operating correctly, or broken, or damaged from other reasons, please contact service department first at <a href="mailto:service@kahunachair.com">service@kahunachair.com</a>.</li> <li>• If the plug or power cable is broken, please contact with maintenance worker to repair.</li> <li>• Do not dismount any parts of this machine privately.</li> <li>• Please check carefully over the cushions and coverings to confirm they are under good condition.</li> </ul>	Dismount and maintenance

 **Attention**

	<ul style="list-style-type: none"> <li>Do not place or stock this machine near particularly damp place as swimming room, bathroom and so on.</li> </ul>	Avoid from electric leakage or shock
	<ul style="list-style-type: none"> <li>Must confirm it is under good earth connection.</li> <li>Do not use plug adaptor.</li> </ul>	Avoid from electric accident
	<ul style="list-style-type: none"> <li>Stop power supply, before cleaning.</li> </ul>	Avoid from sudden accident
	<ul style="list-style-type: none"> <li>Stop power supply, after massage.</li> </ul>	
	<ul style="list-style-type: none"> <li>Pull out the plug, if there has any electric problem.</li> </ul>	
	<ul style="list-style-type: none"> <li>While stop power supply, do not directly pull from the power cable.</li> <li>Separate the power plug from the socket at once, after electricity fails.</li> </ul>	
	<ul style="list-style-type: none"> <li>Do not use this chair in over hot, damp, or corrosive environment.</li> <li>Do not use electric blanket on the machine.</li> </ul>	Avoid from damages to the machine cover
	<ul style="list-style-type: none"> <li>Do not place near the stream over, or directly expose to sunshine.</li> </ul>	
	<ul style="list-style-type: none"> <li>Do not use it outdoors.</li> </ul>	




Grounding  
Unable to connect these space


Gas pipe : may cause electrical shock, short circuit or fire.

Telephone lines and Lightning rod : may cause electrical shock, short circuit or fire  
conduit : on plastic can't have function

2 After use

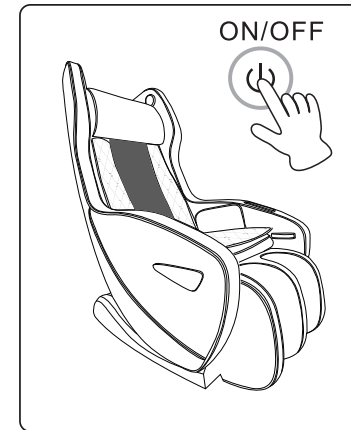

1. Press the power button to power off the massage chair.

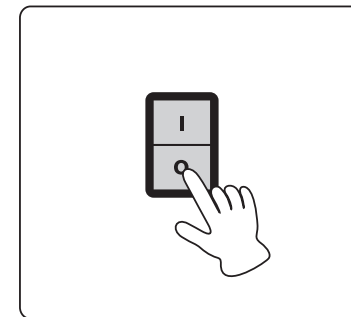


2. Turn off the main power switch.

3. Remove plug from power outlet.

\* Please do not pull the power cord to remove the plug.

\* Please do not unplug with wet hands.

| How to move the chair |

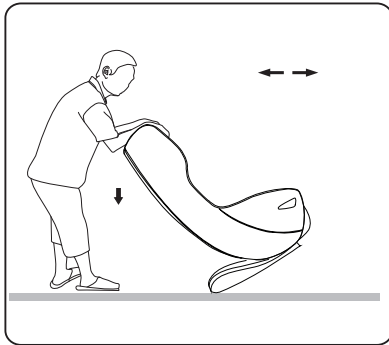



1) As illustrated, push the backrest downwards and tilt chair on to its wheels at a 45° angle. Slowly push and maneuver the massage chair to desired location. Lower massage chair slowly and smoothly until it is fully flat on the ground.

CAUTION





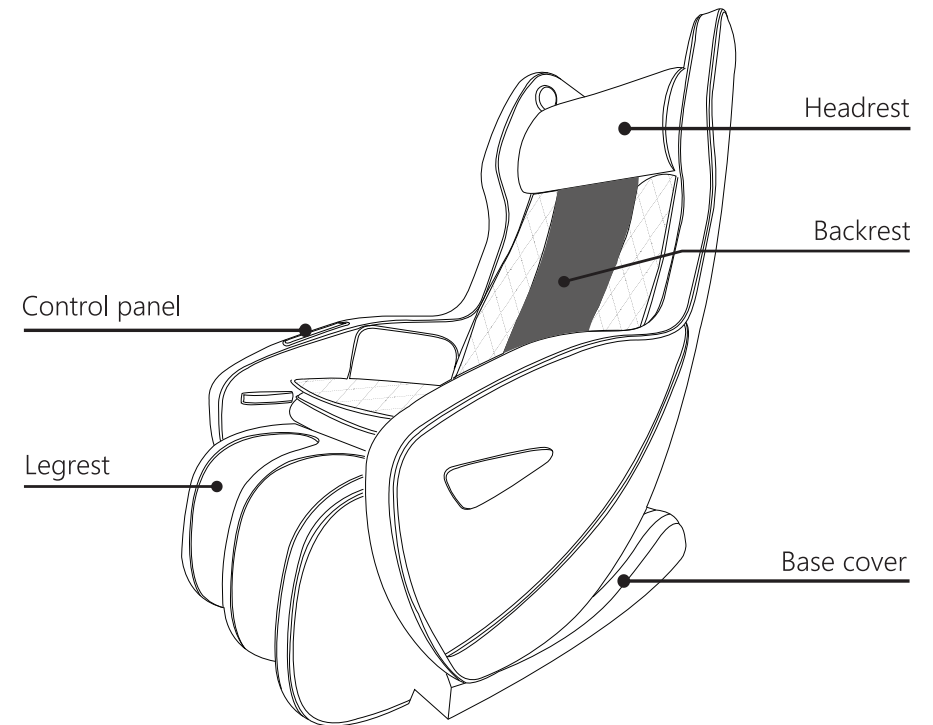

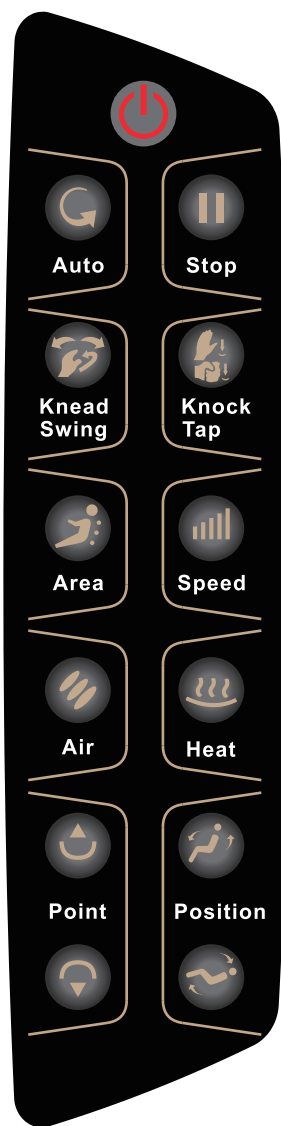




- \* Do not move massage chair when occupied or in use.
- \* Moving the massage chair may cause damage to the floors. Floor protection is recommended (e.g. rug or carpet).
- \* Do not drop or suddenly let go of the chair when moving as it may damage the chair.
- \* Two people are recommended when moving and extra care when handling the massage chair.

| Main body diagram |





- Do not press two or more keys at the same time to avoid fault.
- Before start the massage mode, please be sure to sit well before you start the programs.
- Do not spill water or other liquids onto the control panel.
- When using, do not impose an external force on any part of the product to avoid injury or product failure.

-  **On-off button** : Press this button to turn-on/turn-off.
-  **Stop** : Press this button for all functions to stop working in an emergency.
-  **Auto button** : Press this button to switch between automatic mode 1/mode 2.
-  **Knead/swing button** : Press this button, the massage motor switches between three states:knock function on/tap function on/knock and tap functions off.
-  **Knock/Tap button** : Press this button, the massage motor switches between three states:knock function on/tap function on/knock and tap functions off.
-  **Position button** : Press this button, the massage motor will select the whole body, upper body, lower body area to carry on the selected massage functions.
-  **Speed button** : When manual program is selected(except shiatsu), press this button to switch between low speed, medium speed, high speed.
-  **Air pressure button** : Press this button can select air pressure strength:weak, middle, strong, air pressure off.
-  **Heating button** : Press this button to turn on/off the heating function.
-  **Fixed point button** : When selecting the manual program (except shiatsu), holding down the upward/downward arrow button will allow the rollers to go to the fixed point, when tapping these buttons the rollers will stop at the current position.
-  **Sitting point button** : Holding down this button will allow the chair's position to go upwards or downwards, tapping this button will allow the backrest to stop at the current position.