

KAHUNA  CHAIR®

KAHUNA MASSAGE CHAIR

LM7500

MANUAL



CONTENTS



Please read and follow all safety and operating instructions listed in this user manual prior to use. Basic precautions should always be used when operating an electrical appliance.





Safety Instructions	2
Product Components	7
Chair Installation	9
Before Use	13
Remote Controller	14
Instructions	15
Troubleshooting	22
Maintenance	23
Product Specifications	24

SAFETY INSTRUCTION

- Please read this manual carefully to make sure the installation and operation of the massage chair is correct.
- "Safety Instructions" are provided in both Warning and Caution for important safety information.

Both Warning and Caution are important safety caution, please be more cautious.

 Warning	This sign indicates warning of causing possible death or hurt to body.
 Caution	This sign indicates caution of causing possible pain or damage to body.

	This sign indicates forbidden behavior.
	This sign indicates must follow instruction to operate.
	This sign indicates self disassembly is forbidden.
	This sign indicates correct operation of cable.

- The following should be kept for any further references.




Warning




	<ul style="list-style-type: none"> • Osteoporosis patient ; • People with heart disease including embedded pacemaker or other medical electronic device inside the body ; • For pregnant women or people with health issues, please consult doctor before use ; • Patients with a high fever forbid to use this machine. • Perceptual disabilities patients forbid to use this machine. • People over 80 years old forbid to use this machine. • Kids and the drunk people are not allowed to use the chair ; • Please don't sleep in the chair. • Don't use the chair when your body is wet. 	<p>People who are not suitable to use the chair</p>
	<ul style="list-style-type: none"> • Make sure there are no kids or pets or other objects around (under, behind or in front of) the chair at the moment of backrest, leg-rest up/down or leg-rest retraction/extension from reclining position. • During operation, if body is being abnormal, please stop the operation and go consult with your physician. • Please do not take strong massage on the head. • Do not massage belly or knees, be careful when massaging neck. • Children or pets are not allowed to play on the chair especially during massage. Standing or sitting on the back or armrest is not allowed either. • Those who move around with difficulty or can't express themselves must be taken care of strictly and continuously during massage. 	<p>Accident /injury</p>
	<ul style="list-style-type: none"> • Insert the plug of the chair into correct and suitable power socket. • Make sure the plug is completely inserted into the socket to reduce short circuit or fire risk. • Unplug the power when not in use, stop all massage functions and turn off on/off key before unplugging. 	<p>Fire and electric shock</p>
	<ul style="list-style-type: none"> • Massage cushions of the chair are not allowed to fold for storage. • The machine is forbidden for no-load running for a long time. 	<p>Accident</p>
	<ul style="list-style-type: none"> • Power cord, plug, socket can't be used in broken or loose contact condition. • Don't use other electric power except rated voltage in case of fire, electric shock or any breakdown. • Any broken, re-process, knotted, twisted power cord or pressed under heavy cargo is not allowed to use. 	<p>Fire and electric shock</p>

SAFETY INSTRUCTION





Warning

	<ul style="list-style-type: none"> • If the chair is dysfunctional, or is broken, splashed with water or falls into water, please have it repaired by professional repairman or send the chair to assigned service agent. Self-modification, disassembly or maintenance is forbidden. • If power cord or plug is damaged, please don't replace it yourself, please contact us or appointed dealer for replacement. • To avoid electric shock or body injury, please don't open or disassemble any part of the chair, there is not any attached part of the chair for maintenance by customers. • Check leather or cloth material on the back and other areas is broken or not. If broken, even though it is small, please stop using the chair, unplug the power and have it repaired. 	<p>Disassembly and maintenance</p>
---	--	------------------------------------


Caution

	<ul style="list-style-type: none"> • Please operate the chair when it is flat or on leveled place 	<p>To avoid sudden falling.</p>
	<ul style="list-style-type: none"> • Position the chair 4 inches from the wall to allow for sufficient space to recline up and down. 	<p>To make sure the back lying.</p>
	<ul style="list-style-type: none"> • The maximum suggested operating time is 20 mins. 5 mins for each position beginning with the slight- step massage. Along continuous massage in the same position may cause uncomfortable feeling. 	<p>Too long time massage is bad for your body.</p>
	<ul style="list-style-type: none"> • Before sitting on the chair to avoid injury please inspect everything to confirm that the massage heads are in the correct position. 	<p>To avoid accidental injury.</p>
	<ul style="list-style-type: none"> • Please make sure that the power switch is on "OFF" position before inserting the plug into the socket. 	
	<ul style="list-style-type: none"> • Turn off all controls before removing plug from outlet. 	<p>To avoid the accident when turn on the power.</p>
	<ul style="list-style-type: none"> • Make sure the plug is completely inserted into the socket. 	
	<ul style="list-style-type: none"> • Checking whether there are any damages on the wire and make sure there are no water or rubbish on the wire. 	<p>To reduce short circuits and any fire hazard.</p>
<ul style="list-style-type: none"> • Installing the wire in a correct way. The plug must be inserted into socket with  the connect, the connect couldn't be bent or cut off. 	<p>To avoid electric shock in any leakage or breakdown.</p>	
	<ul style="list-style-type: none"> • Don't use or store the chair in the wet environment like near the swimming pool, or bathroom. • Keep the chair and remote control dry at all time. • Don't use the chair when your body is wet. 	<p>To avoid leakage or electric shock.</p>

Caution

	<ul style="list-style-type: none"> • Don't press with hands or step on the massage heads with feet. • Don't put hands between the working massage heads. Don't put hands or feet in the gap of mechanical parts. Don't drop or insert anything into the slot of massage chair. • Don't stand or sit or put anything on the backrest, armrest, or leg-rest. Don't stand on the chair during operation. Don't move the chair during operation. • Don't pull out the plug or turn off the power during operation. Don't put your hands or head between leg-rest or beneath. Don't use the massage chair while wearing hair ornaments. Don't put hard things in pocket when take buttocks and huckle massage. Don't sit or press on the backrest when the chair is in reclining position. Don't use on bare skin or wearing thin clothes, thin clothes may cause better massage effect, But it also may cause irritation to the skin or cryogenic burns. 	<p>To avoid accidents or injury</p>
	<ul style="list-style-type: none"> • Keep the chair away from heat, wet, sharp things and corrosive, inflammable, explosive environment. • To use electric blanket or other heating products on the chair is forssiden. • Don't put in the space of dust serious or corrosive gas environment. • Don't put the chair in a small space places or use in the bad air circulation places. 	<p>To avoid fade, discolor on upholstery or hardened, deteriorated on PU.</p>
	<ul style="list-style-type: none"> • Keep the chair away from stove or other heating products. • Don't put the chair directly under the sun or other high temperature places. • Don't use the chair in outdoor. 	<p>To avoid electric shock.</p>
	<ul style="list-style-type: none"> • Make sure to install the wire in correct way(Incorrect install way may cause electric shock. If you don't know how to install, please find a professional electrician) • Don't use plug adapter (If the enclosed plug doesn't match with socket, please don't change the plug by yourself and find a professional electrician to install a matched socket.) 	<p>To avoid electric shock.</p>

Caution

	<ul style="list-style-type: none"> • Unplug the power before cleaning the chair. • Unplug the power after using the chair. 	To avoid electric shock or fire hazard.
	<ul style="list-style-type: none"> • Unplug the power when any damage on the power. 	
	<ul style="list-style-type: none"> • Hold the plug to unplug the power but to not try to pull the wire to unplug the power. 	To avoid accidents
	<ul style="list-style-type: none"> • Please turn off the power switch and unplug the power after massage. 	
	<ul style="list-style-type: none"> • Unplug the power immediately when electricity goes off. 	



- Warning :**
1. Do not use it when gets wet.
 2. The disabled or people who need supervision.
 3. The chair has heat function, people who are insensitive to heat must pay high attention.

| Grounding instruction |

The chair is equipped with a cord having a grounding conductor. The plug must be plugged into an appropriate socket that is properly installed and matched with the plug.




Earth wire is not allowed to be in these places

Gas pipe: probably cause explosion or fire.
 Phone wire and lightning rod: probably cause electric shock and fire when thundering.
 Water pipe: earth wire is useless where there are plastics

PRODUCT COMPONENTS

| Main body diagram (Front) |

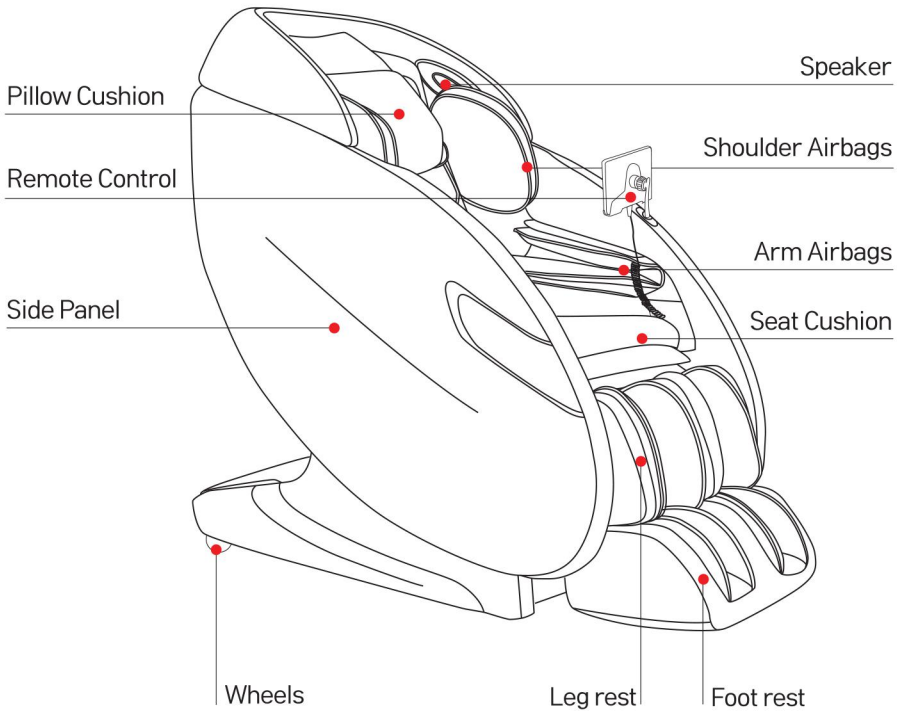


Built in Premium Bluetooth Speakers




PRODUCT COMPONENTS

| Main Body Diagram (Rear) |

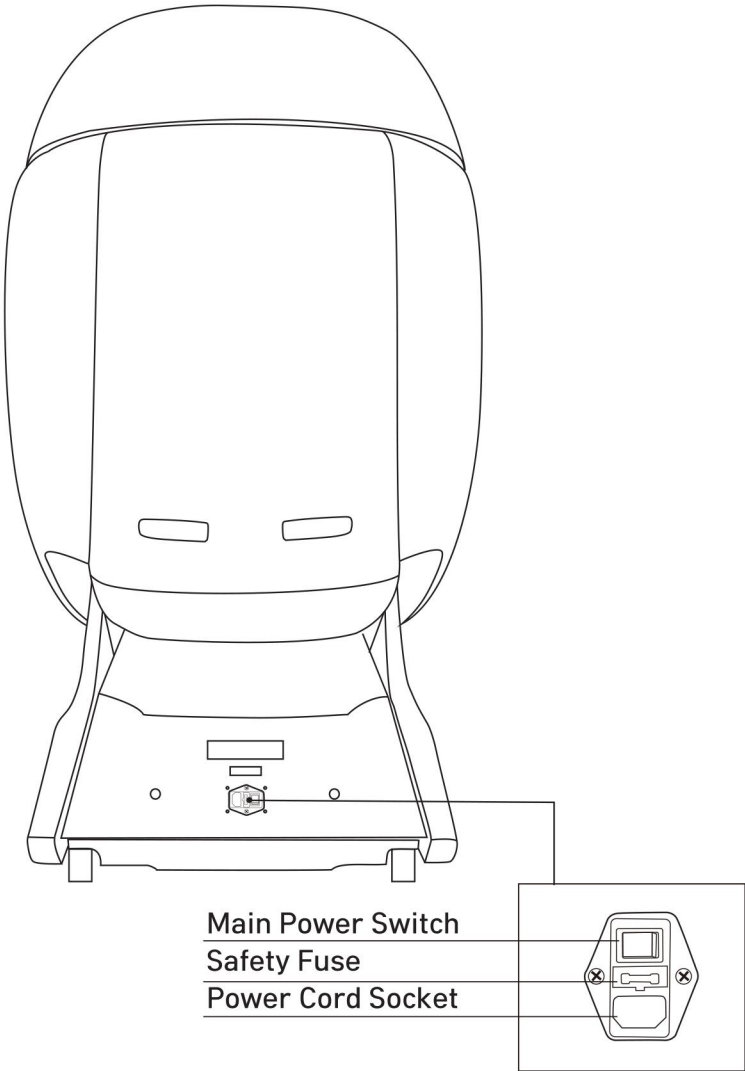

CHAIR INSTALLATION

| 1. Remove the package and take out the chair parts and components |

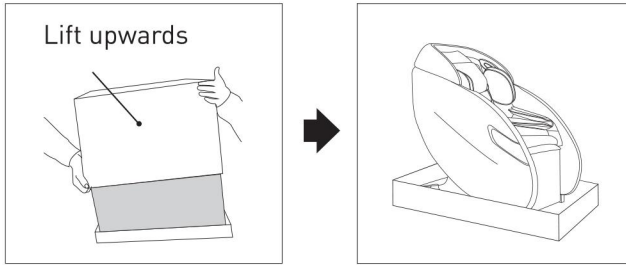


- 1) Unpack the outer box of the main body of the massage chair and lift the outer box upward.
- 2) Take out the accessories of the massage chair and put them away.
- 3) Accessories include: instruction manual, installation instruction card, power cord, etc.


*Please follow the steps to install the massage chair. Do not insert the plug into the socket until it is completely installed.

*Before you install the massage chair, please make sure that there are no obstacles in front and back of the massage chair to avoid causing bump damage.

| 2. Install the footrest |

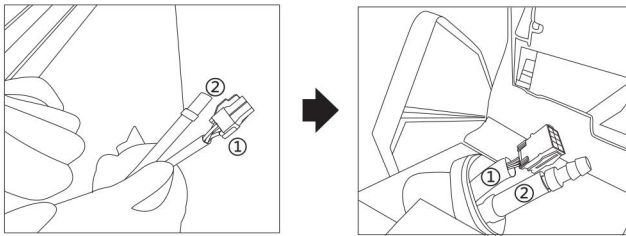

- 1) Connect all the patch cord as shown in the figure, 1 corresponds to 1, 2 corresponds to 2 connections.

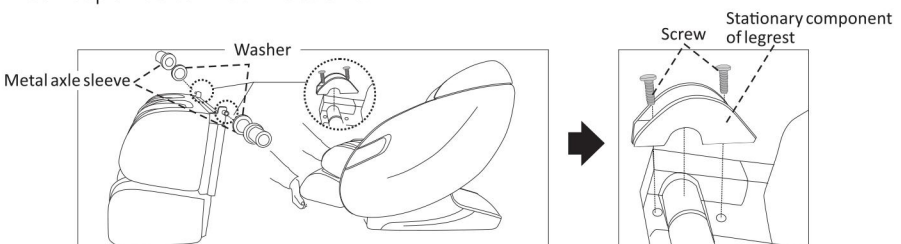


CHAIR INSTALLATION


2) Connect the body of the massage chair with the lower leg,

- ① First insert the left and right sides of the leg into plastic spacers and metal bushings.
- ② Hang the connecting posts on both ends of the legs to the massage chair body.
- ③ Put the leg fixings on the massage chair frame, and lock and fix the two screws; the left and right installation methods are the same.

3. Install the seat zipper

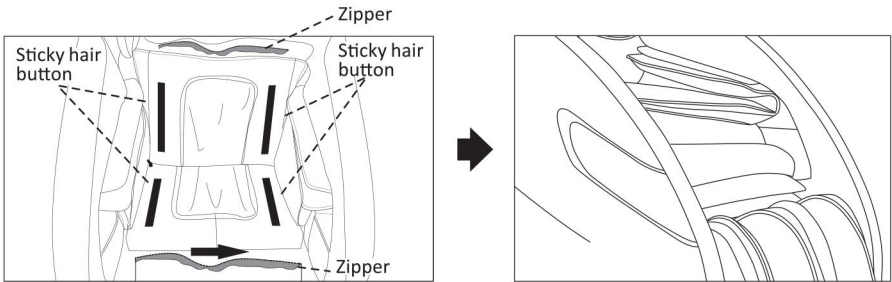

4. Install the remote controller

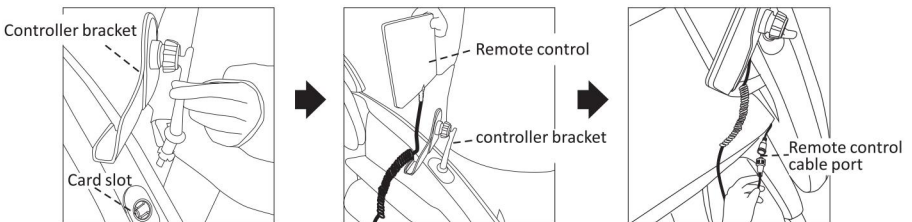


1) First snap the hand controller bracket into the hand controller card slot according to the direction of the card slot.

2) Then place the hand controller on the hand controller bracket.

3) Finally, the handle control cable port is docked with the port of the massage chair seat.

5. Moving the massage chair

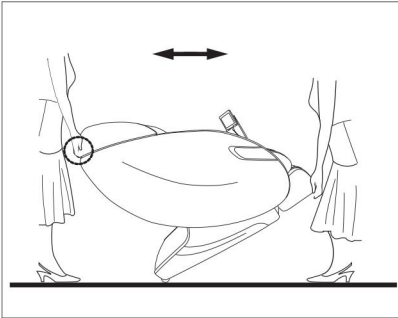


1) As illustrated, push the backrest downwards and tilt chair on to its wheels at a 45 angles. Slowly push and maneuver the massage chair to desired location. Lower massage chair slowly and smoothly until it is fully flat on the ground.

CAUTION

- * Do not move massage chair when occupied or in use.
- * Moving the massage chair may cause damage to the floors. Floor protection is recommended (e.g. rugs or carpet).
- * Do not drop or suddenly let go of the chair when moving as it may damage the chair.
- * Two persons are recommended when moving and extra care when handling the massage chair.
- * Make sure power plug & remote is disconnected to prevent damages. Warranty will not cover the power cord & remote if the chair is moved with the plugs connected.

CHAIR INSTALLATION

6. Place the massage chair in an open area |

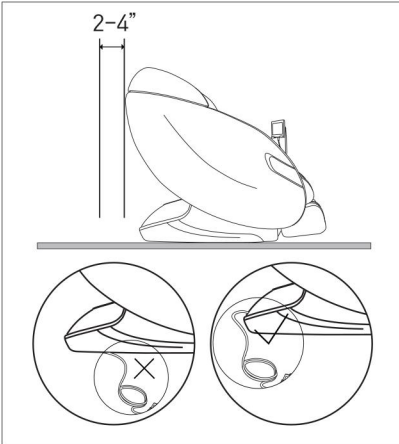

-Allow sufficient space around the chair for recline purposes.

2-4inch distance for the back side and 15.7inch in front of the footrest.


*In order to avoid the damage of the floor and to reduce the noise, please put area rug under the massage chair.

*Make sure that there are no barriers in front and the back of the massage chair.


*Please do not put it in wet or uneven floor.

*To avoid signal interference, please place it 4 feet away from AV, TV, and radio.




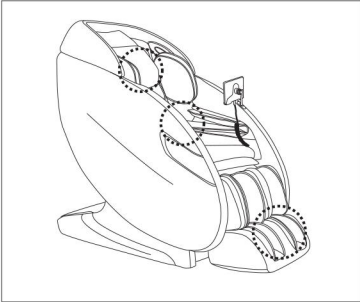


1. Make sure the product is in good condition and proper working order.
 - Check the headrest and backrest pad.
 - Inspect the power plug.
 - Make sure the footrest is in its upright original position in order to prevent damage.

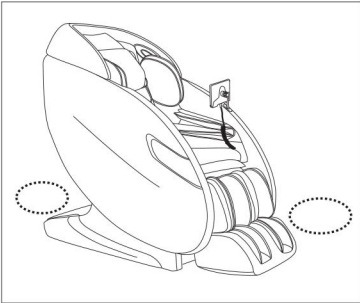

2. Check the surrounding environment.
 - Ensure there are no people, pets, or objects obstructing the massage chair.

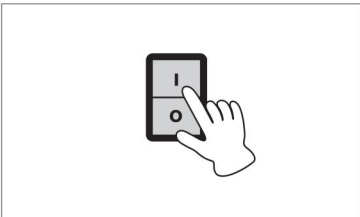


3. Plug in the massage chair power cord.
 - Connect the power cord.
 - Turn ON the power switch, located on the right side of the massage chair.

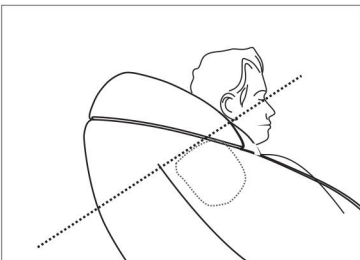

4. Adjust the position of the headrest.
 - Adjust the headrest until it is in a comfortable position.


REMOTE CONTROLLER

| Remote Controller |

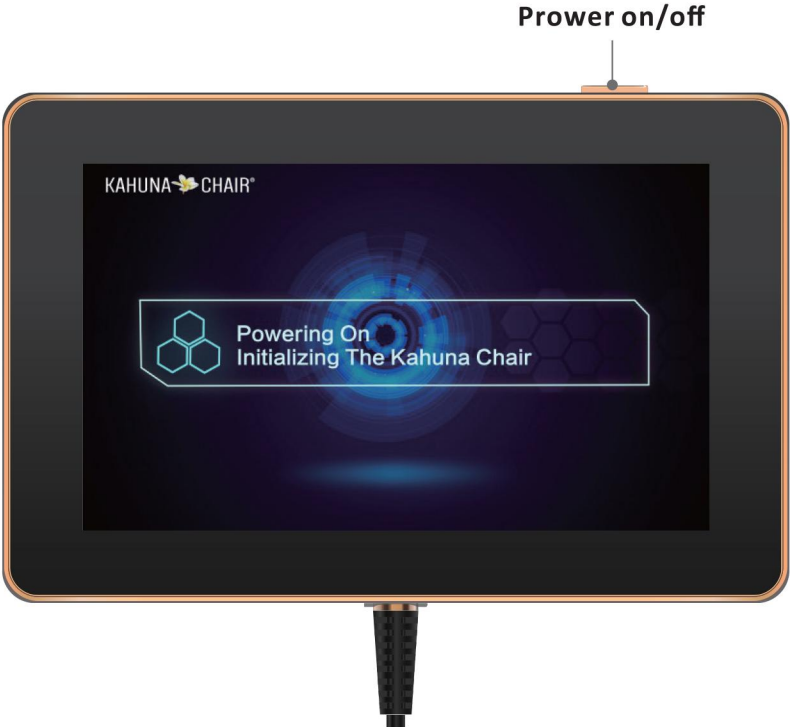


| 1. Remote controller interface and description |

Open the remote controller and the main menu will be displayed. Please select the program you want.

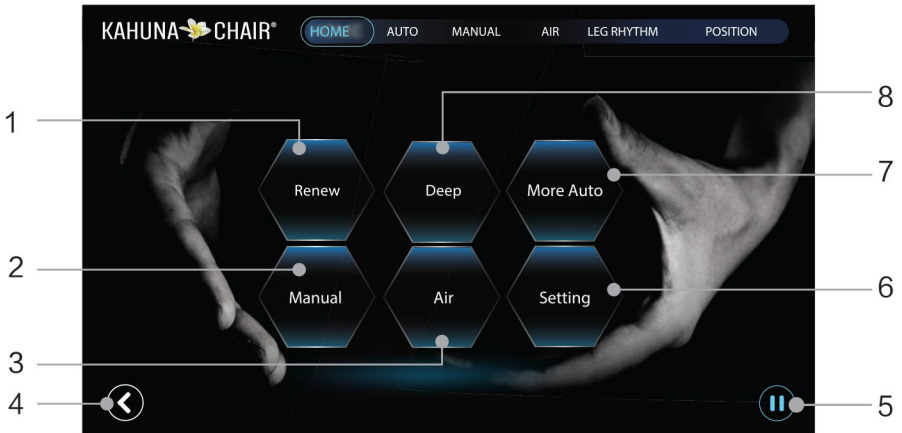

- | | | |
|-------------------|-------------|---------------------------------------|
| 1. Renew | 4. Return | 7. More Automatic Modes |
| 2. Manual Mode | 5. Pause | 8. Top Pressure Relief Automatic Mode |
| 3. Airbag Massage | 6. Settings | |


| 2. Setting |

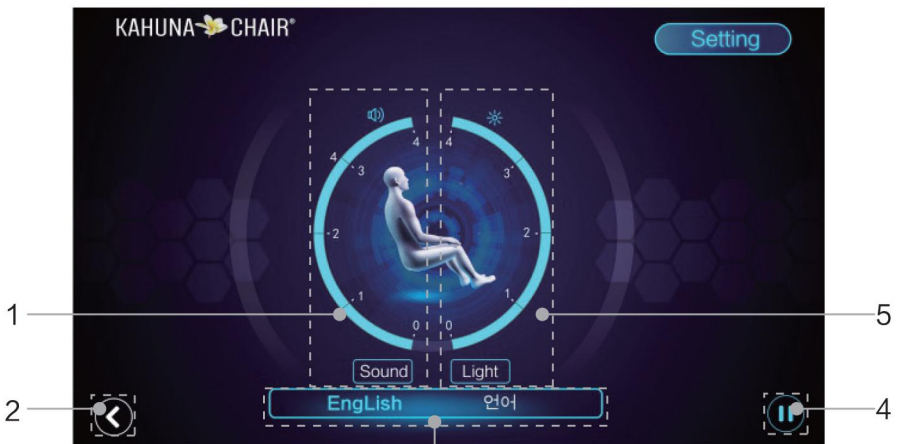


- | | | |
|--------------------------|-----------------------|--------------------------------------|
| 1. Sound Adjustment Area | 3. Language Selection | 5. Screen Brightness Adjustment Area |
| 2. Return | 4. Pause | |

INSTRUCTIONS

| 3. Auto modes |

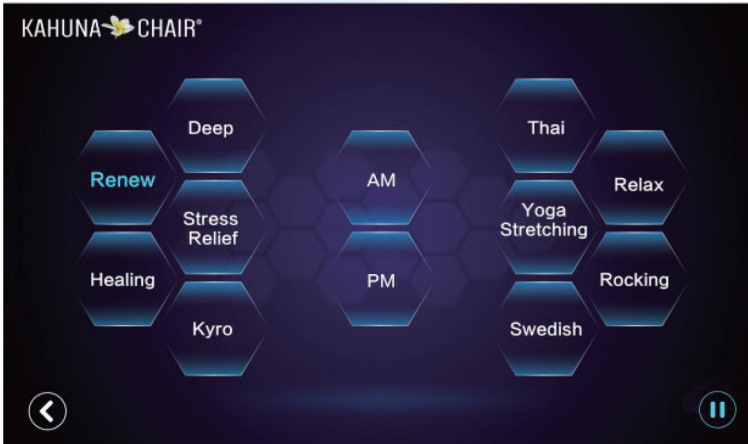


12 sets automatic massage modes of comprehensive and unique first-class in the corresponding massage area, accompanied by sleep music to help you fall asleep.

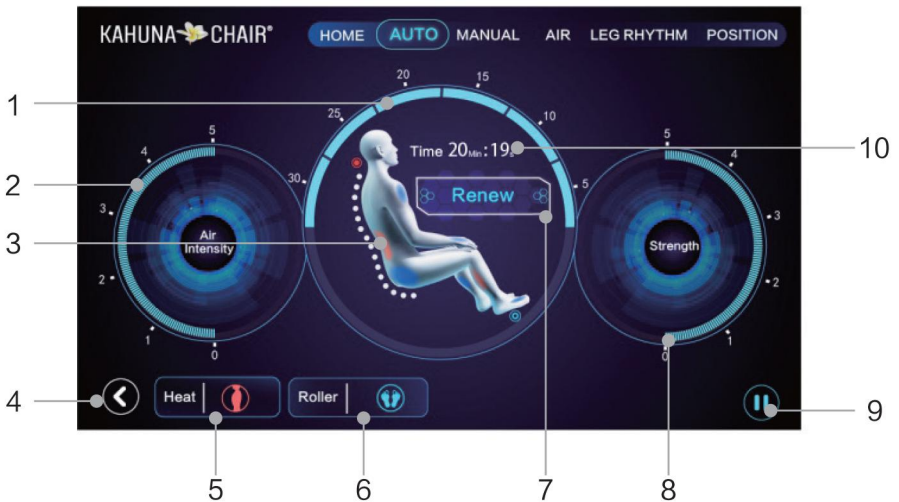

- 1. Massage Time Adjustment Area
- 2. Airbags intensity adjustment Zone
- 3. Movement/Airbag/Hot/Roller Massage Part Display
- 4. Return

- 5. Heating Site Selection
- 6. Sole Roller Location Selection
- 7. Automatic Program Name Display
- 8. Movement Speed Adjustment
- 9. Pause
- 10. Display the Remaining Massage Time

| 4. Detection |

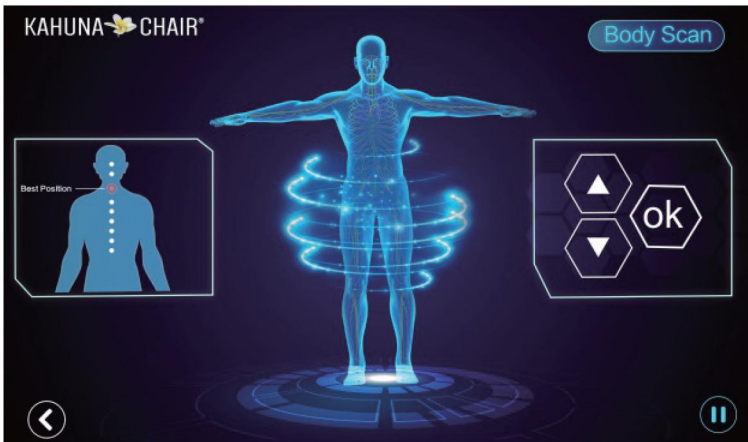


1. Press any of the automatic modes, the latest smart body detection will be turned on (only automatically detected once after booting).

2. After the inspection is completed, within 8 seconds, the user can choose to fine-tune the shoulder position according to his needs. You can also press OK directly to confirm the shoulder position.


INSTRUCTIONS

| 5. Manual modes |

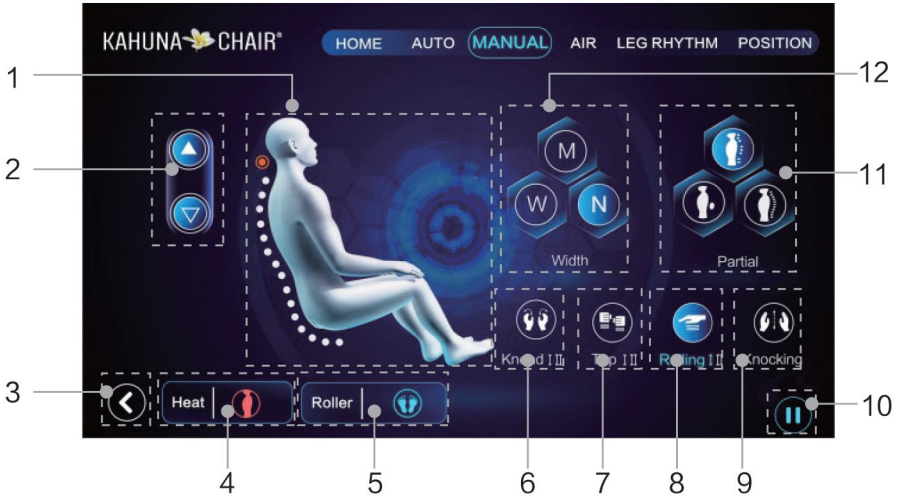


1. Massage Movement Area Display
2. Adjustment of the Up and Down Position of the Massage Movement
3. Return
4. Heating Site Selection
5. Foot Roller Parts Selection
6. Kneading Massage (2 levels adjustable)
7. Tapping Massage (2 levels adjustable)
8. Rolling Massage (2 levels adjustable)
9. Knocking Massage
10. Pause
11. Massage Interval Adjustment Area
12. Massage Width Adjustment Area (not effective when kneading is on)

| 6. Airbags massage |

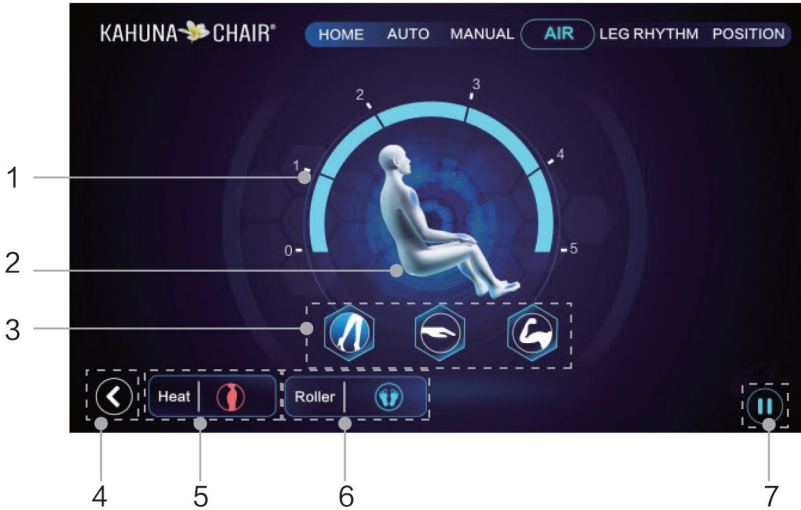

- | | |
|--|---------------------------------------|
| 1. Airbag Massage Intensity Adjustment | 5. Heating Area Selection Area |
| 2. Airbags Massage Area Display | 6. Selection Area of Sole Roller Part |
| 3. Airbag Massage Area Selection Area | 7. Pause |
| 4. Return | |


| 7. Calf Rhythm |

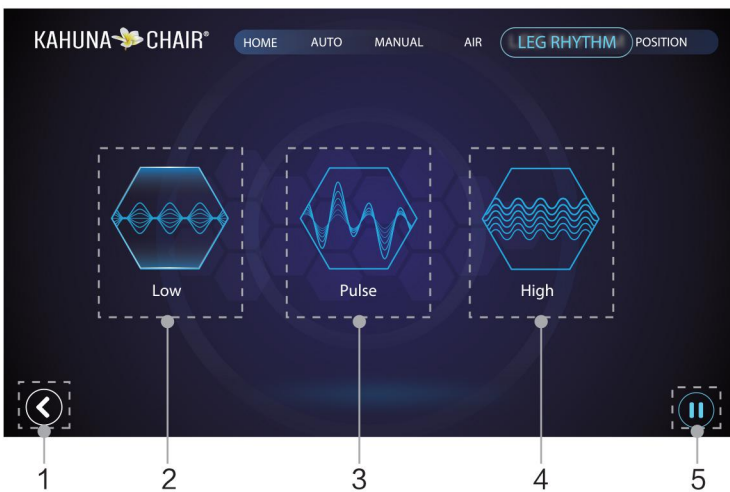

- | | | |
|--------------|--------------------|----------|
| 1. Return | 3. Relaxation Mode | 5. Pause |
| 2. Calm Mode | 4. Concise Mode | |

INSTRUCTIONS

| 8. Sitting Adjustment |

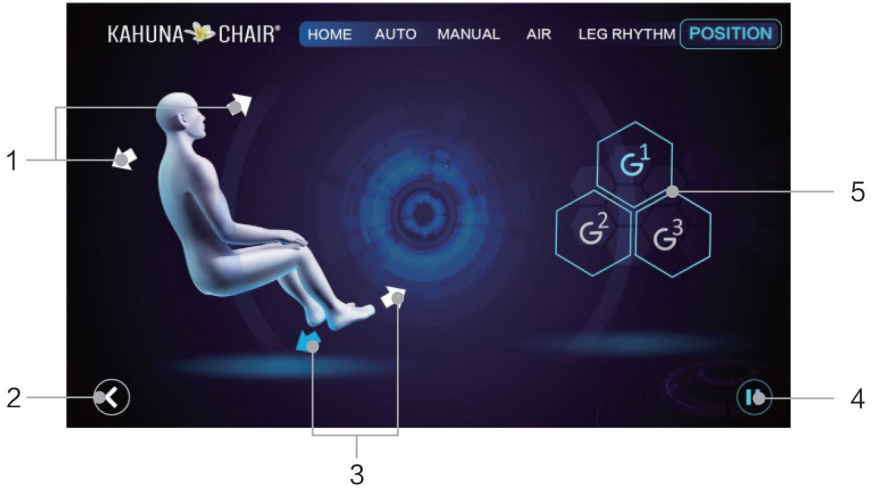

- 1. Backrest Down and Up
- 2. Return
- 3. Footrest Raised and Lowered
- 4. Pause
- 5. Three zero-gravity Positions

| 9. The method of playing the bluetooth music in massage chair |


A. Match: Open the bluetooth function in mobile phone or ipad, and search nearby. Choose the massage chair bluetooth music equipment and match with it.

B. Play music: After matching with it, you can display the music by mobile or App music display software.

Attention


Please off the bluetooth connection when not in use so as for other devices to connect smoothly.

| 10. After use |

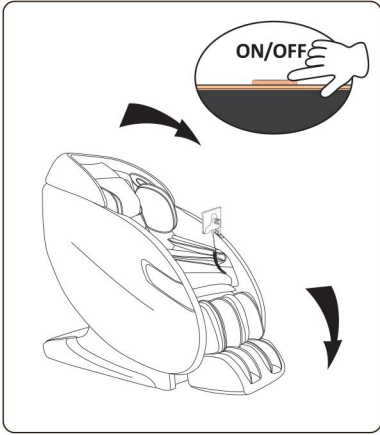

1. After the massage program is completed return the massage chair to upright position by turning off the massage chair.

Please check the surrounding prior to adjust the recline angle, paying special attention to children or pets that may be in close proximity.

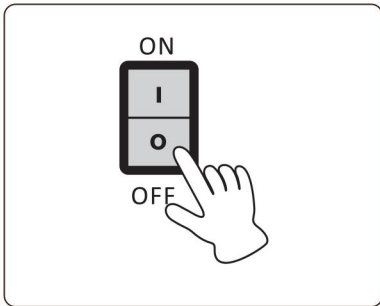

2. Press the power button to power off the massage chair and return remote controller to the storage area on arm pocket.

3. Turn off main power switch when you are not using the chair for a long period of time. Remove Plug from the power outlet to avoid accidents by kids and pets.

4. Do not operate with wet hands.

TROUBLE SHOOTING

If the sounds or movements are not normal, please turn off the massage chair and remove the plug from the electric outlet. Please contact the customer service department for further assistance.

855.646.9500 / 1.714.388.2625, service@kahunachair.com

Problem	Solution
The massage chair is connected to power but is not functioning.	Check to see if the power plug is inserted or if the power outlet is functioning properly.
The remote controller is responding, but the massage chair is not functioning.	The massage chair may have automatically shut down due to overheating protection devices. Please turn off the power and allow the chair to cool off for 30 to 50 minutes.
Both the remote controller and massage chair are not responding.	The massage chair automatically turns into "full stop" mode when a massage program is completed. Please press the power button again to turn of the chair.





KAHUNA CHAIR PRODUCT WARRANTY REGISTRATION
<https://www.kahunachair.com/services/>

MAINTENANCE

| Use dry cloth to clean |

Turn off and pull out the plug before cleaning the massage chair, do not touch the plug with wet hands.

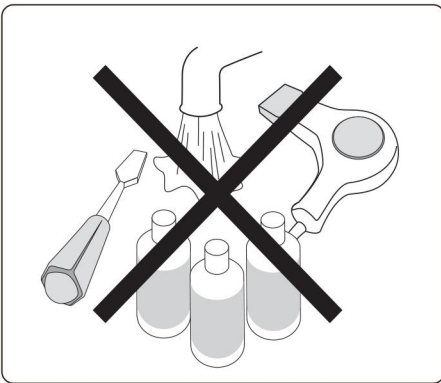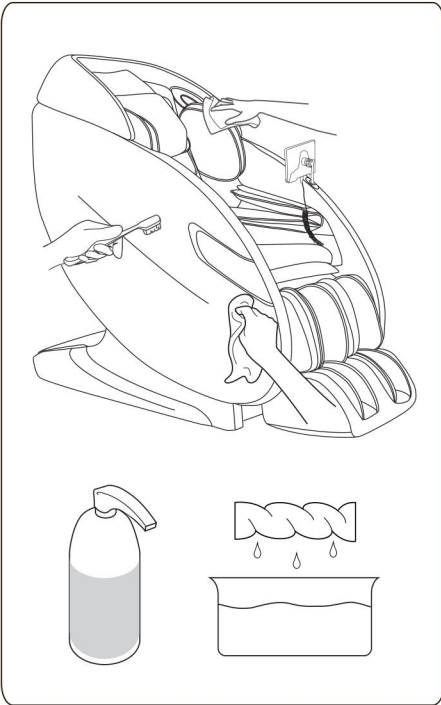

Prohibit using liquid cleaning products like water, alcohol, or other cleaning product to maintain a good quality.

PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Kahuna Massage Chair
Model No.	LM 7500
Rated Voltage	110-120V~
Rated Frequency	50/60Hz
Rated Power Consumption	180W
Dimension (LxWxH) Inches	55.9(L) x 34.3(W) x 52(H) inches
Weight (LBS)	Net Weight: 249.1 lbs Gross Weight :297.6 lbs



Product KAHUNA Massage Chair

Model LM 7500


Distributed by AJX Distribution INC

11125 Knott Ave, Suite D

Cypress, CA 90630

Tel 1-855-646-9500

Email INFO@KAHUNACHAIR.COM

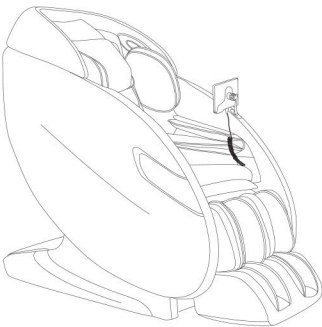

You must register warranty at www.kahunachair.com/services/

INSTRUCTION MANUAL
MODEL : LM 7500

Please read this user manual thoroughly
prior to operating the massage chair.
Store this booklet for future reference.