

## Front

### SPECIFICATIONS

<b>MATERIALS</b>	ABS & Silicone
<b>SIZE</b>	58 x 58 x 78mm
<b>WEIGHT</b>	~ 100 g
<b>CHARGING TIME</b>	120 Minutes
<b>USE TIME</b>	60 Minutes
<b>BATTERY TYPE &amp; CAPACITY</b>	3.7V Li-ion / 300 mAh
<b>VIBRATION MODES</b>	10 Vibration Modes
<b>IPX</b>	IPX5 Splashproof

### DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

### WARNING!

This item is sold as an adult novelty only. Item does not contain phthalates and it is recommended to use water-based lubricants. Should any irritation or discomfort occur, stop using this item immediately. The usage of this product is in no way a means to warrant any medical claims.

[www.therosegasm.com](http://www.therosegasm.com)

secret **SK** kisses  
**ROSEGASM**




Blossom

## Back

### GETTING STARTED


1. Before first use, charge your device for approximately 120 minutes. The USB charging cable can be plugged into any USB port of USB/AC power adapter (not included).

**CHARGING** = LED Light Flashing  
**FULLY CHARGED** = Solid Light  
**LOW BATTERY** = Rapid Flashing Light

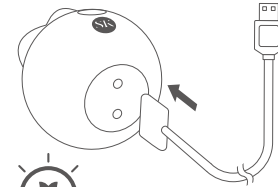

2. Wash your device with soap and water, or toy cleaner suitable for use with silicone items.


3. Lubricate your device with a water-based, silicone compatible lubricant.

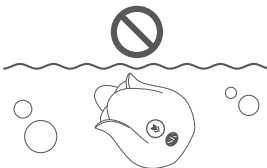

4. Our products are designed to be waterproof. Your device can be used in the shower and can be run under water in the sink to be cleaned.

**DO NOT** immerse your device in water.

### CONTROLS

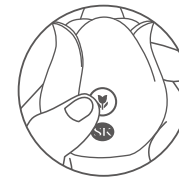

**LONG PRESS**  
to turn **ON/OFF**  
**SHORT PRESS**  
to **CHANGE**  
**MODES**

### VIBRATION MODES

- 
- 
- 
- 
- 
- 
- 
- 
- 
-