 


Front

secret **SK** kisses ROSEGASM

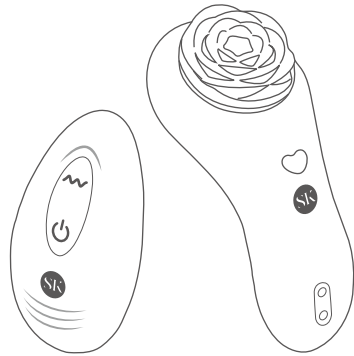 


Surprise


GETTING STARTED

1. Before first use, charge your device for approximately 90-120 minutes. The USB charging cable can be plugged into any USB port of USB/AC power adapter (not included).


CHARGING = LED Light Flashing
FULLY CHARGED = Solid Light
LOW BATTERY = Rapid Flashing Light

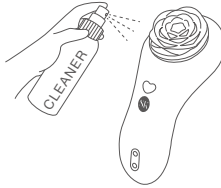

 2. Wash your device with soap and water, or toy cleaner suitable for use with silicone items.
3. Lubricate your device with a water-based, silicone compatible lubricant.
4. Our products are designed to be waterproof. Your device can be used in the shower and can be run under water in the sink to be cleaned. **DO NOT** immerse your device in water.

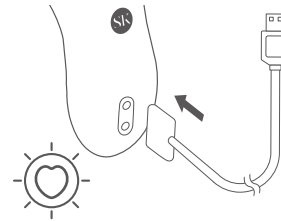


 2. Wash your device with soap and water, or toy cleaner suitable for use with silicone items.
3. Lubricate your device with a water-based, silicone compatible lubricant.

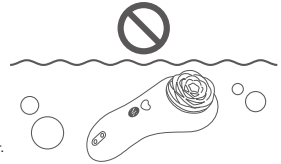

HOW TO USE YOUR SURPRISE

 Place the SURPRISE on the inner side of your underwear and attach the magnetic clip on the outer side to secure the SURPRISE in place.

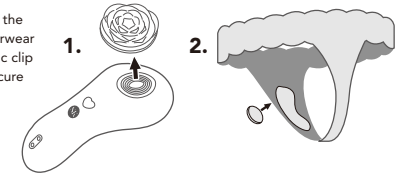

CONTROLS

- 9 VIBRATION PATTERNS (ON VIBE)
- 9 VIBRATION PATTERNS (ON REMOTE)
- PAUSE (ON REMOTE)



LONG PRESS
to turn **ON/OFF**
SHORT PRESS
to **CHANGE**
MODES

VIBRATION MODES

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.

Back

SPECIFICATIONS

MATERIALS	ABS & Silicone
SIZE	89.2 x 40mm
WEIGHT	~80 g
CHARGING TIME	90-120 Minutes
USE TIME	60 Minutes
BATTERY TYPE & CAPACITY	3.7V Li-ion / 170 mAh
VIBRATION MODES	9 Vibration Modes
IPX	IPX7 Waterproof

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

WARNING!

This item is sold as an adult novelty only. Item does not contain phthalates and it is recommended to use water-based lubricants. Should any irritation or discomfort occur, stop using this item immediately. The usage of this product is in no way a means to warrant any medical claims.

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

www.therosegasm.com