 


IMPORTANT – READ ME FIRST

How to set PEN1201 as Repeater / Extender:


Step 1. Set to Repeater Mode

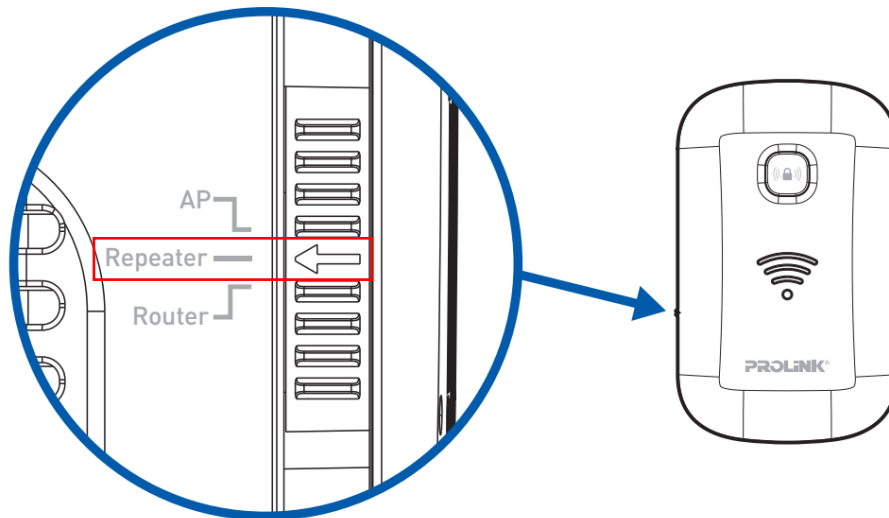

Step 2. Place the PEN1201 near your Main Router for first time setup and turn it On

Step 3. Connect your WiFi Client (e.g. mobile phone) to the PEN1201 Wi-Fi SSID and Wi-Fi password (default SSID: **PROLiNK_XXXXX** ; default password: **prolink12345**)

Step 4. Launch Internet browser and type <http://pen1201.setup> (please do type out **http://**)

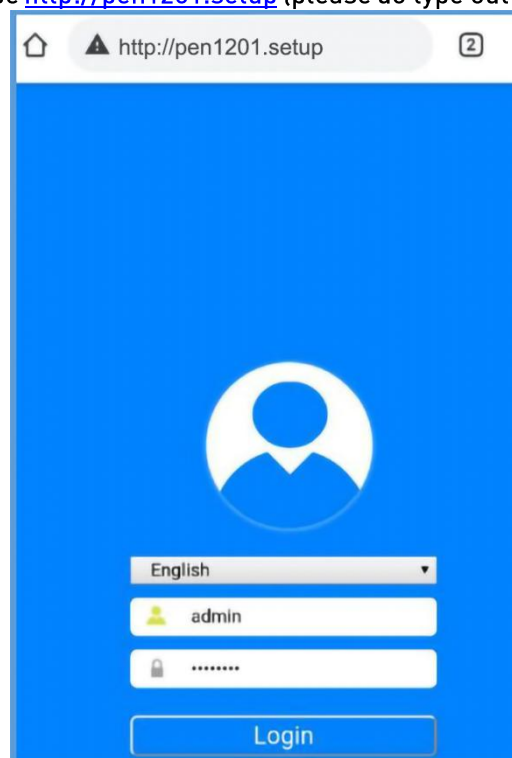

Step 5. Login to the Web GUI with default username/password (default username: **admin** ; default password: **password**).

Step 6. Click Repeater Wizard

Repeater Wizard

IMPORTANT – READ ME FIRST

Step 7. Select your existing home Wi-Fi SSID and enter the Wi-Fi password.

SSID	Channel	Security and Encryption	Signal	Choose
PROLiNK_PRC3801_B495	1	WPA2-PSK	📶	<input type="radio"/>
PRC3801_Burn-In	1	WPA2-PSK	📶	<input checked="" type="radio"/>
PROLiNK EAP	6	Disabled	📶	<input type="radio"/>

Connect to: PRC3801_Burn-In

Key: 8

Notice: The Repeater Wireless Key will be the same as your Wireless AP/Router after these settings.

2.4G SSID: PRC3801_Burn-In-ext

 
Refresh Save

Step 8. Click **Save** to proceed.

Note: The PEN1201 SSID will now change to follow your *home router SSID* with suffix "-ext". Following Step 7 example, the PEN1201 SSID will be changed to PRC3801_Burn-In-ext

2.4G SSID: PRC3801_Burn-In-ext

You may now move the PEN1201 to be in between your home router and Wi-Fi area which you intend to cover.

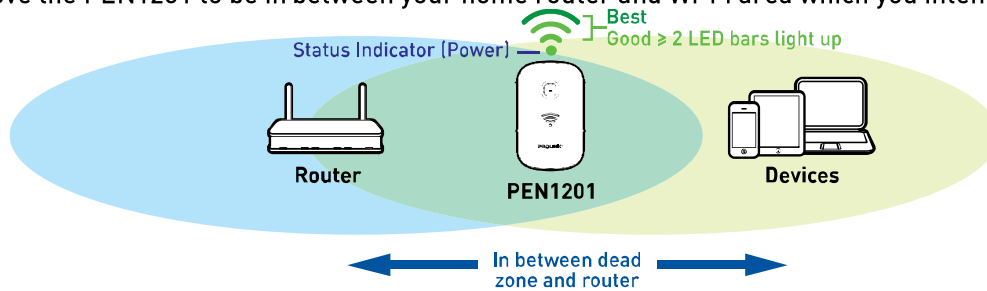

How to change Wi-Fi SSID / Password:

Step 1. Connect your device to the PEN1201 LAN port or PEN1201 SSID (default is PROLiNK_XXXXX or YourRouterSSID-ext)

Step 2. Launch a Web browser and type <http://pen1201.setup> (please do type out **http://**)

Step 3. Locate, Click **Wi-Fi Settings**, and proceed to change the SSID and/or Password

Step 4. Click **Save** to proceed

How to change Web Login Password:

Step 1. Connect your device to the PEN1201 LAN port or PEN1201 SSID (default is PROLiNK_XXXXX or YourRouterSSID-ext)

Step 2. Launch a Web browser and type <http://pen1201.setup> (please do type out **http://**)

Step 3. Locate, Click **Password Settings**, and proceed to set your new password accordingly

Step 4. Click **Save** to proceed

Note: This password is referring to the Web Interface Login password, not the Wi-Fi password.

How to set PEN1201 as Router / AP (Access Point):

Please download and follow the respective Setup Guide from the below link -

https://prolink2u.com/product/pen1201/#tab_download

