



Multimedia Keyboard



PKCM-2007



Plug & play



Spill-resistant



Durable keys



Comfortable keypad


































The full-sized USB plug and play keyboard is a simple and functional keyboard perfect for daily usage that is equipped with a number pad and 12 full convenient multimedia shortcuts.

Key Features



- 1 Multimedia Shortcuts**
12 full multimedia shortcuts let you control most-used media activities.
- 2 Full Size Keyboard**
Standard layout design, comfortable typing experience.
- 3 Spill Resistant**
Provides protection against fluid spills.
- 4 Windows Start Screen Key**
Simply press to view your apps and start screen.
- 5 USB Plug and Play**
Plug and play solution with no complicated keyboard installation.

Specifications

Interface	USB Interface												
Keys	104 Keys (12 FN Shortcuts)												
Key Switch	Membrane												
Colour	Black												
Cable	1.5m												
System Requirements	Windows 7, 8, 10												
Dimensions (LxWxH)	449 x 156 x 23mm (Product only)												
Weight	525g ± 10g												
Multimedia Functions	<p>To be used with FN key</p> <table border="0"> <tr> <td>F1  Media Player</td> <td>F7  Play/Pause</td> </tr> <tr> <td>F2  Decrease Volume</td> <td>F8  Stop</td> </tr> <tr> <td>F3  Increase Volume</td> <td>F9  Launch Web Browser</td> </tr> <tr> <td>F4  Mute</td> <td>F10  E-mail</td> </tr> <tr> <td>F5  Previous</td> <td>F11  My Computer</td> </tr> <tr> <td>F6  Next</td> <td>F12  Favorites</td> </tr> </table>	F1  Media Player	F7  Play/Pause	F2  Decrease Volume	F8  Stop	F3  Increase Volume	F9  Launch Web Browser	F4  Mute	F10  E-mail	F5  Previous	F11  My Computer	F6  Next	F12  Favorites
F1  Media Player	F7  Play/Pause												
F2  Decrease Volume	F8  Stop												
F3  Increase Volume	F9  Launch Web Browser												
F4  Mute	F10  E-mail												
F5  Previous	F11  My Computer												
F6  Next	F12  Favorites												

Authorised Distributor/ Reseller:

Compatible with:



System Requirements:
Windows 7/ 8/ 10