

PROLINK®

www.prolink2u.com

MODEL NO:
PRN3003L



Quick Start Guide

4G LTE Wireless Router

Version 1.10

([English](#) / [Indonesian](#))

BEFORE GETTING STARTED

This document is designed to aid you to get started with the device. If you experience problems following these guides or need further information pertaining to the device, please visit our website at www.prolink2u.com. All specifications are subject to the manufacturer's configuration at the time of shipping and may change without prior notice, written or otherwise.

1. Overview

 
This Quick Start Guide will help you setup the modem and connect to the Internet. Before proceeding with the installation, please prepare your internet account settings given by your Internet Service Provider.

Package Contents







- 1 x PRN3003L Router
- 1 x Power Adaptor
- 1 x RJ-45 cable
- 1 x Quick Start Guide

Product Overview

Front View




Indicators


Indicator	LED Status	Description
POWER 	Off	Power off or failure
	Light (Green)	Power on, normal operation
4G/3G LED 	Off (Green), Off (Red)	WAN is not in Mobile network mode or no signal at all
	Light (Green), Off (Red)	4G/3G LTE Good RSSI(131-198)
	Off (Green), Light (Red)	4G/3G LTE weak RSSI
INT LED 	Off	Internet Connection is down
	Light (Green)	Internet Connection is up
LAN Port LED 	Off	LAN port is Off
	Light (Green)	LAN port is on without data transporting
	Blink (Green)	LAN port is on with data transporting
WPS LED 	Off	WPS is inactive
	Light (Green)	WPS is active
Wi-Fi LED 	Off	WIFI Radio is Off
	Light (Green)	WIFI Radio is on without data transporting
	Blink (Green)	WIFI Radio is on with data transporting

1. Overview

 Rear View

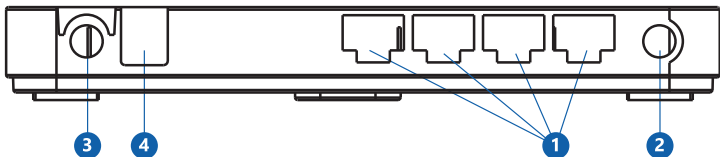

Side View

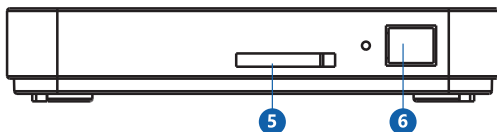 

- | | |
|---------------------------|---------------|
| 1. Ethernet ports (RJ-45) | 4. Power port |
| 2. LTE Antenna Jack | 5. SIM slot |
| 3. LTE Antenna Jack | 6. WPS button |

Installation

STEP 1

Hardware Installation

STEP 2

Web-based Configuration

 
Step 1: Hardware Installation.

Follow the direction to insert your (U)SIM card into the slot, connect the power adapter and switch on the device.

1.1 RJ45 Wired connection – connect the RJ45 cable into your PC/Laptop RJ45 Port.

1.2 Wireless connection – Use your normal Wi-Fi application on the client to search for the available wireless network. Select the SSID of your device (default SSID is PROLiNK_PRN3003L_XXXXX), and then click Connect. The default WiFi password printed on the sticker at the bottom of device.

2. Installation

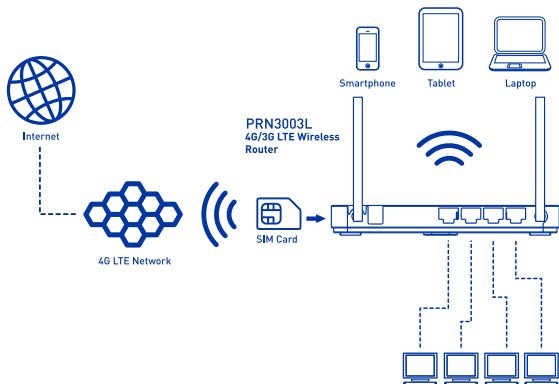


Step 2: Web-based Configuration.

Accessing the WebGUI Configuration Page

Make sure the connection between your device and the client is active. Launch the Internet browser and enter <http://192.168.123.254>.

 The login page will appear as follow.

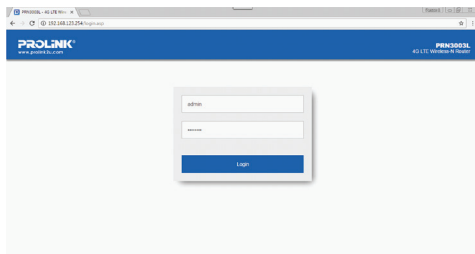


Key in the case-sensitive default login account "admin" and default password "password" then click Login to access the WebGUI configuration page.

The APN, Dial Number, Username, Password and Authentication will be automatically matched with your (U)SIM by default.

2. Installation

 Step 2: Web-based Configuration.

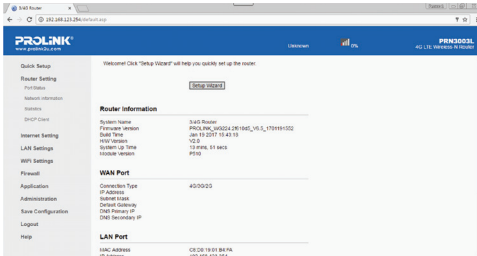


Note:

If the SIM card's APN cannot be found by Auto Mode, please un-tick Auto APN under Internet Setting>>WAN Setup and consult your operator on the APN name to be entered.

Quick Setup

 Quick Setup will guide you on setting up the basic parameters for your device in the safest way. After this procedure, you can use your Internet service.

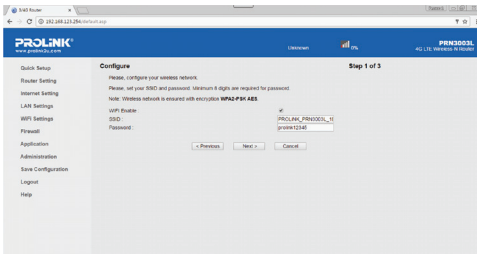

Router Setting

To check Port router status and statistics

Internet Setting

To set WAN and static route

LAN Settings

To change the router LAN IP and DHCP

WiFi Settings

To change the basic wireless network settings, Security and WPS

Firewall

To set Port forwarding, IP/MAC/URL filter, DMZ and System Security

Application

To send SMS, USSD, and set DDNS, NTP and PIN settings

Administration

To upgrade firmware, change login password and other admin operations

Save Configuration

To save the settings you have changed

1. Penjelasan

 
Panduan mudah ini akan membantu anda menseting modem hingga terkoneksi ke Internet. Sebelum proses instalasi di lakukan, harap menyiapkan Akun internet yang Anda dapatkan dari Internet Service Provider.

Isi Kemasan

- 1 x PRN3003L Router
- 1 x Kabel RJ-45
- 1 x Adaptor Power
- 1 x Panduan Mudah

Penjelasan Produk

Tampak Depan




Indikator


Indikator	Status LED	Keterangan
POWER 	Tidak menyala	Tidak menyala atau mengalami kerusakan
	Nyala (Hijau)	Menyala, Beroperasi dengan normal
4G/3G LED 	Off (Hijau), Off (Merah)	Modus Jaringan tidak ada Internet atau tidak ada signal
	Nyala (Hijau), Off (Merah)	Signal 4G/3G LTE bagus RSSI(131-198)
	Off(Hijau), Nyala (Merah)	Signal 4G/3G LTE lemah RSSI
INT LED 	Off	Koneksi Internet terputus
	Nyala (Hijau)	Terkoneksi Internet
LAN Port LED 	Off	Port LAN tidak Aktif
	Nyala (Hijau)	Port LAN Aktif tanpa ada komunikasi data
	Berkedip (Hijau)	Port LAN Aktif dan ada komunikasi data
WPS LED 	Off	WPS tidak Aktif atau tidak sedang digunakan
	Nyala (Hijau)	WPS Aktif
Wi-Fi LED 	Off	Radio WIFI tidak Aktif
	Nyala (Hijau)	Radio WIFI Aktif tanpa ada komunikasi data
	Berkedip (Hijau)	Radio WIFI Aktif dan ada komunikasi data

1. Penjelasan

 Tampak Belakang

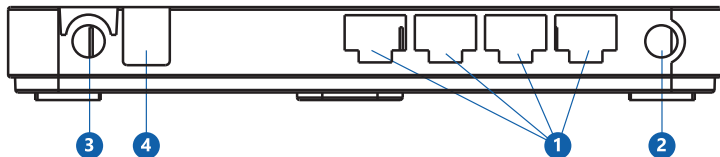

Tampak Samping

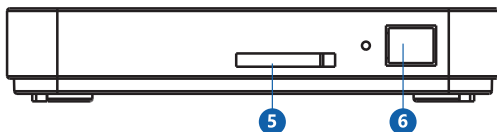 

- | | |
|--------------------------|---------------|
| 1. Port Ethernet (RJ-45) | 4. Port Power |
| 2. Jack LTE Antenna | 5. Slot SIM |
| 3. Jack LTE Antenna | 6. Tombol WPS |

Instalasi

Tahap 1

Instalasi Perangkat Keras

Tahap 2

Web-based Konfigure


Tahap 1: Instalasi Perangkat Keras.

Ikuti cara masukan kartu (U)SIM ke Anda ke selotnya, hidupkan perangkat.

1.1 Koneksi kabel RJ45 – Hubungkan kabel RJ45 ke port RJ45 PC/Laptop.

1.2 Koneksi jaringan nirkabel – Gunakan aplikasi yang biasa Anda gunakan pada computer atau perangkat wifi lainnya untuk mendeteksi jaringan nirkabel yang ada. Pilih SSID dari perangkat Anda (Standart pabrikan SSID adalah PROLiNK_PRN3003L_xxxxx), lalu klik Connect. Standart Sandi Wi-Fi dari pabrikan di cetak pada stiker pada bagian bawah perangkat.

 2. Instalasi

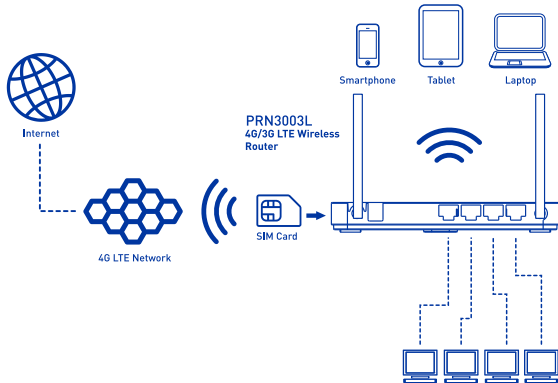


Tahap 2: Web-based Konfigurasi.

Akses halaman WebGUI Konfigurasi

Pastikan koneksi antara perangkat Anda dengan klien aktif. Buka peramban Internet dan ketikkan <http://192.168.123.254>.

 Halaman login akan tampil seperti di bawah ini.

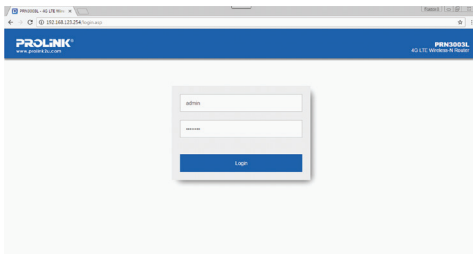


Akun sandi standart pabrik "admin" dan standart sandinya "password" lalu klik Login untuk masuk ke halaman WebGUI.

Secara standart APN, Dial Number, Username, kata sandi dan Authentikasi akan otomatis sama mengikuti dengan kartu (U)SIM Anda.

2. Instalasi

 Tahap 2: Web-based Konfigurasi.

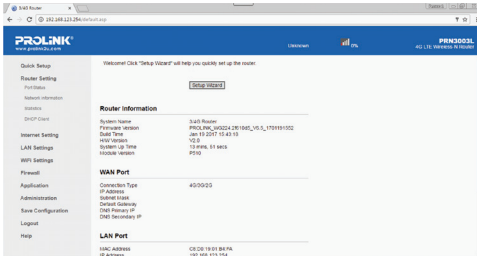


Catatan:

Jika pada modus Auto kartu SIM tidak dapat mendeteksi APN, harap un-tick Auto APN pada Internet Setting >> WAN Setup dan konsultasikan dengan operator kartu SIM Anda mengenai nama APN yang seharusnya di isikan.

Pengaturan Cepat

 Pengaturan Cepat akan memandu Anda dalam mengkonfigurasi dengan parameter standart perangkat Anda dengan cara yang aman. Setelah prosedur ini Anda dapat menggunakan internet .

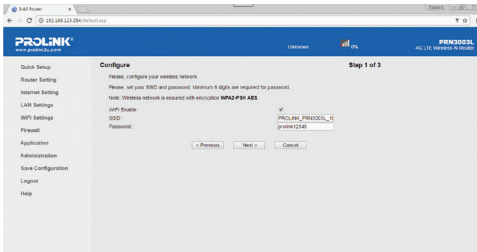

Router Setting

Untuk mengecek status Port router dan statistics

Internet Setting

Untuk mengatur WAN dan static route

LAN Settings

Untuk merubah LAN IP dan DHCP pada router

WIFI Settings

Untuk merubah standart pengaturan jaringan nirkabel, Security dan WPS

Firewall

Untuk pengaturan Port forwarding, IP/MAC/URL Iiter, DMZ dan System Security

Application

Untuk mengirim SMS, USSD dan mengatur DDNS, NTP dan pengaturan PIN

Administration

Untuk upgrade firmware, merubah sandi login dan pengoperasian admin lainnya

Save Configuration

Untuk menyimpan perubahan konfigurasi

Worldwide Customer Care Centers

INDONESIA Office

PT PROLiNK INTIDATA NUSANTARA

Walk-In : Jl. Cideng Barat No. 79, Jakarta Pusat 10150, Indonesia.

Telephone : +62 21 3483 1777

Email Support : support.id@prolink2u.com

MALAYSIA Office

FIDA SYSTEMS (M) SDN BHD

Walk-In : 29 Jalan USJ 1/31, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Telephone : +60 3 8024 9151

Email Support : support.my@prolink2u.com

SINGAPORE Office

FIDA INTERNATIONAL (S) PTE LTD

Walk-In : Block 16 Kallang Place #06-02, Kallang Basin Industrial Estate, Singapore 339156.

Telephone : +65 6357 0668

Email Support : support@prolink2u.com

Technical Support Hotline

INDONESIA : +62 21 3483 1717

MALAYSIA : +60 3 8023 9151

SINGAPORE : +65 6357 0666

Note: Closed on Saturdays, Sundays and local/regional Public Holidays.

Register Online For Your Product Warranty @ www.prolink2u.com/register

PROLiNK® is a trademark of FIDA INTERNATIONAL (S) PTE LTD and is manufactured under its authority. All other brands, products, services, logos and company names mentioned herein are trademarks of their respective owners. All specifications, designs and contents are subject to changes without prior notice. © Copyright 2017. PROLiNK® all rights reserved.

KETENTUAN GARANSI (for Indonesia region only)

PROLINK®
www.prolink2u.com

Kami mengucapkan terima kasih atas kepercayaan Anda memilih produk kami dan selaku distributor di Indonesia, kami memberikan garansi produk selama 1 (satu) tahun.

1. Garansi Hanya Berlaku Jika :

- Diisi dengan jelas, lengkap dan benar.
- Jika telah dikirimkan dan diterima oleh PT. Prolink Intidata Nusantara.
- Memperlihatkan kartu garansi asli dan nota pembelian pada saat klaim service.

2. Garansi Tidak Berlaku Apabila :

- Kerusakan yang disebabkan oleh, kelalaian pemakai, bencana alam, kebakaran, tegangan listrik yang terlalu tinggi / rendah, terkena cairan.
- Kerusakan yang diakibatkan karena transportasi / pengiriman, pemasangan / pengoperasian yang tidak sesuai dengan buku petunjuk, penyambungan dengan alat lain.
- Barang yang diservice tidak sesuai dengan kartu garansi.
- Serial number rusak / robek / tidak ada.

3. Ruang Lingkup Garansi :

- Garansi hanya mencakup bagian-bagian / komponen perangkat keras dari konfigurasi standar yang terdapat pada spesifikasi produk sesuai dengan faktur.
- Khusus netbook garansi baterai hanya berlaku selama 6 bulan sejak tgl. pembelian.

* Biaya pengiriman ditanggung pembeli



PROLINK®
www.prolink2u.com

Tempelkan perangkat
disini.
Hanya untuk pengeposan
di Indonesia

Kepada Yth.
Customer Service
PT. PROLINK INTIDATA NUSANTARA
Jl. Cideng Barat No.79
Jakarta Pusat 10150 - Indonesia



KARTU GARANSI
(for Indonesia region only)

No :**KARTU GARANSI / WARRANTY CARD***(for Indonesia region only)*

Barang : Data Comm Networking Netbook

Produk : UPS Display* Accessories

S/N :

Nama :
Name :

Model :

Alamat :
Address :

Tgl. Pembelian :
Purchase Date :

Dealer :
Toko :

Kota : **Kode Pos** :

Kota :
City :

Tel / Fax :

Email :

Pelanggan

PT. ProLink Intidata Nusantara

Cap Toko

Kartu Garansi harus diisi lengkap, kiriman paling lambat 14 Hari setelah Tgl. Pembelian / Please Fill - in Your Warranty Card Completely and Send max.14 day after Purchase
** Terdaftar No.2134/1.824.124*

Alamat Pengiriman : **PT. PROLINK INTIDATA NUSANTARA**
Address : **Jl. Cideng Barat No.79 Jakarta Pusat 10150 - Indonesia**

Telp. : (62-21) 34831777
Fax : (62-21) 34830788
Email : service@prolink.co.id

**No :****KARTU GARANSI / WARRANTY CARD***(for Indonesia region only)*

Barang : Data Comm Networking Netbook

Produk : UPS Display* Accessories

S/N :

Nama :
Name :

Model :

Alamat :
Address :

Tgl. Pembelian :
Purchase Date :

Dealer :
Toko :

Kota : **Kode Pos** :

Kota :
City :

Tel / Fax :

Email :

Pelanggan

PT. ProLink Intidata Nusantara

Cap Toko

Kartu Garansi harus diisi lengkap, kiriman paling lambat 14 Hari setelah Tgl. Pembelian / Please Fill - in Your Warranty Card Completely and Send max.14 day after Purchase
** Terdaftar No.2134/1.824.124*

Alamat Pengiriman : **PT. PROLINK INTIDATA NUSANTARA**
Address : **Jl. Cideng Barat No.79 Jakarta Pusat 10150 - Indonesia**

Telp. : (62-21) 34831777
Fax : (62-21) 34830788
Email : service@prolink.co.id