



Model No:  
DS-3105

# Quick Installation Guide

Dual-band home  
security camera  
(Pan/Tilt/Zoom)



Version 1.00  
(English | Indonesian)

Scan me:



## 1 Package Contents



x 1



 
x 1



x 1



x 1  
(Optional)



x 1




x 1

### Note:

1. The illustrations in this document may appear different from your product.
2. If any of the items above is not packed in your package upon opening, please consult your seller immediately.

## 2 Overview

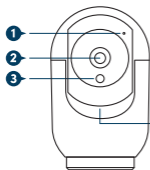


Front View




4

5

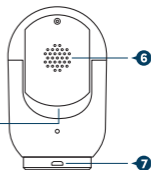

Rear View

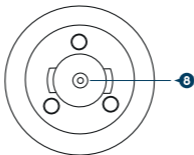

Bottom View

## Interface

- |                 |                      |                   |
|-----------------|----------------------|-------------------|
| 1. Microphone   | 4. Reset Button      | 7. micro USB Port |
| 2. Camera Lens  | 5. microSD Card Slot | 8. Mounting Slot  |
| 3. Light Sensor | 6. Speaker           |                   |

### Note:

The illustrations in this document may appear different from your actual product.

## 3 Getting Started

**Step 1.** Place the security camera and mobile phone within the radius of 1-3 feet of the router.

### Note:

- Make sure the phone is connected to the router wirelessly.
- Camera could operate at either 2.4 or 5GHz Wi-Fi. However, it is recommended to connect via 5GHz Wi-Fi band as Wi-Fi 2.4GHz might be congested in a busy Wi-Fi environment.

**Step 2.** Scan the QR code to download and install Prolink "mEzee" app, or search for it in Google Play or App Store.



## 4 Camera Setup

### A. Adding camera device to mobile app

- Step 1.** Power on the camera with the 5V 1A DC Power Adapter.
- Step 2.** Create an account or login to your account on the mEzee App.
- Step 3.** Click "Add Device" or "+" on the top right corner of the screen to add. Tap DS-3105 to start configuration.
- Step 4.** Follow the in-app instructions until the camera is connected to the Wi-Fi network successfully. Upon successful connection, you will see an "Added Successfully" screen.

## B. Positioning camera device


- i) The camera could be placed on any flat surface or mounted on the ceiling.
- ii) To mount the camera on the ceiling:
  - Fasten the mounting bracket with screw provided on the ceiling.
  - Slot the camera into the mounting bracket.

### Note:

- For physical placement, please do consider the router's wireless coverage. You may use another 2.4/5GHz Wi-Fi device at the intended location to test the Wi-Fi coverage and stability prior installing the camera.
- Please ensure that the mobile phone is connected to the Wi-Fi's 2.4 OR 5GHz (preferred) network during the setup.


## 5 microSD Card Storage (Optional)

Insert a microSD Card into the slot to enable recording function.

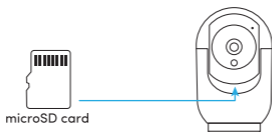


### How to insert microSD card

**Step 1.** Manually tilt the DS-3105's lens upwards until it reaches its maximum tilt angle.

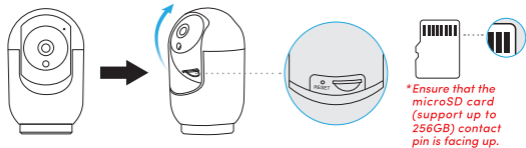





**Step 2.** Insert the microSD card into the card slot. The microSD card will be secured once you feel the “click”. Gently push the microSD card to eject it.

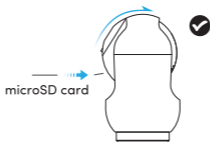

**Step 3.** Follow the steps below to select your preferred recording mode:

(a) Event Recording (default) – Please enable motion detection to use this mode.

(b) Non-Stop

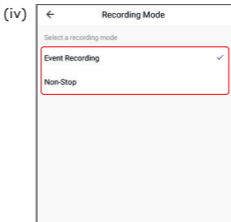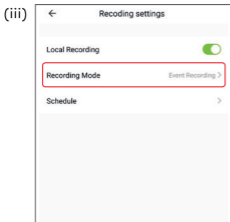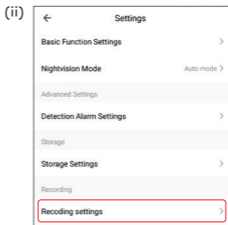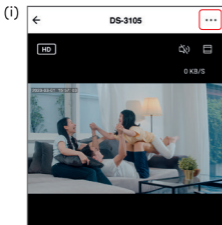

## 6 Frequently Asked Questions

### How can I share the camera access with family and friends?

Sharing of camera access with family and friends can be done using the mEzee app. Tap the "..." button found on the top right for advanced settings, and tap the "Share Device" button followed by the "Add Sharing" button to grant or revoke sharing permissions.

Note that all users will need to have a registered account on the mEzee app in order to gain access to the camera.

### How many cameras can I control?

The mEzee app can control an up to up to 200 smart home devices including cameras for multiple locations. However, your router may have a limitation on the number of devices connected to it.

### How do I rename the camera?

On the main device list on the mEzee app, tap on the camera you wanted to rename and "..." button found on the top right for advanced settings, and tap "DS-3105" found on the top to edit.

### What should I do when my camera appears offline or undetected?

Ensure that your Wi-Fi router is working and move your camera closer to the it. Subsequently, check that you have the latest firmware version by clicking "Check for firmware update" in your device settings using the mEzee app.

### What should I do if I am unable to connect my camera due to the location of my router?

You may consider adding a ProLink Wi-fi Extender to enhance and extend the Wi-fi coverage.

### Can I use the camera if my Wi-fi/ internet is down?

Cameras need to be connected to your home Internet if you want to get remote live streaming, motion detection alerts and other smart functions.

Note that even without the Internet, cameras with SD cards can still record on site. So, you will not miss any important moments captured by the CCTV security cameras without Wi-fi.

## 1 Isi Kemasan



x 1



x 1

 


x 1



x 1

(Opsional)



x 1




x 1

### Catatan:

1. Ilustrasi dalam dokumen ini mungkin tampak berbeda dari produk Anda.
2. Jika salah satu item di atas tidak dikemas dalam paket Anda saat dibuka, harap segera berkonsultasi dengan reseller Anda.

## 2 Keterangan Gambar

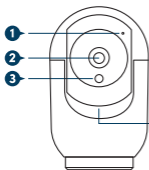


Tampak Hadapan




4

5

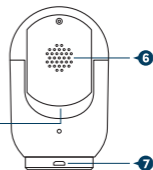

Tampak Belakang

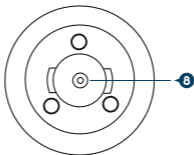

Tampak Bawah

## Antaramuka

1. Mikrofon
2. Lensa Kamera
3. Sensor Cahaya
4. Tombol Reset
5. Slot kartu microSD
6. Speaker
7. Port USB mikro
8. Slot Pemasangan

### Catatan:

Ilustrasi di dalam dokumen ini mungkin akan berbeda dari model perangkat yang Anda miliki.

## 3 Mulai

**Langkah 1.** Tempatkan kamera keamanan dan ponsel dalam radius 1–3 kaki router.

### Catatan:

- Pastikan ponsel terhubung ke router secara nirkabel.
- Kamera dapat beroperasi pada Wi-Fi 2,4 atau 5GHz. Namun, disarankan untuk terhubung melalui pita Wi-Fi 5GHz karena mungkin Wi-Fi 2.4GHz padat di lingkungan Wi-Fi yang sibuk.

**Langkah 2.** Pindai kode QR untuk mengunduh dan menginstal aplikasi Prolink "mEzee", atau cari di Google Play atau App Store.



## 4 Pengaturan kamera

### A. Menambahkan perangkat kamera ke aplikasi seluler

**Langkah 1.** Nyalakan kamera dengan Adaptor Daya DC 5V 1A.

**Langkah 2.** Buat akun atau masuk ke akun Anda di Aplikasi mEzee.

**Langkah 3.** Klik "Tambah Perangkat" atau "+" di sudut kanan atas layar untuk menambahkan. Ketuk DS-3105 untuk memulai konfigurasi.

**Langkah 4.** Ikuti instruksi dalam Aplikasi sampai kamera terhubung ke jaringan Wi-Fi dengan sukses. Setelah koneksi berhasil, Anda akan melihat layar "Berhasil Ditambahkan".



## B. Memosisikan perangkat kamera


- i) Kamera dapat ditempatkan pada permukaan datar atau dipasang langit-langit.
- ii) Untuk memasang kamera ke langit-langit:
  - Kencangkan braket pemasangan dengan sekrup yang disediakan di langit-langit
  - Masukkan kamera ke dalam braket pemasangan

### Catatan:

- Untuk penempatan fisik, harap pertimbangkan jangkauan nirkabel router. Anda dapat menggunakan perangkat Wi-Fi 2.4/5GHz lainnya di lokasi yang dimaksud untuk menguji jangkauan Wi-Fi dan stabilitas sebelum memasang kamera.
- Pastikan ponsel terhubung ke jaringan Wi-Fi 2.4 ATAU 5GHz (lebih disukai) jaringan selama pengaturan.


## 5 Penyimpanan Kartu microSD (Opsional)

Masukkan kartu microSD ke dalam slot untuk mengaktifkan fungsi perekaman.

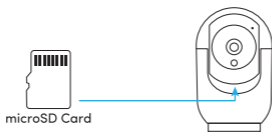


### Cara memasukkan Kartu microSD

**Langkah 1.** Miringkan lensa DS-3105 secara manual ke atas hingga mencapai sudut kemiringan maksimum.

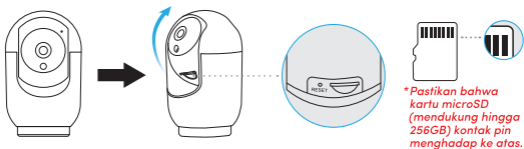





*\*Pastikan bahwa kartu microSD (mendukung hingga 256GB) kontak pin menghadap ke atas.*

**Langkah 3.** Masukkan kartu microSD ke dalam slot kartu. Kartu microSD akan diamankan setelah Anda merasakan “klik”. Dorong perlahan kartu microSD untuk mengeluarkannya.

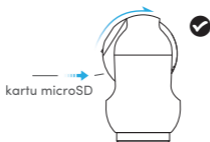

**Langkah 4.** Anda dapat memilih mode perekaman pilihan Anda sebagai berikut:

- (a) Perekaman Acara (default) - Harap aktifkan deteksi gerakan untuk gunakan mode ini.
- (b) Tanpa henti

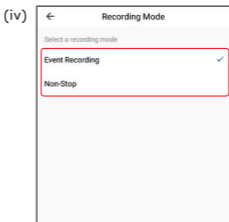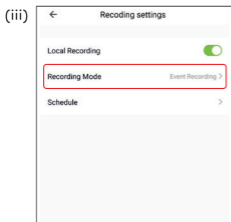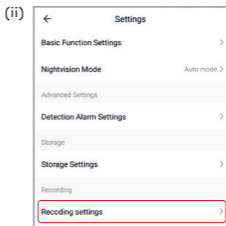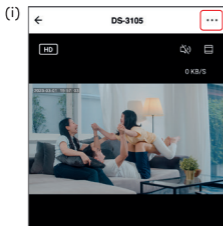

## 6 Pertanyaan yang Sering Diajukan

### **Bagaimana cara berbagi akses kamera dengan keluarga dan teman?**

Berbagi akses kamera dengan keluarga dan teman bisa dilakukan dengan menggunakan aplikasi mEzee. Ketuk tombol "... " yang ada di kanan atas untuk pengaturan lanjutan, dan ketuk tombol "Bagikan Perangkat" diikuti dengan tombol "Tambah Berbagi" untuk memberikan atau mencabut izin berbagi.

### **Berapa banyak kamera yang dapat saya kendalikan?**

Aplikasi mEzee dapat mengontrol hingga 200 perangkat rumah pintar termasuk kamera untuk beberapa lokasi. Namun, router Anda mungkin memiliki batasan jumlah perangkat yang terhubung dengannya.

### **Bagaimana cara mengganti nama kamera?**

Pada daftar perangkat utama di aplikasi mEzee, ketuk kamera yang ingin Anda ganti namanya dan tombol "... " ditemukan di kanan atas untuk pengaturan lanjutan, dan ketuk "DS-3105" yang ditemukan di bagian atas untuk mengedit.

### **Apa yang harus saya lakukan bila kamera saya terlihat offline atau tidak terdeteksi?**

Pastikan router Wi-Fi Anda berfungsi dan dekatkan kamera ke router tersebut. Selanjutnya, periksa apakah Anda memiliki versi firmware terbaru dengan mengklik "Periksa pembaruan firmware" di pengaturan perangkat Anda menggunakan aplikasi mEzee.

### **Apa yang harus saya lakukan jika saya tidak dapat menyambungkan kamera karena lokasi router saya?**

Anda dapat mempertimbangkan untuk menambahkan ProLink Wi-fi Extender untuk meningkatkan dan memperluas jangkauan Wi-fi.

### **Bisakah saya menggunakan kamera jika Wi-fi/internet saya mati?**

Kamera harus terhubung ke Internet rumah Anda jika Anda ingin mendapatkan streaming langsung jarak jauh, peringatan deteksi gerakan, dan fungsi cerdas lainnya.

Perhatikan bahwa bahkan tanpa Internet, kamera dengan kartu SD masih dapat merekam di tempat. Jadi, Anda tidak akan melewatkan momen penting yang ditangkap oleh kamera keamanan CCTV tanpa Wi-fi.

# Worldwide Customer Care Centers

## INDONESIA Office

Diimport oleh

PT PROLINK INTIDATA NUSANTARA

Walk-In : Jl. Cideng Barat No. 79, Jakarta Pusat 10150, Indonesia.

Telephone : +62 21 3483 1777

Sale Enquiries : sales.id@prolink2u.com

Technical Support : support.id@prolink2u.com

## MALAYSIA Office

FIDA SYSTEMS (M) SDN BHD

Walk-In : 29 Jalan USJ 1/31, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Telephone : +60 3 8024 9151

Sale Enquiries : sales.my@prolink2u.com

Technical Support : support.my@prolink2u.com

## SINGAPORE Office

FIDA INTERNATIONAL (S) PTE LTD

Walk-In : Block 16 Kallang Place #06-02, Kallang Basin Industrial Estate, Singapore 339156.

Telephone : +65 6357 0668

Sale Enquiries : sales@prolink2u.com

Technical Support : support@prolink2u.com

## Technical Support Hotline

INDONESIA : +62 21 3483 1717

MALAYSIA : +60 3 8023 9151

SINGAPORE : +65 6357 0666

**Note: Closed on Saturdays, Sundays and local/regional Public Holidays.**

**Register online for your Product Warranty at [www.prolink2u.com](http://www.prolink2u.com)**

Prolink is a registered trademark of Fida International (S) Pte Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Product images are purely for illustrative purposes and may defer from the actual product. Specifications are subjected to changes without prior notice. Copyright © 2023 Fida International (S) Pte Ltd.