



Model No:  
PEN1201

# Quick Installation Guide

Wi-Fi extender



Version 2.00  
(English | Indonesian)

## 1 Package Contents



x 1





x 1



x 1

## 2 Overview

### Physical Interface

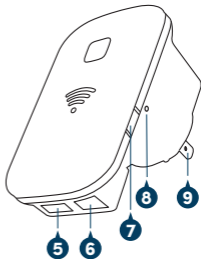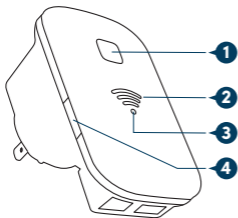

Dimension: 99\*60\*70mm

Weight: 88g

#### 1. WPS Button

- To connect with Wi-Fi Client: Press and release
- To connect with an existing Router's Wi-Fi: Press and hold for 6 seconds

## 2. Wi-Fi Signal Strength Indicator

## 3. Status Indicator

 
## 4. Operation Mode switch (Repeater, Access Point and Router)



## 5. WAN/LAN Port

## 6. LAN Port

## 7. Power Switch



## 8. RESET Button

- RESET • To reboot: Press and release
- To do Factory Reset to Default: Press and hold for 12 seconds

## 9. AC Power Input


## LED Indicators

Indicator	Status	Working Status
Status	OFF	Extender is turned Off / No Power
	ON	Extender is turned On
	Fast blinking	Extender is having data transmission
	Slow blinking	Triggering WPS
Wi-Fi Signal Strength	One LED Bar	Low Wi-Fi signal strength
	Two LED Bar	Good Wi-Fi signal strength
	Three LED Bar	Excellent Wi-Fi signal strength

### 3 Installation


#### How to set PEN1201 as Repeater/Extender:

##### Step 1: Set to Repeater Mode

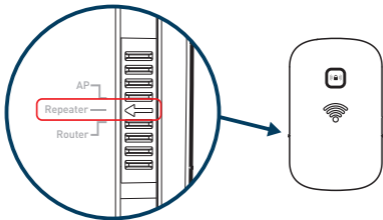


Step 2: Place the PEN1201 near your main Router for first time setup and turn it On

 Step 3: Connect your Wi-Fi Client (e.g. mobile phone) to the PEN1201 Wi-Fi SSID (Wi-Fi SSID and password can be found on the product label). Tap **Connect** if prompted the connected SSID doesn't have Internet access




Step 4: Launch Internet Browser and type  
**http://pen1201.setup** (please do type out **http://**)

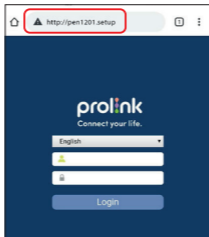

Step 5: Login to the Web GUI default username/password  
(default username: **admin**; default password: **password**)

Step 6: Click **Repeater Wizard**

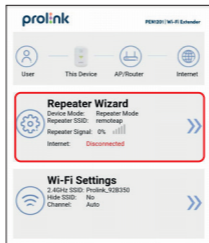

## Step 7: Select your **existing home Wi-Fi SSID** and enter the **Wi-Fi password**

JMName	2	WPA2-PSK	Signal Strength	Icon
Prolink_Wi-Fi	8	WPA-PSK/WPA2-PSK	Full	Selected
Aster9100-FAC2	1	WPA2-PSK	Low	
Jason Toy	6	WPA2-PSK	Medium	
Prolink_Wi-Fi	10	WPA-PSK/WPA2-PSK	High	

Connect to: Prolink\_Wi-Fi

Password: prolink12345 12

Notice: The Repeater Wireless Key will be the same as your Wireless AP/Router after these settings.

2.4GHz SSID: Prolink\_Wi-Fi-ext

Refresh Save


## Step 8: Click **Save** to proceed

**Note:** The PEN1201 SSID will now change to follow your home router SSID with suffix “-ext”. The Wi-Fi Password for PEN1201 will also follow your home router Wi-Fi password. Following Step 7 example, the PEN1201 SSID will be changed to **Prolink\_Wi-Fi-ext**

2.4GHz SSID: Prolink\_Wi-Fi-ext

Step 9: Wait for about 60 seconds for both Status and Wi-Fi Signal Strength indicators lit up, after which you may connect to **the new PEN1201 SSID** with the same home router Wi-Fi password

You may move the PEN1201 to be in between your home router and Wi-Fi area which you intend to cover

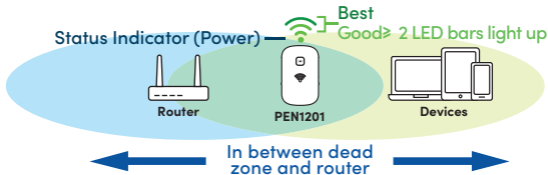

### How to change Wi-Fi SSID/Password:

- Step 1: Connect your device to the PEN1201 LAN port or PEN1201 SSID (default is ProLink\_XXXXX or Your RouterSSID-ext)
- Step 2: Launch a Web browser and type **http://pen1201.setup** (please do type out **http://**)
- Step 3: Locate, Click Wi-Fi Settings, and proceed to change the SSID and/or Password
- Step 4: Click Save to proceed

## How to change Web Login Password:

Step 1: Connect your device to the PEN1201 LAN port or PEN1201 SSID (default is Prolink\_XXXXX or Your RouterSSID-ext)

Step 2: Launch a Web browser and type **http://pen1201.setup** (please do type out **http://**)

Step 3: Locate, Click **Password Settings**, and proceed to set your new password accordingly

Step 4: Click **Save** to proceed

**Note:** This password is referring to the Web Interface Login password, not the Wi-Fi password

## How to set PEN1201 as Router/AP (Access Point):

Please download and follow the respective Setup Guide from the below link:

<https://prolink2u.com/networking/wifi-extender/pen1201/download/>





## 1 Isi Kemasan



x 1




x 1



x 1

## 2 Penjelasan

### Antara Muka Fizikal

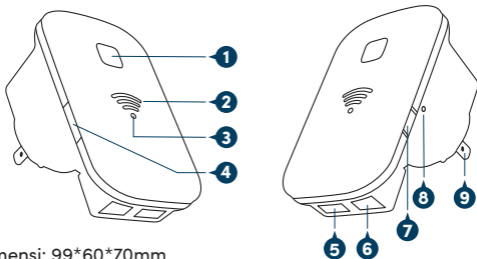

Dimensi: 99\*60\*70mm

Berat: 88g


#### 1. Tombol WPS

 - Untuk terhubung dengan Wi-Fi Client: Tekan dan lepaskan
- Untuk terhubung dengan Wi-Fi Router yang ada: Tekan dan tahan selama 6 detik

## 2. Indikator signal Wi-Fi

## 3. Indikator Status

## 4. Saklar mode Operasi (Repeater, Access Point and Router)



## 5. Port WAN/LAN

## 6. Port LAN

## 7. Switch Power



## 8. Tombol Reset

- RESET • To reboot: Press and release
- To do Factory Reset to Default: Press and hold for 12 seconds

## 9. Input Power AC


## Indikator LED

Indikator	Status	Status Saat Berjalan
Status	OFF	Extender tidak aktif/tidak ada daya
	ON	Extender aktif
	Berkedip cepat	Transmisi data
	Berkedip lambat	Memicu WPS
Kekuatan Signal Wi-Fi	Satu bar LED	Kekuatan signal Wi-Fi rendah
	Dua bar LED	Kekuatan signal Wi-Fi baik
	Tiga bar LED	Kekuatan signal Wi-Fi sangat bagus

### 3 Instalasi


#### Cara mengatur PEN1201 sebagai Repeater/Extender:

Langkah 1: Set ke Mode Repeater

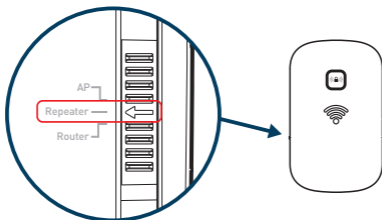


Langkah 2: Tempatkan PEN1201 di dekat Router Anda terlebih dahulu dan nyalakan

 Langkah 3: Hubungkan Wi-Fi Client Anda (mis. Ponsel) ke PEN1201 Wi-Fi SSID (Wi-Fi SSID dan password dapat ditemukan pada label produk). Tekan **Connect** jika diberitahu bahwa SSID yang terhubung tidak memiliki akses Internet.



Langkah 4: Luncurkan web browser dan masukkan **http://pen1201.setup** (harap ketikkan **http://**)

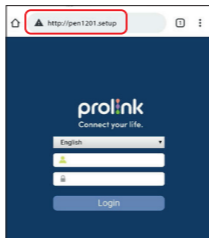

Langkah 5: Login ke Web GUI dengan default username/password (username: **admin**/password: **password**)

Langkah 6: Klik **Repeater Wizard**



## Langkah 7: Pilih **SSID Wi-Fi rumah** Anda dan masukkan **Wi-Fi password**

Repeater Wizard

JMB Home	2	WPA2-PSK	📶	🔵
ProLink_Wi-Fi	8	WPA-PSK/WPA2-PSK	📶	🔵
Ashley5105-IBC2	1	WPA2-PSK	📶	🔵
Jason Tap	6	WPA2-PSK	📶	🔵
ProLink_Wi-Fi	18	WPA-PSK/WPA2-PSK	📶	🔵

Connect to:

Password:  12

Notice: The Repeater Wireless Key will be the same as your Wireless AP/Router after these settings.

2.4GHz SSID:


## Langkah 8: Klik **Save**

**Catatan:** SSID PEN1201 akan berubah mengikuti SSID Wi-Fi rumah dengan suffix “-ext”. Wi-Fi Password PEN1201 juga akan mengikuti Wi-Fi Password router rumah Anda. Mengikuti contoh di langkah 7, SSID baru PEN1201 akan berubah jadi ProLink\_Wi-Fi-ext

2.4GHz SSID:

Langkah 9: Tunggu sekitar 60 detik untuk indikator Status dan Wi-Fi Signal Strength menyala, setelah itu Anda boleh menghubungkan Wi-Fi klien ke SSID baru PEN1201 dengan Wi-Fi Password router rumah Anda

Sekarang Anda boleh menempatkan PEN1201 diantara router dan Wi-Fi area yang mau di-cover.

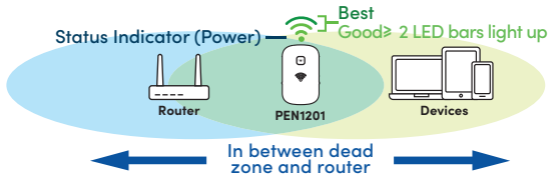

### Cara mengubah Wi-Fi SSID/Password:

Langkah 1: Hubungkan perangkat Anda ke LAN port PEN1201 atau SSID PEN1201 (ProLink\_XXXXX atau RouterSSID-ext)

Langkah 2: Buka Web browser dan masukkan **http://pen1201.setup** (harap ketikkan **http://**)

Langkah 3: Cari, Klik Wi-Fi Settings, dan lanjutkan untuk mengubah SSID dan/atau Password

Langkah 4: Klik **Save**

## Cara mengubah Web Login Password:

Langkah 1: Hubungkan perangkat Anda ke LAN port PEN1201 atau SSID PEN1201 (Prolink\_XXXXX atau RouterSSID-ext)

Langkah 2: Buka Web browser dan masukkan **http://pen1201.setup** (harap ketikkan **http://**)

Langkah 3: Cari, Klik **Password Settings**, dan lanjutkan untuk mengubah password Web GUI

Langkah 4: Klik **Save**

**Catatan:** Password yang disebutkan diatas mengacu pada Web GUI Password, bukan Wi-Fi Password

## How to set PEN1201 as Router/AP (Access Point):

Silakan unduh dan ikuti Pengaturan masing-masing dari:

<https://prolink2u.com/networking/wifi-extender/pen1201/download/>



# Worldwide Customer Care Centers

## INDONESIA Office

PT PROLINK INTIDATA NUSANTARA

Walk-In : Jl. Cideng Barat No. 79, Jakarta Pusat 10150, Indonesia.

Telephone : +62 21 3483 1777

Email Support : support.id@prolink2u.com

## MALAYSIA Office

FIDA SYSTEMS (M) SDN BHD

Walk-In : 29 Jalan USJ 1/31, 47600 Subang Jaya,  
Selangor Darul Ehsan, Malaysia.

Telephone : +60 3 8024 9151

Email Support : support.my@prolink2u.com

## SINGAPORE Office

FIDA INTERNATIONAL (S) PTE LTD

Walk-In : Block 16 Kallang Place #06-02,  
Kallang Basin Industrial Estate, Singapore 339156.

Telephone : +65 6357 0668

Email Support : support@prolink2u.com

## Technical Support Hotline

INDONESIA : +62 21 3483 1717

MALAYSIA : +60 3 8023 9151

SINGAPORE : +65 6357 0666

**Note: Closed on Saturdays, Sundays and local/regional Public Holidays.**

**Register online for your Product Warranty at [www.prolink2u.com](http://www.prolink2u.com)**

Prolink is a registered trademark of Fida International (S) Pte Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Product images are purely for illustrative purposes and may differ from the actual product. Specifications are subjected to changes without prior notice. Copyright © 2021 Fida International (S) Pte Ltd.