


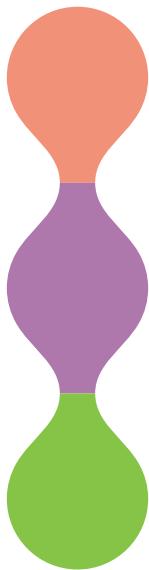

Model No:
PRN3006L


Quick Installation Guide

Smart 4G LTE
wireless router




Version 2.00
(English | Indonesian)

1 Package Contents

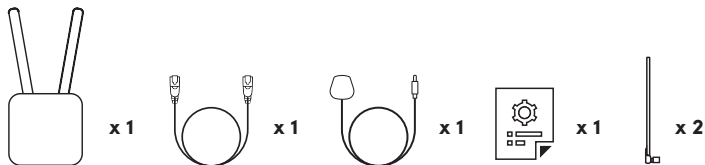


2 Overview


Front View

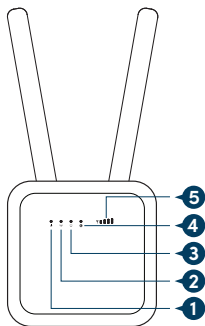

Rear View

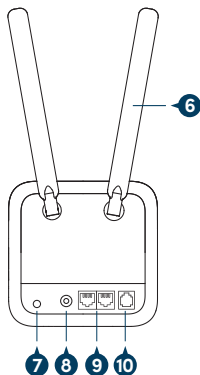

Bottom View

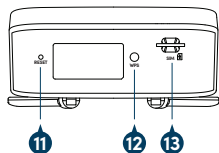






1. Power LED
2. Wi-Fi LED
3. LAN LED
4. Internet LED
5. Mobile Signal LED

6. Antenna
7. Power Button
8. DC Input
9. LAN Ports
10. Telephone Port
(Optional - only available on PRN3006L with voice)

11. Reset Button
12. WPS Button
13. SIM Card Slot

2 Overview

Indicators

| Indicator | LED Color | LED Status | Description |
|---|-----------|------------|---------------------------------------|
| POWER  | Off | Off | Device is OFF |
| | Green | On | Device is ON |
| Wi-Fi  | Off | Off | 2.4GHz Radio is disabled |
| | Green | On | 2.4GHz Radio is enabled |
| | Green | Blinking | 2.4GHz Client connected |
| LAN  | Off | Off | LAN Port disconnected |
| | Green | Blinking | LAN Port connected |
| Internet  | Red | On | Internet service is not available |
| | Green | On | 2G/3G network connected |
| | Green | Blinking | 2G/3G Internet Service is available |
| | Blue | On | 4G/LTE network connected |
| | Blue | Blinking | 4G/LTE Internet Service is available |
| Mobile Signal  | Green | On | 4 LED to indicate the signal strength |

3 Hardware Installation

STEP 1

Hardware Installation

STEP 2

Web Configuration

Step 1: Hardware Installation.


1. Insert the SIM Card into the slot per the direction shown in the bottom case of the PRN3006L

Notes:

- Usage of Micro/Nano-SIM card with unofficial adapter is not recommended
- Inserting SIM Card while the PRN3006L is powered on is not recommended


3 Hardware Installation

- [Optional – only applicable for PRN3006L with Voice] Connect the PRN3006L's telephone port to the telephone
- Connect the power adapter jack over to the PRN3006L's DC Input and switch ON
- Connect client to the 4G LTE Wireless Router through wired or wireless.
- For wired connection: Connect the PC / Laptop over to the PRN3006L's LAN Port
 - For wireless connection: Connect the Wi-Fi client over to the PRN3006L's default SSID (Prolink_PRN3006L_XXXXX) with default password (printed on the sticker)

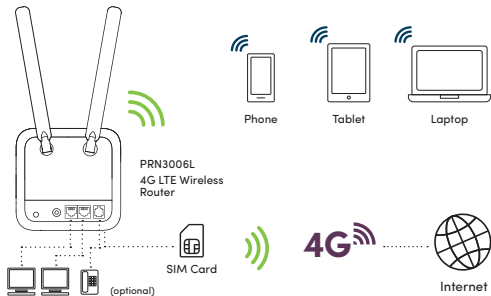

4 Web-based Configuration

- Ensure that your device (PC, Laptop, or Mobile device) is connected to the PRN3006L
- Launch Internet browser and enter <https://192.168.1.1> onto the address bar


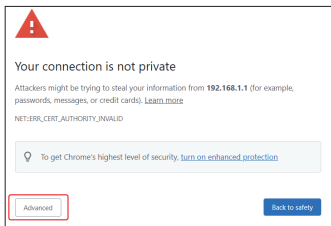


Note:

Due to local [https](https://192.168.1.1) with self-signed SSL certificate, the security warning message will be prompted when accessing <https://192.168.1.1>. Please click on "Advanced" then continue with "Proceed to 192.168.1.1 (unsafe)"

4 Web-based Configuration

- 4.3 Key in the login account and password (default username is "admin", password is printed on the device sticker)

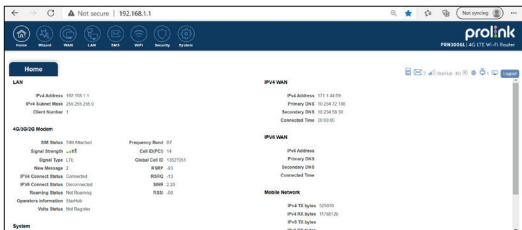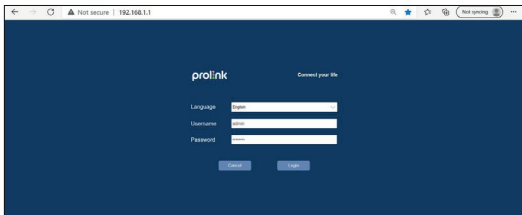

4. By default the APN, Dial Number, Username, Password and Authentication is automatically configured to match with your SIM Operator.

Tips:

1. In the event that the Internet connection is not available even after inserting SIM Card, configure the device as follows:

Step 1: Contact your Service Provider / Operator for APN setting information required for manual APN setting through the Web Configuration

Step 2: Launch Internet browser and go to <https://192.168.1.1>


Step 3: Click on WAN and navigate to APN Setting to key in all the information provided by the Service Provider / Operator

2. It is not recommended to insert SIM Card while PRN3006L is powered on

3. Note that Voice Support is only applicable to PRN3006L with Voice


4. For PRN3006L with Voice, VoLTE or Call-Switch function is subject to the subscription plan of the respective SIM Card

1 Isi Kemasan

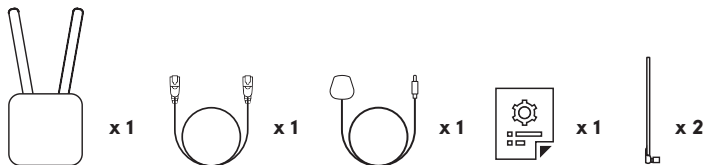


2 Keterangan Gambar


Tampak Hadapan

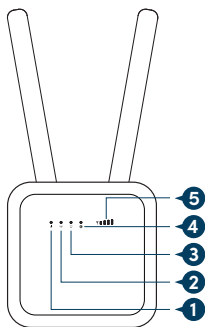

Tampak Belakang

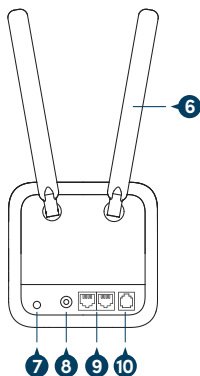

Tampak Bawah

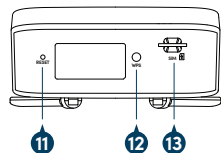






1. LED Power
2. LED Wi-Fi
3. LED LAN
4. LED Internet
5. LED Mobile Signal

6. Antenna
7. Button Power
8. DC Input
9. Port LAN
10. Port Telepon
(Opsional – hanya tersedia pada PRN3006L dengan suara)

11. Button Reset
12. Button WPS
13. Slot SIM Card

2 Keterangan Gambar

Indikator

| Indikator | Warna LED | Status LED | Keterangan |
|---|-----------|------------|---------------------------------------|
| POWER  | Off | Off | Device is OFF |
| | Green | On | Device is ON |
| Wi-Fi  | Off | Off | 2.4GHz Radio is disabled |
| | Green | On | 2.4GHz Radio is enabled |
| | Green | Blinking | 2.4GHz Client connected |
| LAN  | Off | Off | LAN Port disconnected |
| | Green | Blinking | LAN Port connected |
| Internet  | Red | On | Internet service is not available |
| | Green | On | 2G/3G network connected |
| | Green | Blinking | 2G/3G Internet Service is available |
| | Blue | On | 4G/LTE network connected |
| | Blue | Blinking | 4G/LTE Internet Service is available |
| Mobile Signal  | Green | On | 4 LED to indicate the signal strength |

3 Instalasi perangkat keras

STEP 1

Hardware Installation

STEP 2

Web Configuration

Langkah 1: Instalasi Perangkat Keras


1. Masukan Kartu SIM ke dalam slot SIM sesuai arah yang di tunjukan yang terdapat pada bagian bawah casing PRN3006L

Catatan:

- Gunakan kartu Micro/Nano-SIM card menggunakan adapter yang tidak resmi tidak di sarankan
- Masukan Kartu SIM pada saat PRN3006L sedang menyala tidak di sarankan


3 Instalasi perangkat keras

- [Opsional – Hanya dapat berfungsi untuk PRN3006L dengan Suara] Hubungkan Port telephone PRN3006L ke telephone
- Hubungkan Jack power adaptor ke Input DC PRN3006L dan nyalakan
- Hubungkan perangkat lain ke 4G LTE Wireless Router melalui jalur kabel atau nirkabel
 - Untuk Koneksi menggunakan kabel: Hubungkan PC / Laptop melalui Port LAN PRN3006L
 - Untuk koneksi nirkabel: Hubungkan klien Wi-Fi ke default PRN3006L SSID (Prolink_PRN3006L_xxxxx) dengan kata sandi default (tercetak di stiker)

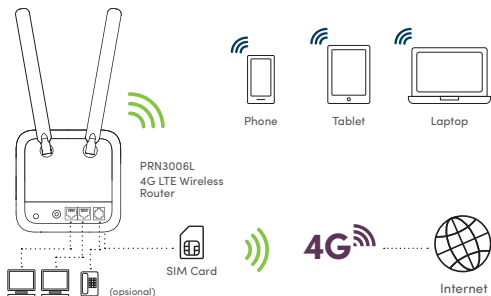

4 Konfigurasi Berbasis Web

- Pastikan perangkat (PC, Laptop, atau perangkat Mobile) terhubung ke PRN3006L
- Lalalkan peramban internet (Internet browser) dan masukkan <https://192.168.1.1> pada kolom alamat


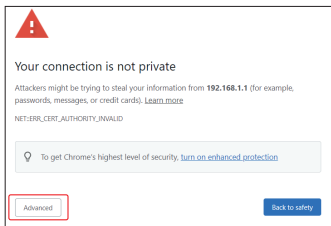


Nota:

Karena [https](https://192.168.1.1) lokal dengan sertifikat SSL yang ditandatangani sendiri, saat mengakses <https://192.168.1.1>, file pesan peringatan keamanan berikut akan muncul, klik "Advanced", lalu lanjutkan untuk mengklik "Proceed to 192.168.1.1 (unsafe)"

4 Konfigurasi Berbasis Web

4.3 Masukkan akun (User Name) pada kolom login dan kata sandi (akun / kata sandi Sandar adalah admin / password)

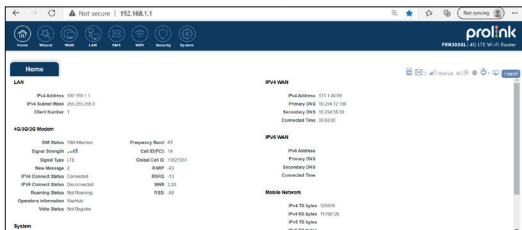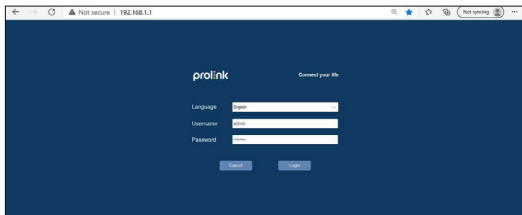

4. Secara default, APN, Nomor Panggil, Nama Pengguna, Sandi, dan Otentikasi secara otomatis dikonfigurasi agar sesuai dengan Operator SIM Anda

Tips:

1. Jika koneksi Internet tidak tersedia bahkan setelah memasukkan Kartu SIM, konfigurasi perangkat sebagai berikut:

- Langkah 1: Hubungi Penyedia Layanan / Operator Anda untuk informasi pengaturan APN yang diperlukan untuk APN manual pengaturan melalui Konfigurasi Web
- Langkah 2: Luncurkan browser Internet dan buka <https://192.168.1.1>
- Langkah 3: Klik WAN dan arahkan ke Pengaturan APN untuk memasukkan semua informasi yang disediakan oleh Layanan Penyedia / Operator

2. Tidak disarankan untuk memasukkan Kartu SIM saat PRN3006L dihidupkan

3. Perhatikan bahwa Dukungan Suara hanya berlaku untuk PRN3006L dengan Suara

4. Untuk PRN3006L dengan fungsi Suara, VoLTE, atau Call-Switch tunduk pada rencana berlangganan masing-masing Kartu SIM

Worldwide Customer Care Centers

INDONESIA Office

PT PROLINK INTIDATA NUSANTARA

Walk-In : Jl. Cideng Barat No. 79, Jakarta Pusat 10150, Indonesia.

Telephone : +62 21 3483 1777

Sale Enquiries : sales.id@prolink2u.com

Technical Support : support.id@prolink2u.com

MALAYSIA Office

FIDA SYSTEMS (M) SDN BHD

Walk-In : 29 Jalan USJ 1/31, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Telephone : +60 3 8024 9151

Sale Enquiries : sales.my@prolink2u.com

Technical Support : support.my@prolink2u.com

SINGAPORE Office

FIDA INTERNATIONAL (S) PTE LTD

Walk-In : Block 16 Kallang Place #06-02, Kallang Basin Industrial Estate, Singapore 339156.

Telephone : +65 6357 0668

Sale Enquiries : sales@prolink2u.com

Technical Support : support@prolink2u.com

Technical Support Hotline

INDONESIA : +62 21 3483 1717

MALAYSIA : +60 3 8023 9151

SINGAPORE : +65 6357 0666

Note: Closed on Saturdays, Sundays and local/regional Public Holidays.

Register online for your Product Warranty at www.prolink2u.com

Prolink is a registered trademark of Fida International (S) Pte Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Product images are purely for illustrative purposes and may differ from the actual product. Specifications are subjected to changes without prior notice. Copyright © 2021 Fida International (S) Pte Ltd.