INSTRUCTION GUIDE

(Please keep for future reference.)

PRIMO_® Deluxe Poppy Plus ™

Style # 408

UPC code: 734970004088

USA

Made In China

For Ages 12 Months to 5 Years

Natural Color Pine Wood

(High Chair converts to Table and Chair)

PRIMO®

149 Shaw Avenue Irvington, NJ 07111

Tel: (973) 926-5900 www.primobaby.com

PRIMO Deluxe Poppy Plus









WARNINGS

⚠ WARNING:

Prevent serious injury or death from falls or sliding out.

Never leave child unattended.

Always use the restraint system when using as a high chair.

Always keep child in view.

Do not use as a step stool.

Do not use with a booster seat.

Do not modify with accessories not provided by PRIMO.

AVERTISSEMENT:

Empêcher des blessures graves ou la mort par le chute ou glissement.

Ne jamais laisser l'enfant sans surveillance.

Toujours utiliser le système de sécurité.

Toujours surveiller l'enfant.

Ne pas utiliser comme tabouret.

Ne pas utiliser avec un rehausseur.

Ne pas modifier avec des accessoires non fournis par PRIMO.



ATENCION:

Evite las heridas graves o la muerte por caida a deslizamiento.

No dejar nunca solo al niño.

Usar siempre el sistema de seguridad.

Mantener siempre vigilado al niño.

No utilizarla como escalera.

No utilizarla con un asiento elevador.

No modificar la silla con accesorios que no sean los suministrados por PRIMO.

PARTS LIST

CHAIR TABLE

·	
2 Sides	2 Sides
1 Seat	1 Solid Table Top
1 Back Rest	2 Grooved Table Edges
1 Tray	1 Round Bar
5 Point Harness	1 Foot Rest Bar
8 Long Screws	8 Long Screws
2 Short Screws for Tray	1 Allen Wrench

(Assembly Time requires approximately 15-20 minutes)

CHAIR ASSEMBLY INSTRUCTIONS:

Line up the screw holes of one side of the seat and back rest to one of the chair sides and screw in place with the Allen wrench provided. Then screw the second chair side to the opposite side of the seat and back rest.

Attach the plastic hooks of the 5 point harness to the metal rings on the bottom of the back part of the seat. Loop the single short crotch strap through the harness buckle and also through the slot at the front of the chair seat. Then buckle the crotch strap tightly to its own buckle to complete the 5 point harness.

Please note that the 5 point harness should only be used when the Deluxe Poppy Plus is being used as a high chair. Remove the harness when using as a toddler table and chair combination.

TRAY ASSEMBLY INSTRUCTIONS:


Line up the chair arm rest and tray holes and screw in place with the 2 smaller screws using the Allen wrench provided.


TABLE ASSEMBLY INSTRUCTIONS:


Insert the table top into the grooves of one of the table frame sides and the 2 grooved table edges and screw in place. Line up the screw holes of the same frame side of the table with the foot rest bar and the round bar and screw in place. The foot rest bar will have a small dowel inserted into the table side and will have a larger dowel pointing to the underneath side of the table to help position the chair in place when using as a high chair. Insert the opposite second frame side into the grooved table edges, foot rest and round bar and screw in place with the Allen wrench provided.

To use the table as a base for the high chair, turn the table on its side with the solid table top at the back side of the high chair. Carefully lift the chair and position it into the table base using the large dowels to guide it into place.

CHAIR ASSEMBLY PHOTOGRAPHS:

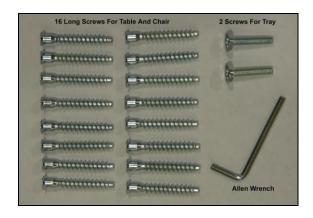

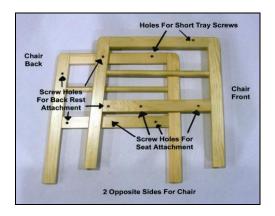

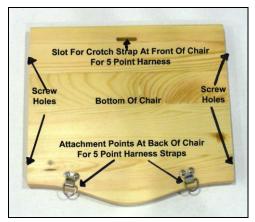




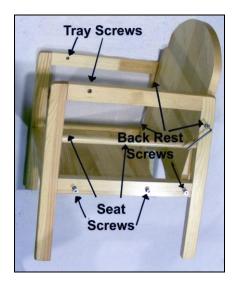









TABLE ASSEMBLY PHOTOS:

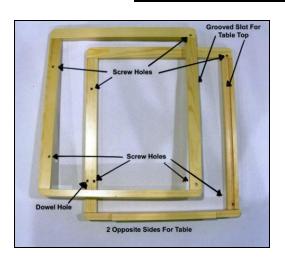









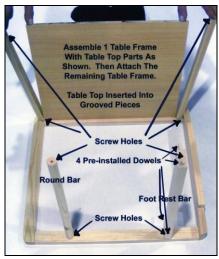

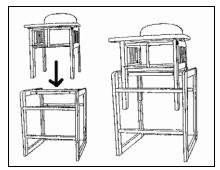

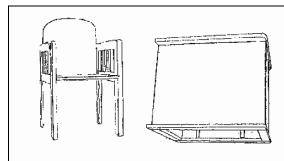

Product Care:

- Clean PRIMO® Deluxe Poppy Plus with damp (not wet) cloth. Dry surface thoroughly. Moisture will crack wood.
- With normal usage, wood gives slightly and screws may loosen a little. Please tighten screws regularly. Use on a level floor surface.

Limited Warranty: PRIMO® warrants to the original consumer purchaser that the PRIMO® Deluxe Poppy Plus will be free from defects resulting from material, design, missing parts or workmanship for 30 days from the original date of purchase. If any defect is discovered within 30 days of purchase by the original purchaser, contact PRIMO® for return authorization of parts or replacement. PRIMO® will, at its option, repair, send new parts or replace the product. This warranty does not apply to defects from normal wear and tear, product misuse, after market product alterations, or failure to follow assembly, use and care instructions supplied with the product. The warranty details above shall be in lieu of any and all other warranties. This warranty is valid only with an original dated receipt.