
primo Giggle Bounce

Deluxe Folding Baby Bouncer

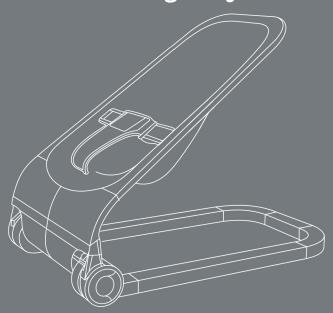

Assembled Dimmensions: 28" x 15.5" x 24.5"

Max Weight: 20lbs

Ages 0-6 Months

Primo
149 Shaw Ave Irvington NJ 07111

www.Primobaby.com
Tel: (973)-926-5900 Email: info@primobaby.com

SKU: PRI-990

LIMITED WARRANTY POLICY

PRIMO warrants that the PRIMO GIGGLE BOUNCE is accompanied with a LIMITED WARRANTY and is free from defects resulting from material, missing parts or workmanship for a period of 30 days from the date of the original purchase. This warranty only applies to the original purchaser of the product. This LIMITED WARRANTY does not apply to defects from normal wear and tear, product misuse, product abuse, after market alterations or failure to follow instructions supplied for assembly, use, maintenance and care of the product.

If any defect is discovered during the 30 day warranty period, please call (973) 926-5900 or e-mail info@primobaby.com with a description and photographs of the problem and a request for return authorization of parts or replacement. If PRIMO determines that a defect is covered by the LIMITED WARRANTY, PRIMO will, at its option, either repair, send new parts or replace the product. The LIMITED WARRANTY extends to repaired and replacement products and components only through the end of the original 30 day LIMITED WARRANTY period from the original date of purchase. When authorization is issued for replacement or parts, please send the product (postage pre-paid) to:

149 Shaw Avenue Irvington, NJ 07111 USA

The warranty details above shall be in lieu of any and all other warranties.

ALL OTHER WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY EXPRESSLY DISCLAIMED.

This warranty is valid only with an original receipt.

Your remedies under this warranty are limited to repair or replacement of the product or components of the product as determined by PRIMO. In no event will PRIMO or any of its retailers, dealers, distributors or resellers be liable for incidental, indirect or consequential damages relating to the product (including any repaired or replacement products or replacements components) or its use.

To activate this LIMITED WARRANTY, the purchaser must complete the enclosed product registration card and have it returned to the PRIMO address on the enclosed warranty registration card within thirty (30) days of the original purchase date.

Care Instructions



Read all instructions before use of the infant bouncer seat.

Keep instructions for future use.

Do not use this infant bouncer seat if it is damaged or broken.


Care Instructions:

Spot clean fabric cover with mild detergent (e.g. soap). For tougher stains, cover can be removed and hand washed in cold water with a mild detergent. Hang to dry. Do not use bleach or other strong ammonia-based cleaners. Do not use washing machine or dryer.


Frame and plastic components can be washed with wet cloth and mild detergent. Wipe dry after washing. Store in a dry place away from moisture.

Mesh Fabric is 100% Polyester

Parts List

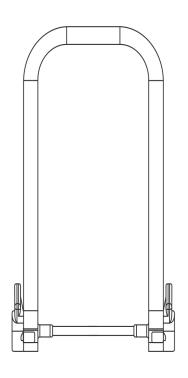




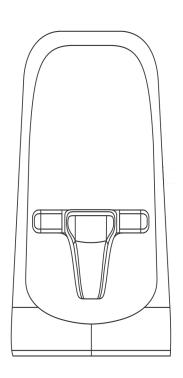


Frame & Fabric Cover


Assembly Instructions

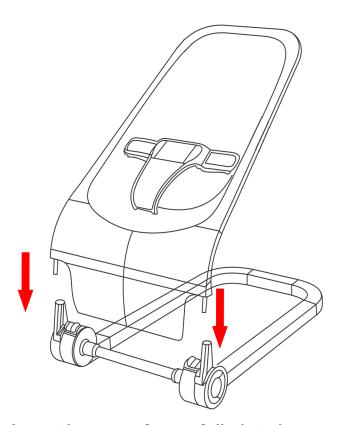


1. Insert bouncer frame fully into bouncer base on each side. Ensure that the bouncer frame is fully inserted by pushing down firmly on each side.

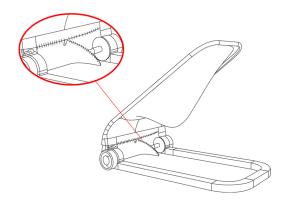


2. Pull fabric cover over and around the middle bar of the frame and zip cover closed. Bouncer seat will be tightly fitted. Ensure that zipper is fully closed and the cover is tightly fitted by pressing on seat.

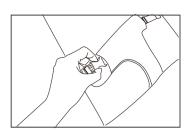

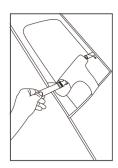


3. To use safety harness: Pull harness straps out from center of restraints and buckle each side. Adjust the harness straps to fit snug to baby by pulling on straps until secure on each side.

Recline Adjustment

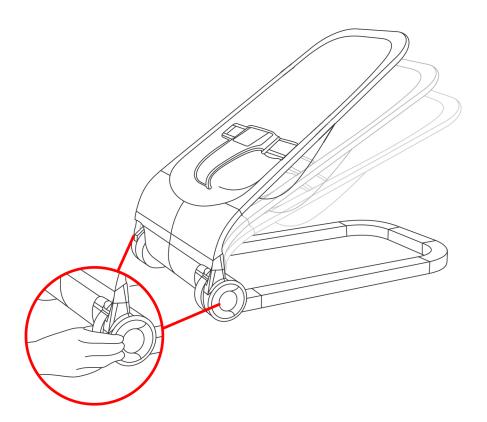

4. Do not adjust recline position when baby is in bouncer. To adjust recline position, press in button on each side of frame simultaneously and move to desired reclined position. Ensure that bouncer has locked into place and is even on each side by pressing down firmly on the seating area with your hands prior to use by your baby.

Storage Instructions

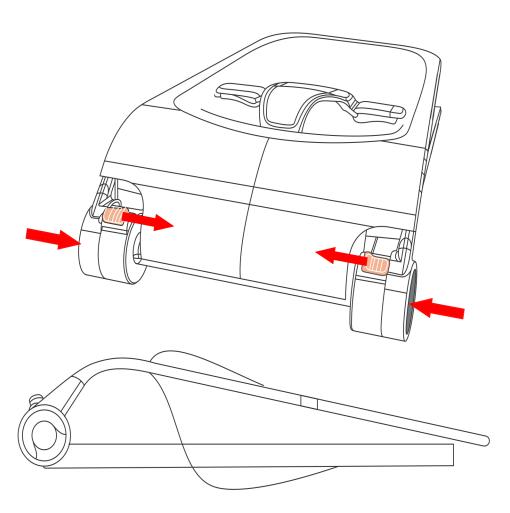

5. To store bouncer: push in both recline adjustment buttons on each side while pushing inner locks toward center to fold bouncer flat.

WARNING

Fall Hazard: Babies have suffered <u>skull fractures</u> falling while in and from bouncers.

- Use bouncer ONLY on floor.
- ALWAYS use restraints and adjust to fit snuggly.
- NEVER lift or carry baby in bouncer.

AWARNING

Suffocation Hazard: Babies have <u>suffocated</u> when bouncers tipped over on soft surfaces and/or when bouncers have been used as a sleep product.

- NEVER use on a bed, sofa, cushion, or other soft surface.
 - Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

To prevent falls and suffocation:

- ALWAYS use restraints and adjust to fit snuggly.
- STOP <u>using bouncer</u> when baby starts trying to sit up or has reached 20lbs, whichever comes first.

PRIMO 149 Shaw Ave. Irvington NJ 07111 Tel: (973) 926-5900 SKU: PRI-990 Serial: 062023