


primo®

Cozy Tot Deluxe Convertible Folding High Chair

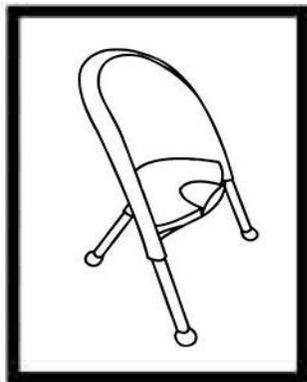

PRI-430 Ages: 6-36 Months

Dimensions: 22.5" x 21" x 33.5" / 57cm x 53cm x 85cm

PRIMO 149 Shaw Avenue Irvington, NJ 07111 USA

www.primobaby.com

———— DIRECTIONS FOR USE ————

⚠ WARNING



WARNING

FALL HAZARD: Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.

- 1) Always use restraints, and adjust to fit snugly.
- 2) Tray is not designed to hold child in chair.
- 3) Stay near and watch child during use.

DANGER DE CHUTE: Les enfants ont souffert de graves blessures à la tête, y compris des fractures du crâne en tombant des chaises hautes.

- 1) Utilisez toujours des dispositifs de retenue et ajustez-les pour bien les ajuster.
- 2) Le plateau n'est pas conçu pour tenir l'enfant dans une chaise.
- 3) Les chutes peuvent survenir soudainement si l'enfant n'est pas retenu correctement.

PELIGRO DE CAÍDA: Los niños han sufrido lesiones severas en la cabeza,

incluyendo fracturas de cráneo que caen de las sillas altas. Las caídas pueden ocurrir repentinamente si el niño no está sujeto adecuadamente.

- 1) Siempre use restricciones y ajústelas para que se ajusten bien.
- 2) La bandeja no está diseñada para sostener al niño en la silla.
- 3) Permanezca cerca y mire al niño durante el uso.

primo[®]


Cozy Tot Deluxe

Model #: 430 Serial #: 052018
Ages: 6-36 Months Max: 30 Lbs/13 Kg
Made in China


149 Shaw Avenue Irvington, NJ 07111 USA
www.primobaby.com Tel: (973) 926-5900

Parts List


1. Footrest and Wide Extension Tube

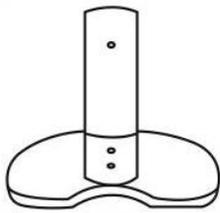


2. Double Feeding Tray

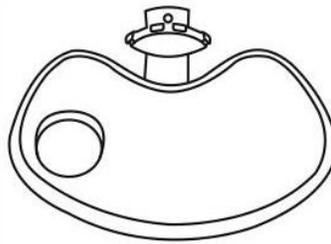

3. Seat & 3 Point Safety Harness

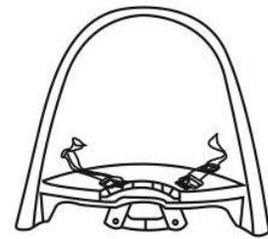


4. Two Longer Bottom Front Legs

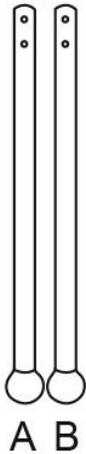

5. Two Shorter Bottom Back Legs



6. Four Upper Legs

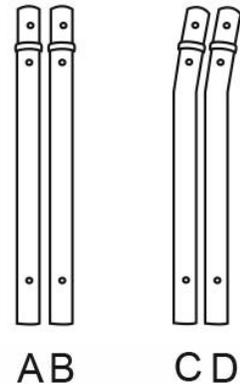

7. Seat Guard Insert for Use Without Feeding Tray and Without 3 Point Harness




3 Point Harness Instructions




Insert side waist straps into center crotch strap buckle and tighten to fit child.

Installation of High Chair Legs

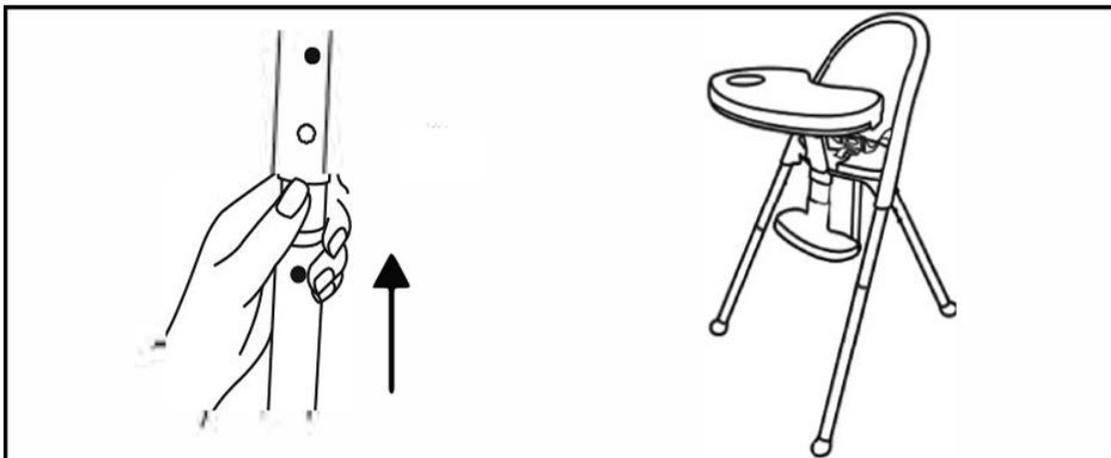


Push the bottom legs into the upper legs one at a time. Make sure the button pin snaps into place in the hole. Insert assembled bottom/upper legs into seat of chair. Make sure the button pins snap into the seat. The shorter legs are the back legs of the chair. The longer legs are the front legs of the chair.

Installation and Removal of Double Feeding Tray

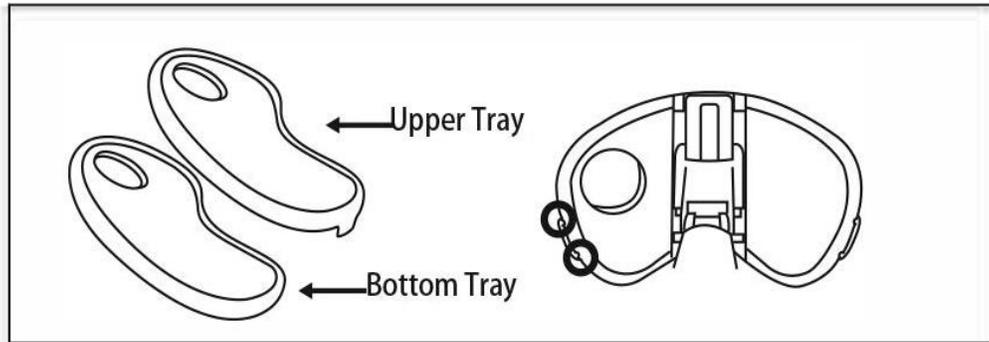


Use both hands to grip the left and right sides of the top layer of the feeding tray and gently pull away from the bottom feeding tray to release and separate the top tray.

Footrest Installation

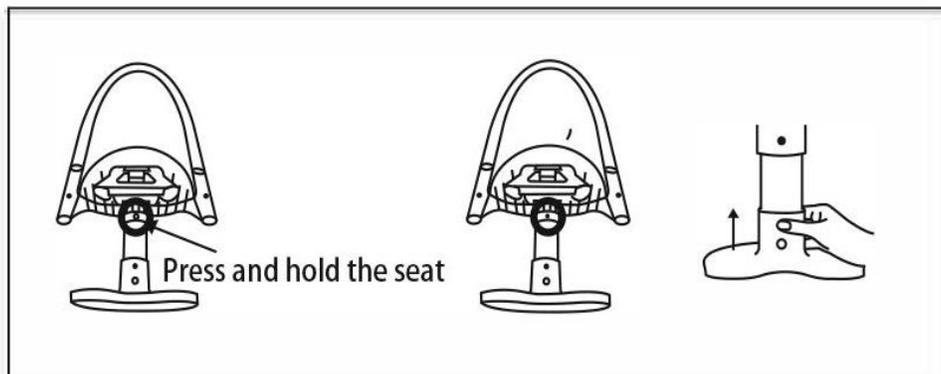


Press the upper button pin and insert wide extension tube into the seat until the button pin snaps into place in the hole in the seat. Press the bottom button pin of the wide tube and adjust the footrest at the same time until the button pin snaps into the hole of the footrest.

Tray Adjustment Instructions

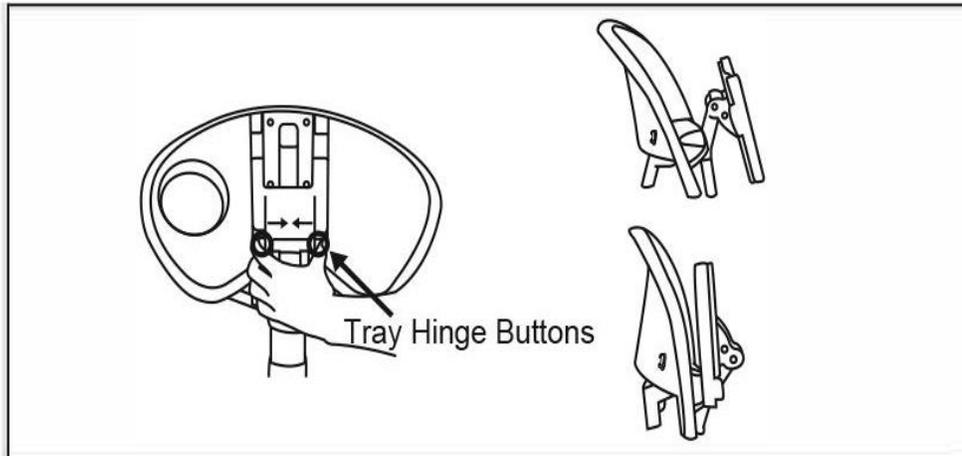


Tray Adjustment: Press buttons on both sides under the tray at the same time to tilt the feeding tray upward or downward. Move tray down before placing child into seat. Fold feeding tray to up position before folding for storage.

To move the feeding tray closer or further away from child, press center adjustment button under tray and slide tray into position.

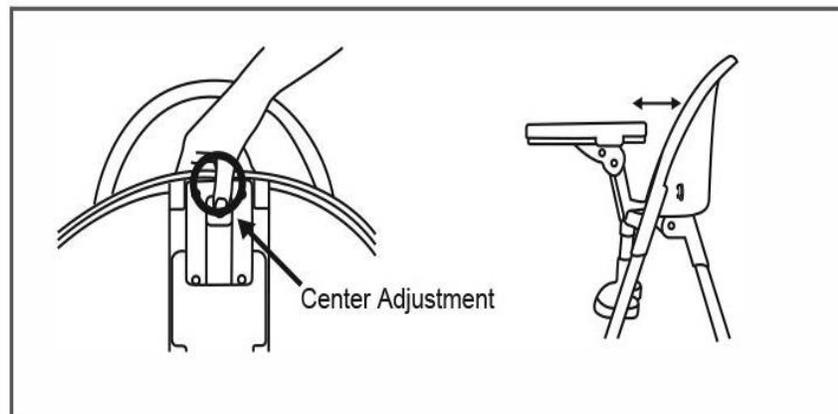


Folding Chair

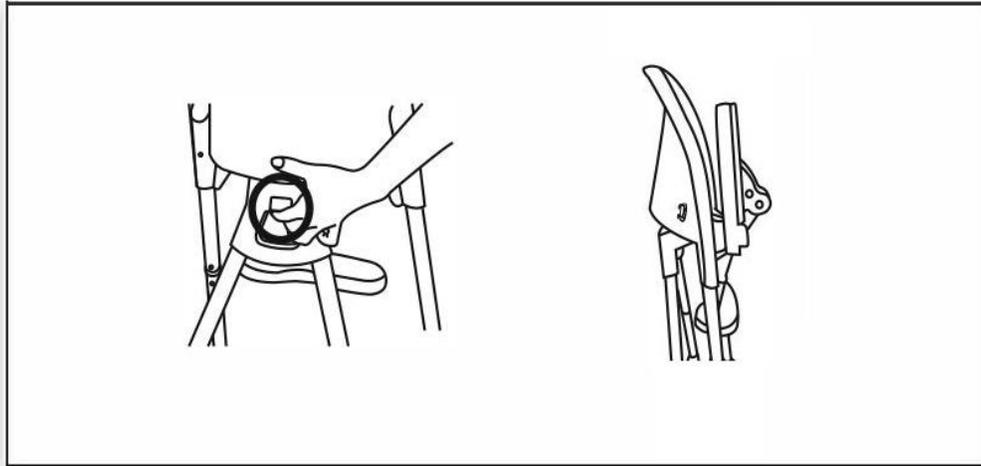

Pull the fold button at back of chair and extend or retract the legs until legs are locked into open or closed position.


Installing Feeding Tray

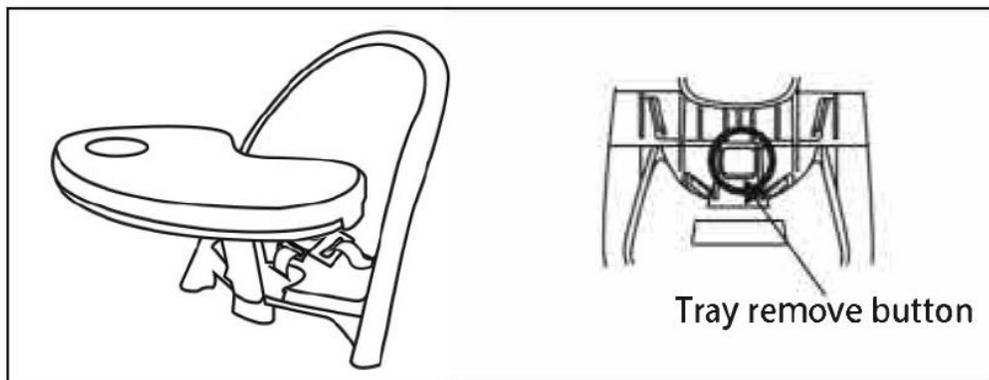

Install: Slide the tray into the grooved part of seat until the button is totally locked as in the right drawing above.


Uninstall: Press the button under the seat and pull out the tray base at the same time to remove tray.

Installation of Toddler Seat Guard

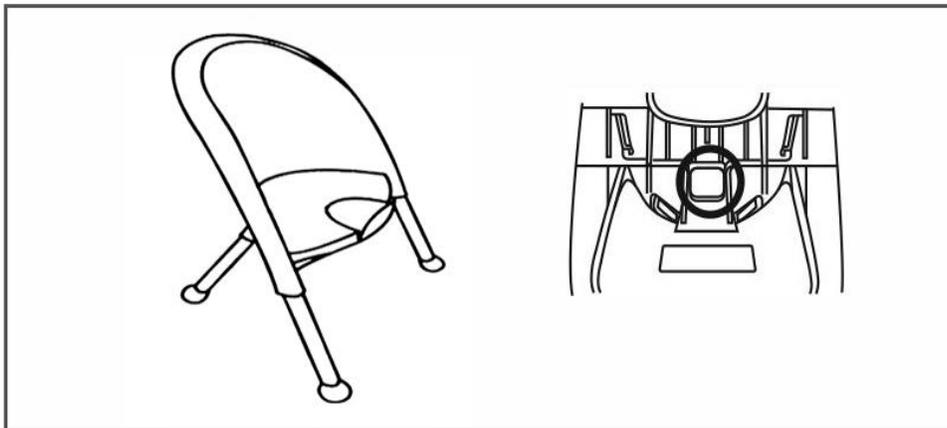

For older children who do not need feeding tray or support of 3 point safety harness and chair is in the lowest position. Push the seat guard plate into the groove of the seat of the high chair until it locks into place. 3 point harness can not be used with the toddler seat guard.

Toddler Chair Modification

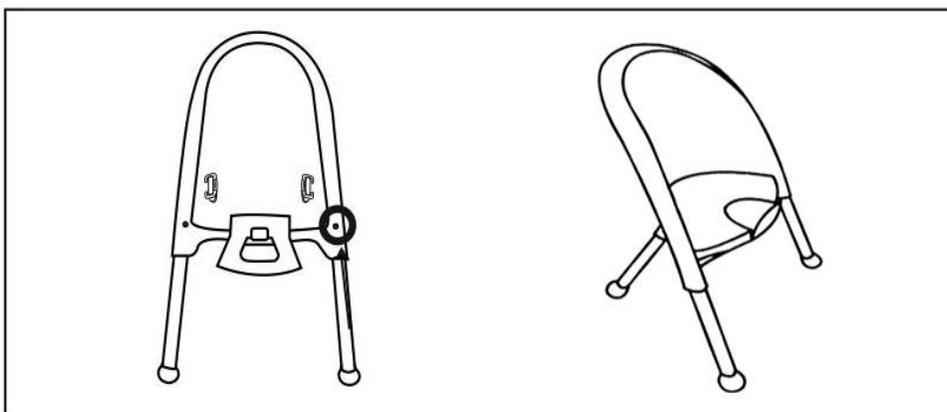

Install the bottom legs only. Make sure that bottom leg button pins snap into place in the holes of the seat. Bottom front legs are longer than bottom back legs. 3 point harness can not be used without tray.

Instalación de protector de asiento para niños pequeños

- Empuje la placa del asiento protector en la ranura del asiento de la silla alta hasta que encaje en su lugar

Instalación de las piernas de la silla alta

- Empuje las patas inferiores hacia la parte superior de las piernas, una a la vez. Asegúrese de que el pasador de botón encaje en su lugar. El par de patas más cortas son las patas traseras de la silla.

Instalación de la bandeja de alimentación doble

- Use ambas manos para agarrar los lados izquierdo y derecho de la capa superior de la bandeja de alimentación y sepárela de la capa inferior de la bandeja de alimentación.

Instrucciones de arnés de seguridad de 3 puntos

- Enchufe las correas de cintura laterales en la correa central y apriete para que queden bien ajustadas.

Instrucciones de ajuste de la bandeja

- Presione los botones debajo de la bandeja en ambos lados al mismo tiempo para inclinar la bandeja de alimentación hacia arriba o hacia abajo. Para mover la bandeja de alimentación más cerca o más lejos del bebé, presione el botón de ajuste central y deslícela hacia su posición. Nota: Deslice la bandeja de alimentación hacia afuera del asiento antes de plegarla en la posición de almacenamiento.

Instrucciones plegables

- Tire del botón de doblar hacia atrás y extienda o retraiga las patas hasta que quede trabado en su lugar

Instalación de la bandeja de alimentación

- Instalar: deslice la bandeja en la parte ranurada del asiento hasta que el botón quede totalmente bloqueado en su lugar
- Desinstalar: presione el botón en la parte inferior de la bandeja y saque la bandeja de la ranura en el asiento.

Installation de garde de siège d'enfant en bas âge

- Poussez la plaque du protège-siège dans la rainure du siège de la chaise haute jusqu'à ce qu'elle s'enclenche.

Installation de jambes de chaise haute

- Poussez les pieds inférieurs dans les jambes, un à la fois. Assurez-vous que la broche du bouton s'enclenche. La paire de jambes plus courtes sont les pattes arrière de la chaise.

Installation du bac d'alimentation double

- Utilisez les deux mains pour saisir les côtés gauche et droit de la couche supérieure du plateau d'alimentation et éloignez-vous de la couche inférieure du plateau d'alimentation.

Instructions de harnais de sécurité à 3 points

- Branchez les sangles latérales dans la sangle centrale et serrez-les pour bien les ajuster

Instructions d'ajustement du bac

- Appuyez en même temps sur les boutons situés sous le plateau des deux côtés pour incliner le plateau d'alimentation vers le haut ou vers le bas. Pour rapprocher ou éloigner le plateau d'alimentation du bébé, appuyez sur le bouton de réglage central et faites-le glisser en position. Remarque: Faites glisser le plateau d'alimentation hors du siège avant de le replier dans la position de rangement.

Instructions de pliage

- Tirez sur le bouton de rabattement arrière et étendez ou rétractez les jambes jusqu'à ce qu'elles soient verrouillées en place.

Installation du plateau d'alimentation

- Installation: Faites glisser le plateau dans la partie rainurée du siège jusqu'à ce que le bouton soit complètement verrouillé en place.
- Désinstallation: appuyez sur le bouton situé au bas du bac et retirez le bac de la rainure du siège.

LIMITED WARRANTY POLICY

PRIMO® warrants that the PRIMO® Cozy Tot Deluxe is accompanied with a limited warranty and is free from defects resulting from material, missing parts or workmanship for a period of 30 days from the date of original purchase. This warranty only applies to the original purchaser of the product. This LIMITED WARRANTY does not apply to defects from normal wear and tear, product misuse, product abuse, after market alterations or failure to follow instructions supplied for assembly, use, maintenance and care of the product.

If any defect is discovered during the 30 day warranty period, please call (973) 926-5900 or e-mail info@primobaby.com with a description of the problem and a request for return authorization of parts or replacement. If PRIMO® determines that a defect is covered by this limited warranty, PRIMO® will, at its option, either repair, send new parts or replace product. The Limited Warranty extends to repaired and replacement products and components only through the end of the original 30 day limited warranty period from the original date of purchase. When authorization is issued for replacement or parts, send (postage prepaid) to:

PRIMO
149 Shaw Avenue
Irvington, NJ 07111 USA

The warranty details above shall be in lieu of any and all other warranties.
ALL OTHER WARRANTIES, INCLUDING IMPLIED WARRANTIES OF
MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY
EXPRESSLY DISCLAIMED.

This warranty is valid only with an original dated receipt.

Your remedies under this warranty are limited to repair or replacement of the product or components of the product as determined by PRIMO®. In no event will PRIMO® or any of its retailers, dealers, distributors or resellers be liable for incidental, indirect or consequential damages relating to the product (including any repaired or replacement products or replacement components) or its use.

To activate this limited warranty, the purchaser must complete the enclosed product registration card and have returned it to the PRIMO® address on the enclosed warranty registration card within thirty (30) days of the original purchase date.