

Cooker Hood 6072
Auto Clean 90 cm 1400

GLEN


Live Better !



4TH Generation
Auto Clean System

USER'S GUIDE

IDENTIFYING YOUR CHIMNEY

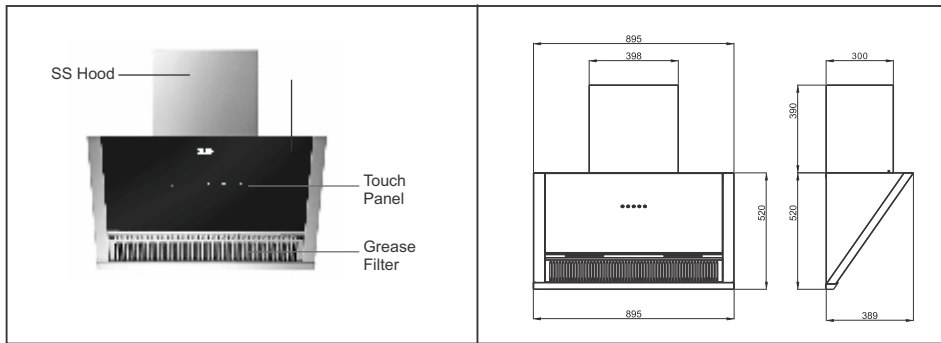

The body of your Glen chimney is made up of high quality Stainless Steel. The Chimney body is warranted against rust formation for life time.

SETTING UP YOUR CHIMNEY

The chimney must be mounted over the center of the cooking area. The minimum distance between the cooktop and the bottom of the chimney must be 750 mm.

Please ensure that the wall on which the chimney is being installed is level properly if not either get it leveled or install the chimney on a leveled 1/2 " plywood

Attach the spigot to the hood using the four screws. In a few models the spigot may already be mounted.

Fastening the chimney to the wall


Mark the position of the holes on the wall. Before drilling make sure that no wiring and tubes will be damaged. Drill two fastening holes, drive in the wall plugs and screw in the screws until their heads are about 6 mm from the wall.

Place the chimney to the wall in order to check that it seats properly. Then mark the positions of the two holes. Take it off from the wall now, drill the holes and fit the plugs. Place the hood once again to the wall, and introduce the screws from the inside of the appliance.

The chimney can be used either in re-circulation or the exhaust mode. It is however recommended that wherever possible it should be used in exhaust mode for best results.

Exhaust mode

The chimney must be connected by the spigot (supplied as part of the hood) to a duct to vent all the exhausted air outside the kitchen. Over horizontal areas, if any, the duct must be slanted about 10% downwards. The maximum recommended length of ducting is 10feet with a maximum of two bends. The suction power of the chimney considerably decreases in case the length of the number of bends increase further.

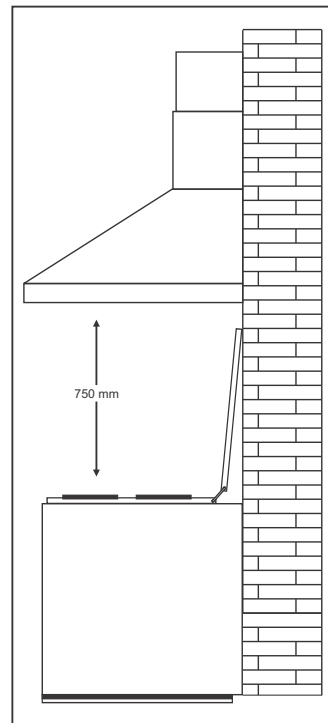

Note : It is recommended to use a 4" dia pipe for chimneys with airflow 1000m³/h and a 6" dia for chimneys with 1250m³/h airflow.

Installing the duct covers

Fix the bracket with 2 plugs and screws at the required height for the duct cover. Screw the short duct with 2 screws on the bracket. Insert the 2 nuts in the holes on the lower part of the long duct. Put the long pipe over the short one by pulling apart the laterals of the duct. Insert the nuts supplied, and working from the inside of the chimney, using the two screws fix the long duct. In a few models the long duct can be fixed by using two screws which must be inserted into the holes at the bottom of the duct. (In some models (6054/6055) you will find only one long duct cover).

Electric connection

Make sure that the supply voltage ratings correspond with the specifications provided in the User's Guide

USING YOUR CHIMNEY

Switch on the chimney 5 minutes before you start cooking. Before using the chimney please ensure that all plastic films on the filter and stainless steel body are removed.



There are three speed settings, choose the speed as per your requirement..

Light

LED lamps are provided in the chimney to enable proper lighting up of the cooking area. The light works independently of whether the fan is switched on or off, as it is provided with a separate on/off switch.

MAINTENANCE

When performing maintenance operations, disconnect the plug from the socket.

Auto clean chimney

Easy cleaning | Longer life | Better performance

Using the auto clean

Push the auto clean button to run the cleaning program. The element starts heating from the normal temperature to a max of 90°C temperature. It stays at this temperature for atleast 3 minutes. During this time, the oil in the blower melts and collects in the oil cup. Once completed the elements cool down and finish the program in about 2 mins.

The filters can be removed easily by unlocking. Dip the filters for 10-15 minutes into a boiling hot soap solution and then wash in running water. Dry and reinstall the filters.

The chimney surface should be cleaned with a damp cloth. No abrasive chemicals should be used.

Please note that your Chimney is made from Magnetic Stainless Steel and needs to be cleaned regularly and kept dry otherwise it may react to the moisture and dust and develop a rust kind of formation."

SPECIFICATIONS

Voltage	: 230 V AC 50Hz	Housing	: Metal Housing
Airflow m ³ /h	: 1400	Speed Control	: 3 speed
Power Motor	: 265 W	Net Weight	: 22 Kgs
LED Light	2 x 1.5 W	Gross Weight	: 28 Kgs
Size	: 90 cms	Dimensions (mm) (w x d x h)	
		Chimney	: 895 x 400 x 520
		Carton	: 965 x 565 x 49.5

GUARANTEE

Glen Appliances Pvt. Ltd. guarantees to get the Chimney Hood or any part thereof repaired free of charge for a period of one year from the date of purchase, should any defect develop due to faulty or defective workmanship or material. However, the plastic breakable parts, lamps, push buttons, filter locks, and items subject to normal wear and tear due to operation are not covered under guarantee. The stainless steel body of the chimney is warranted against rust formation for life time. The warranty excludes baffle filters, GI clamps, GI back panel & GI chimney tube support bracket. The warranty will not be applicable if food/dust particles are left on the body for very long time.

Terms to Guarantee

- * The Bill/Cash Memo should be presented.
- * No repair work should be carried out by any unauthorised person.
- * Chimney Hood should be used as per the directions given in the user's guide.
- * Any defects caused by improper or reckless use are not covered under guarantee.
- * The Serial no. has not been tampered with.
- * No modification/alteration of any nature is made in the Chimney Hood.

The company accepts no responsibility for any consequential losses arising out of misuse or negligence on the part of the user.

Packing List Main unit, spigot, plastic wall plugs, screws

CHIMNEY

SERIAL NO. _____ BILL NO. _____ DATE OF PURCHASE _____

NAME OF OWNER _____

ADDRESS _____

GLEN

Live Better !

Imported & Marketed by/In case of customer complaints Contact Manager - Customer Support

Glen Appliances Pvt. Ltd.,

I-34, DLF Ind. Area, Phase-I, Faridabad, India.

Helpline : 9266655555

E-mail : info@glenindia.com

Website : www.glenindia.com

DEALER'S STAMP & SIGNATURE