

Cooker Hood 6073
Heat Auto Clean

GLEN

Live Better !




5 YEARS
WARRANTY
ON MOTOR

4TH Generation
Auto Clean System

USER'S GUIDE

IDENTIFYING YOUR CHIMNEY

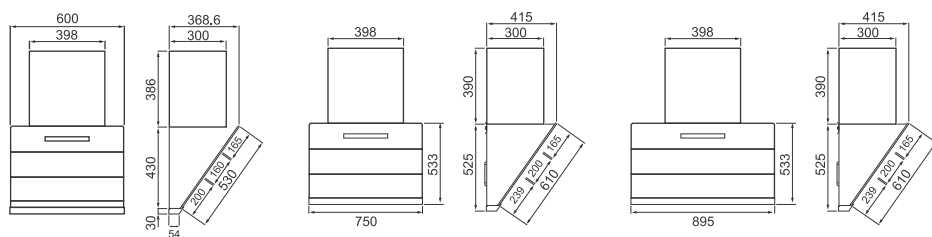

The body of your Glen chimney is made up of high quality Stainless Steel and Toughened Glass.

SETTING UP YOUR CHIMNEY

The chimney must be mounted over the center of the cooking area. The minimum distance between the cooktop and the bottom of the chimney must be 750 mm.


Please ensure that the wall on which the chimney is being installed is level properly if not either get it leveled or install the chimney on a leveled 1/2" plywood

Attach the spigot to the hood using the four screws. In few models the spigot may already be mounted.

Fastening the chimney to the wall

Mark the position of the holes on the wall. Before drilling make sure that no wiring and tubes will be damaged. Drill two fastening holes, drive in the wall plugs and screw in the screws until their heads are about 6 mm from the wall.

Place the chimney to the wall in order to check that it seats properly. Then mark the positions of the two holes. Take it off from the wall now, drill the holes and fit the plugs. Place the hood once again to the wall, and introduce the screws from the inside of the appliance.

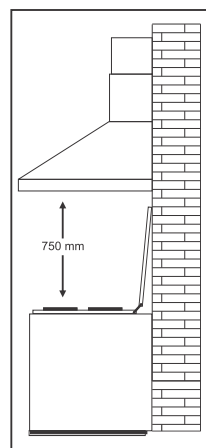

This chimney works only on exhaust mode. The maximum recommended length of ducting is 10 feet with a maximum of two bends. The suction power of the chimney considerably decreases in case the length of the number of bends increase further.

Note: The chimney has a 1400 m3 suction therefore the pipe must have minimum of 6" (150mm) dia.

Fix the Spigot with the help of the screws after matching the holes correctly.

Operation interface



Fix the exhaust / duct pipe and use the Electrical / Aluminum tape to seal it properly so that it doesn't move and there is no leakage of smoke.

Hold the Chimney, match the holes to peg board, fix the stop screw to the holes in the middle of peg board to avoid the Chimney turn over or drop down.

If you are installing hood cover, use the mounting bracket and screws to fix firmly.

The Exhaust / duct pipe to the outdoor, please take the pipe at least 30mm out and put a cowl cover to block the entry of birds. Also keep it at a downward angle to avoid rain water to drip in.

Electric connection

Make sure that the supply voltage ratings correspond with the specifications provided in the User's Guide.

MAINTENANCE

When performing maintenance operations, disconnect the plug from the socket.

Auto clean chimney

Easy cleaning | Longer life | Better performance

Using the auto clean

Periodically you can Auto Clean the chimney. In this system the element around the housing heats up from the normal temperature to a max of 90° C. Due to the heat all the oil deposits in the blower and housing melts and collects in the oil cup. The oil cup can be removed and cleaned and fixed back. Chimney is ready for use.

The chimney surface should be cleaned with a damp cloth. No abrasive chemicals should be used.

Please note that your Chimney is made from Magnetic Stainless Steel and needs to be cleaned regularly and kept dry otherwise it may react to the moisture and dust and develop a rust kind of formation."

GESTURE FUNCTION

When you plug in all lights come on for 2 seconds and buzzer warns.

☞ Swipe from left to right, Chimney starts on high speed.

☞ Swipe from right to left, Chimney switches off.

TOUCH FUNCTION

- To Switch ON/OFF touch the ⏻ icon.
- Touch ⏻ and the LED will turn on touch again it will turn off.
- Touch ⏻ and the delay timer gets activated and chimney will switch off in 1 minute.
- When on standby touch delay ⏻ for 3 seconds and Auto clean System turns on. It's a 12 minutes cycle and after Auto clean system turns off 1 minute later chimney will switch off. In case you want to switch off Auto clean system while in operation long touch ⏻ for 3 seconds
- Speed 3: Touch ⏻ on Chimney starts at speed 3.
- Speed 2: Touch ⏻ on Chimney starts at speed 2.
- Speed 1: Touch ⏻ on Chimney starts at speed 1.

SPECIFICATIONS

	6073AC60	6073AC75	6073AC90
Voltage	230 V AC 50Hz	230 V AC 50Hz	230 V AC 50Hz
Airflow m ³ /h	1400	1400	1400
Power Motor	120 W	120 W	120 W
LED Light	2 x 1.5 W	2 x 1.5 W	2 x 1.5 W
Size (cm)	60	75	90
Speed Control	3 speed	3 speed	3 speed
Housing	Metal Housing	Metal Housing	Metal Housing
Size (Product) WxDxH (mm)	600 x 369 x 846	750 x 415 x 915	895 x 415 x 915
Size (Box) WxDxH (mm)	670 x 582 x 500	820 x 582 x 500	965 x 582 x 500

GUARANTEE

Glen Appliances Pvt. Ltd. guarantees to get the Chimney Hood or any part thereof repaired free of charge for a period of one year from the date of purchase, should any defect develop due to faulty or defective workmanship or material. However, the plastic breakable parts, lamps, push buttons, filter locks, and items subject to normal wear and tear due to operation are not covered under guarantee. The warranty excludes baffle filters, GI clamps, GI back panel & GI chimney tube support bracket. The warranty will not be applicable if food/dust particles are left on the body for very long time. The motor has a warranty of 5 years.

Terms to Guarantee

- * The Bill/Cash Memo should be presented.
- * No repair work should be carried out by any unauthorised person.
- * Chimney Hood should be used as per the directions given in the user's guide.
- * Any defects caused by improper or reckless use are not covered under guarantee.
- * The Serial no. has not been tampered with.
- * No modification/alteration of any nature is made in the Chimney Hood.

The company accepts no responsibility for any consequential losses arising out of misuse or negligence on the part of the user.

Packing List Main unit, spigot, plastic wall plugs, screws

CHIMNEY CH 6073

SERIAL NO. _____ BILL NO. _____ DATE OF PURCHASE _____

NAME OF OWNER _____

ADDRESS _____

GLEN

Live Better !

Glen Appliances Pvt. Ltd.,
I-34, DLF Ind. Area, Phase-I, Faridabad-121003,
India. Helpline : 9266655555
E-mail : info@glenindia.com
Website : www.glenindia.com

DEALER'S STAMP & SIGNATURE