

**Cooker Hood 6074**  
Heat Auto Clean

# GLEN

Live Better !

 
 


**5** YEARS  
WARRANTY  
ON MOTOR

**4<sup>TH</sup> Generation**  
**Auto Clean System**  
**+ Brushless DC Motor**

USER'S GUIDE

## IDENTIFYING YOUR CHIMNEY

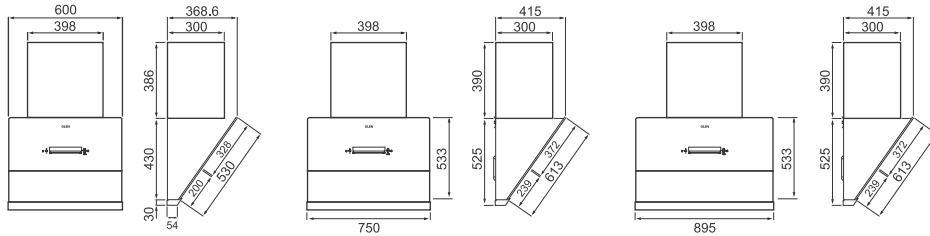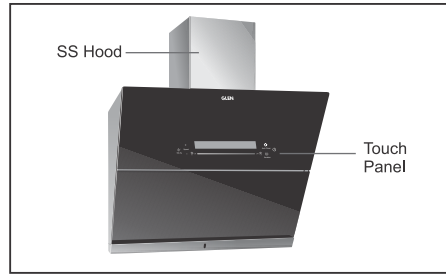


The body of your Glen chimney is made up of high quality Stainless Steel.

## SETTING UP YOUR CHIMNEY

 The chimney must be mounted over the center of the cooking area. The minimum distance between the cooktop and the bottom of the chimney must be 750 mm.

Please ensure that the wall on which the chimney is being installed is level properly if not either get it leveled or install the chimney on a leveled ½" plywood

Attach the spigot to the hood using the four screws. In few models the spigot may already be mounted.

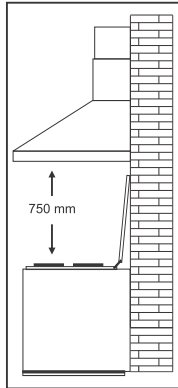

### Fastening the chimney to the wall

Mark the position of the holes on the wall. Before drilling make sure that no wiring and tubes will be damaged. Drill two fastening holes, drive in the wall plugs and screw in the screws until their heads are about 6 mm from the wall.

Place the chimney to the wall in order to check that it seats properly. Then mark the positions of

the two holes. Take it off from the wall now, drill the holes and fit the plugs. Place the hood once again to the wall, and introduce the screws from the inside of the appliance.

This chimney works only on exhaust mode. The maximum recommended length of ducting is 10 feet with a maximum of two bends. The suction power of the chimney considerably decreases in case the length of the number of bends increase further.

Note: The chimney has a 1400 m<sup>3</sup> suction therefore the pipe must have minimum of 6" (150mm) dia.

 
Fix the Spigot with the help of the screws after matching the holes correctly.

Fix the exhaust / duct pipe and use the Electrical / Aluminum tape to seal it properly so that it doesn't move and there is no leakage of smoke.

Hold the Chimney, match the holes to peg board, fix the stop screw to the holes in the middle of peg board to avoid the Chimney turn over or drop down.

If you are installing hood cover, use the mounting bracket and screws to fix firmly.

The Exhaust / duct pipe to the outdoor, please take the pipe at least 30mm out and put a cowl cover to

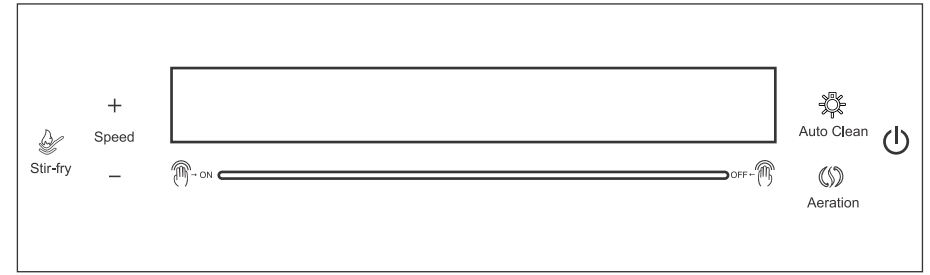

block the entry of birds. Also keep it at a downward angle to avoid rain water to drip in.

### Electric connection

Make sure that the supply voltage ratings correspond with the specifications provided in the User's Guide.

## MAINTENANCE

When performing maintenance operations, disconnect the plug from the socket.

### Auto clean chimney

Easy cleaning | Longer life | Better performance

### Using the auto clean

Periodically you can Auto Clean the chimney. In this system the element around the housing heats up from the normal temperature to a max of 90°C. Due to the heat all the oil deposits in the blower and housing melts and collects in the oil cup. The oil cup can be removed and cleaned and fixed back. Chimney is ready for use.

The chimney surface should be cleaned with a damp cloth. No abrasive chemicals should be used.

Please note that your Chimney is made from Magnetic Stainless Steel and needs to be cleaned regularly and kept dry otherwise it may react to the moisture and dust and develop a rust kind of formation."

## TOUCH FUNCTION

- Touch for 3 seconds to activate motion sensor.

- Swipe from left to right, Chimney starts on default speed.
- Swipe to right again and speed decreases.
- Swipe from right to left, delay timer 1 minute is activated and chimney stops after 1 minute. Swipe to left again and chimney switches off.
- Speed can be adjusted manually by touching (+) or (-) speed icon, you can take it up to F9 which is the maximum speed.
- Touch the LED will light up touch again it will light off.
- Touch (+) Chimney starts with speed 3, speed can be adjusted from F3-F9. Digital screen show exact speed.
- Touch (-) Chimney starts with speed 3, speed can be adjusted from F3-F1. Digital screen shows exact speed.
- When the lights are off long touch for 3 seconds and Auto clean System turns on. It's a 9 minutes cycle and after Auto clean system turns off 1 minute later chimney will switch off.
- In case Auto Clean System to be switched off while in operation long touch for 3 seconds.
- Touch when chimney at stand by, Chimney starts at highest speed F10 3 seconds later, digital screen shows exact speed. Touch again, Chimney returns to stand by.
- Touch when Chimney is at stand by, Chimney starts at the lowest speed. Now the chimney keeps the kitchen fresh by removing the stale air at low speed at a very low noise. Touch again to return to standby.

## SPECIFICATIONS

	<b>6074AC60</b>	<b>6074AC75</b>	<b>6074AC90</b>
Voltage	230 V AC 50Hz	230 V AC 50Hz	230 V AC 50Hz
Airflow m <sup>3</sup> /h	1400	1400	1400
Power Motor	150 W	150 W	150 W
LED Light	2 x 1.5 W	2 x 1.5 W	2 x 1.5 W
Size (cm)	60	75	90
Speed Control	10 speed	10 speed	10 speed
Housing	Metal Housing	Metal Housing	Metal Housing
Size (Product) WxDxH (mm)	600 x 369 x 846	750 x 415 x 915	895 x 415 x 915
Size (Box) WxDxH (mm)	670 x 582 x 500	820 x 582 x 500	965 x 582 x 500

## GUARANTEE

Glen Appliances Pvt. Ltd. guarantees to get the Chimney Hood or any part thereof repaired free of charge for a period of one year from the date of purchase, should any defect develop due to faulty or defective workmanship or material. However, the plastic breakable parts, lamps, push buttons, filter locks, and items subject to normal wear and tear due to operation are not covered under guarantee. The warranty excludes baffle filters, GI clamps, GI back panel & GI chimney tube support bracket. The warranty will not be applicable if food/dust particles are left on the body for very long time. Warranty on motor is 5 years from the date of purchase.

### Terms to Guarantee

- \* The Bill/Cash Memo should be presented.
- \* No repair work should be carried out by any unauthorised person.
- \* Chimney Hood should be used as per the directions given in the user's guide.
- \* Any defects caused by improper or reckless use are not covered under guarantee.
- \* The Serial no. has not been tampered with.
- \* No modification/alteration of any nature is made in the Chimney Hood.

The company accepts no responsibility for any consequential losses arising out of misuse or negligence on the part of the user.

### Packing List Main unit, spigot, plastic wall plugs, screws

CHIMNEY CH 6074

SERIAL NO. \_\_\_\_\_ BILL NO. \_\_\_\_\_ DATE OF PURCHASE \_\_\_\_\_

NAME OF OWNER \_\_\_\_\_

ADDRESS \_\_\_\_\_

# GLEN

Live Better !

Glen Appliances Pvt. Ltd.,  
I-34, DLF Ind. Area, Phase-I, Faridabad-121003,  
India. Helpline : 9266655555  
E-mail : info@glenindia.com  
Website : www.glenindia.com

DEALER'S STAMP & SIGNATURE