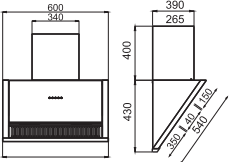 
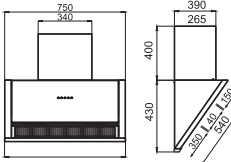 
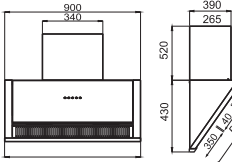 


TECHNICAL SPECIFICATIONS

The specifications of this Chimney will be based on the model selected by you identified with various features as given in the below mentioned table:

	CH 6072 - 60CM	CH 6072 - 75CM	CH 6072 - 90CM
Voltage	230 V AC 50Hz	230 V AC 50Hz	230 V AC 50Hz
Airflow m³/h	1200	1200	1200
Motor Wattage	180W	180W	180W
LED Light	2 X 1.5 W	2 X 1.5 W	2 X 1.5 W
Heating Element	50W	50W	50W
Speed Control	3 Speed (Motion Sensor)	3 Speed (Motion Sensor)	3 Speed (Motion Sensor)
Housing	Metal Housing	Metal Housing	Metal Housing
Size Box WxDxH (mm)	680 x 560 x 520	830 x 560 x 520	980 x 560 x 520
Product Dims. WxDxH (mm)	600 x 390 x 830 	750 x 390 x 830 	900 x 390 x 950 

Based on the features as mentioned in the model you have selected the specifications will be different. Please note as improvements are a continuous process specifications are subject to change.

PACKING LIST

Main Unit, Universal Spigot, Plastic Wall Plugs, Screws, User’s Guide

GUARANTEE

Glen Appliances Pvt. Ltd. guarantees to get the Chimney Hood or any part thereof repaired free of charge for a period of product warranty of 1 year & 7 years on motor from the date of purchase, should any defect develop due to faulty or defective workmanship or material. However, the glass, plastic breakable parts and items subject to normal wear and tear due to operation are not covered under Warranty. The warranty excludes gi clamps, gi back panel & gi chimney tube support bracket. The warranty will not be applicable if food / dust particles are left on the body for a very long time.

Terms to Guarantee

- The Bill/Cash Memo should be presented.
- No repair work should be carried out by any unauthorised person.
- Product should be used as per the directions given in the user’s guide.
- Any defects caused by improper or reckless use are not covered under guarantee.
- The Serial No. has not been tampered with.
- No modification/alteration of any nature is made in the Product.
- Under warranty service / repair will be provided on FOC in the municipality limit of the service centre.
- Outside the municipality limit of the service centre, minimum visiting charges of Rs.500/- will be applicable or customer may bring it to service centre at his own for free service / repair under warranty.
- The company will not accept any liability for any loss or damages of whatsoever nature on account of fire, storm, theft, malicious damage, pressure cooker bursting or any other unforeseen acts or incidents.
- Any damage done by rats or rodents etc. will not be covered by the warranty.
- Company accepts no liability for any consequential loss and / or damages caused to the user or any third party due to any failure / malfunction of the product. The company's liability is limited to the repair or replacement of the defective part.

PRODUCT \_\_\_\_\_ SERIAL NO : \_\_\_\_\_

BILL NO. & DATE : \_\_\_\_\_ NAME OF OWNER : \_\_\_\_\_

ADDRESS : \_\_\_\_\_

Manufactured by  
**Glen Appliances Pvt. Ltd.**  
Plot No. 919, Sector 68, IMT, Faridabad, Haryana 121 004  
**Customer Care & H.O.**  
I-34, DLF Indl. Area, Phase 1, Faridabad (Haryana), INDIA.  
E-mail : info@glenindia.com Website : www.glenindia.com  
**Customer Care 9266-655-555**

DEALER'S STAMP & SIGNATURE

GL32

Cooker Hood 6072

GLEN



**FILTER LESS  
HEAT AUTO CLEAN CHIMNEY**

Now with more  
**Power 1200** m³/hr

IS : 302-2-31



CM/L - 9512545323

USER'S GUIDE

INSTALLATION

- The chimney must be mounted over the center of the cooking area. The minimum distance between the cooktop and the bottom of the chimney must be 750 mm.
- Join the spigot, attach it to the hood using the four screws. In a few models the spigot may already be mounted.

Fastening the chimney to the wall

- Mark the position of the holes on the wall. Before drilling make sure that no wiring and tube will be damaged. Drill two fastening holes, drive in the wall plugs and screw in the screw until their heads are about 6 mm from wall.
- Place the chimney to the wall in order to check that it seats properly. Then mark the position of the two holes. Take it off from the wall now, drill the holes and fit the plugs. Place the hood once again to the wall, and introduce the screw from the inside of the appliance.

Exhaust mode




- Your chimney comes with a spigot for fixing the exhaust pipe of 150mm (6”) for smooth flow of the air.
- The chimney must be connected with the help of the Spigot provided with the chimney. The exhaust pipe should be fixed on to the spigot and then the clamp provided should be tightened through the screw provide. This is required so that no air escapes through this joint.
- The maximum recommended length is 3.00 meters (10 feet) and 2 bends. The suction power of the chimney considerably decreases in case the length of the duct and number of bends increases further. Over horizontal areas, if any, the duct must be slanted about 10° downwards.
- The diameter of the Duct pipe should be a minimum of 150mm (6”) for all chimneys. anything smaller than this will result in vibrations at higher speeds.

Installing the duct covers

- Insert the 2 nuts in the holes on the lower part of the duct. Put the pipe over the short one by pulling apart the laterals of the duct. Insert the nuts supplied, and working from the inside of the chimney, using the two screws fix the duct. In few models the duct can be fixed by using two screws which must be inserted into the holes at the bottom of the duct.


Electric connection

- Make sure that the supply voltage rating correspond with the specifications provided In the User’s Guide.

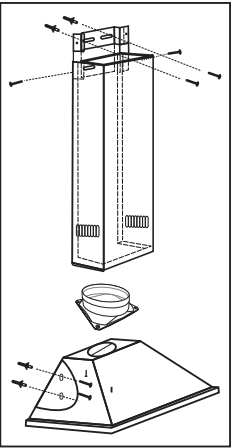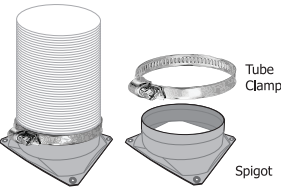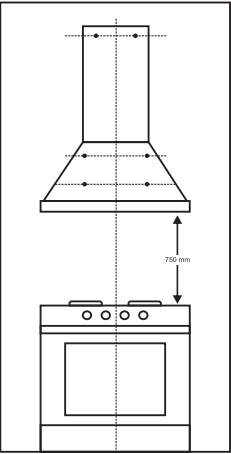

USAGE

- Switch on the chimney 5 minutes before you start cooking.

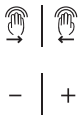

**Swipe** : Swipe from left to right, start at 1st speed. Swipe again, speed will increase F2-F3-F1-F2-F3 (Circulation).  
Swipe from right to left, speed decrease. when at 1st speed, swipe again, it will delay 1 min, swipe again switch off (no circulation).  
To increase the speed of fan touch (+) key & to decrease touch (-) key on the control panel.



**Light** : Touch one time for turning the light on, touch again to turn the lights off.



**Auto Clean** : Touch this key to start auto clean function on stand-by condition. The heating element would work for 12 minutes, and when there is 1 minute left for this 12 minutes, the motor would turn on at low power and work until the 12 minutes of heating finished. When auto clean function is finished, The hood would back to stand-by condition. When heating function is on, the power increase-decrease & time function stops working.

USING THE AUTO CLEAN


Filter Less Chimney

- When unit is not working , Touch the auto clean button to run the auto cleaning program.
- The oil will be collected in the Oil Collector.
- The chimney surface should be cleaned with a damp cloth. No abrasive chemicals should be used.

Oil Collector

Your auto clean chimney is equipped with oil collector tray.

- **Oil Collector Tray** : A metal tray is fitted in the lower part of chimney which collects the oil and it can be easily removed and cleaned.

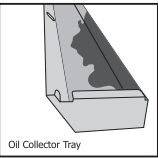

MAINTENANCE

- When performing maintenance operations, disconnect the plug from the socket.

Regular Cleaning

- Use a soft cloth moistened with hand warm mildly soapy water or household cleaning detergent. never use metal pads, chemicals, abrasive material or stiff brush to clean the unit

DO’S & DON’T’S

- No flame based cooking should be done below the chimney.
- While frying do not leave the cooking oil unattended as it may flare up and cause fire.
- Clean all the oily residues on surface frequently to avoid fire.
- The minimum distance between the cooktop and the bottom of the chimney must be 750 mm.
- Make sure that the supply voltage ratings correspond with the specifications provided in the User’s Guide.
- When performing maintenance operations, disconnect the plug from the socket.
- No repair work should be carried out by any unauthorised person.
- In case the chimney is installed in the under construction Kitchens, it is advisable to install the Chimney, test it and then again remove the same and pack in the box. As if the Chimney is left unattended the paints, chemicals, dust & moisture etc if not cleaned timely may result in rust formation which will not be covered in the warranty.
- Chimney should be used as per the directions given in the User’s Guide.
- Do not allow children to operate the chimney.