WARRANTY

This GLEN Pizza Grill is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of two years from the date of purchase. Should any defect develop in this product, the customer should bring the product to the nearest authorised service centre, where the company undertakes to get the product repaired free of charge.

- This warranty is not valid if:
- The use and care instructions have not been followed.
- Defects are caused by accident, misuse, abuse or commercial use.
- The repair work is carried out by persons not authorised by the company.
- Any modification or alteration of any nature is made in the product.
- Normal wear & tear of the product is not covered under warranty
- The Bill/Cash memo and copy of warranty card is not presented.

Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages. Use of product indicates acceptance by you of the aforesaid terms and conditions.

SPECIFICATIONS

Power Supply : 230V AC 50 Hz Wattage : 1200 W

PRODUCT NAME PIZZA GRILL SA 3033

DATE OF PURCHASE _____

SERIAL NO.

DEALER'S STAMP & SIGNATURE

GLEN APPLIANCES PVT. LTD.


I-34, DLF Industrial Area, Phase 1, Faridabad (Haryana), INDIA.

Helpline: 9266655555 Email: cr@glenindia.com

Website: www.glenindia.com


PIZZA GRILL SA 3033



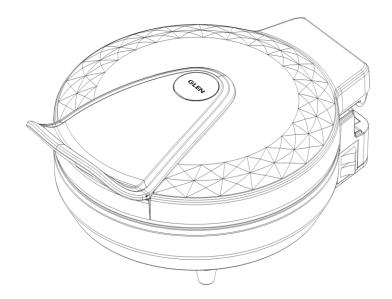

USER'S GUIDE

IDENTIFY YOUR PIZZA GRILL SA 3033

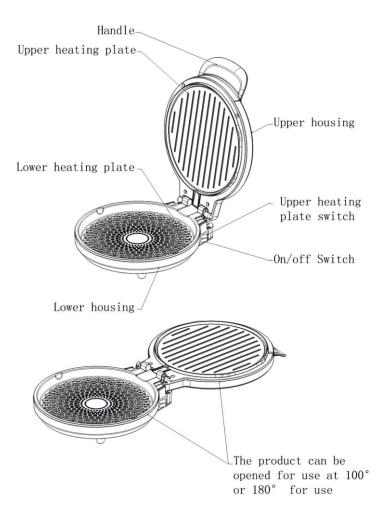

FOR FIRST USE

The surface of product may become very hot during operation, which may cause stains, discoloration or smears on the desktop. It is recommended to place a non-plastic pad between the appliance and the desktop.

- 1. Unpack the product and place it on a flat table, and wipe the surface and heating plates with a damp soft cloth. Then connect the appliance into a rated power supply, Press the On/Off switch to let the appliance start preheating. It is recommended to apply a layer of vegetable oil on the heating plates before preheating. This helps protect non-stick surfaces. Some odors can be smelled during the initial preheating. This is normal and will disappear after one or two use.
- 2. Before use, check whether the surfaces of the heating plates are clean and free of dust and food residue. If necessary, wipe them with a damp cloth.

USING YOUR PIZZA GRILL

1. Connect the appliance to the rated power supply, press the On/off switch to the On position, the appliance starts preheating and the

power indicator lights up, when a certain temperature is reached, the power indicator will go out.

2. It usually takes about 10 minutes for the cooking temperature to reach a certain temperature. At this time you can put the prepared raw pizza on the lower heating plate.

Note: It is recommended to wear insulated gloves and use a wooden spatula to reduce the risk of burns from contact with hot surfaces.

- 4. The cooking time is about 15 minutes. The precise cooking time needs to be determined according to your different tastes and fillings.
- 5. Once the cooking process is complete. Then use a plastic or wooden spatula to remove the cooked food. Do not use metal utensils, because doing so will damage the non-stick coating on the heating plate.
- 6. When the food is done, turn the On/off switch to the Off position and unplug it.

Warning: As the temperature of the heating plates is still high, it will take a while to cool down.

CLEANING AND MAINTENANCE

Please clean the Pizza Grill every time after use.

Unplug the appliance from power supply and wait until it completely cools down before cleaning.

- 1. Use a cloth dampened with detergent and water to clean the heating plates and housings. Do not use abrasive cleaners to wipe the heating plates as this will damage their non-stick coating.
- 2. Do not put the whole machine directly into the dishwasher for cleaning! Electric shock may occur in this way:
- 3. Store electrical appliances in a safe and clean place;
- 4. If any problem has been found, please contact the authorized service center for help.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal centre

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, the below basic precautions should always be followed, including the following.

- 1. Read all instructions.
- 2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the Sandwich maker.
- 3. Do not let cord hang over edge of table or counter, or touch hot surface.
- 4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- 5. Children should be supervised to ensure that they do not play with the appliance.
- 6. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- 7. Unplug from outlet when not in use and before cleaning. Always allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 8. The appliance can be used by children aged from 8 years and above and persons with reduced physical.

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

- 9. Keep the appliance and its cord out of reach of children less than 8 years.
- 10. To protect against fire, electric shock and injury to persons, do not immerse the appliance, cord or plug in water or other liquid. If this has happened, do not use this appliance any more; dispose of the appliance.
- 11. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
- 12. Do not leave the machine on unattended.
- 13. Always use the appliance on a secure, dry level surface.
- 14. Do not place on or near a hot gas or electric burner, or in a heated oven.
- 15. Do not use outdoors.
- 16. Do not use appliance for other than its intended use.

- 17. Do not clean container with cleansers, steel wool pads, or other abrasive material.
- 18. Never insert oversized food or metal foil or other utensils into the appliance.
- 19. Do not touch hot surface. Use handle or knobs only.
- 20. This appliance is intended to be used in household and similar applications such as:
- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.
- 21. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- 22. The the outer surface may get hot when the appliance is operating.
- 23. Save these instructions