

WARRANTY

This GLEN Dosa Maker is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of two year from the date of purchase. Should any defect develop in this product, the customer should bring the product to the nearest authorised service centre, where the company undertakes to get the product repaired free of charge.

This warranty is not valid if :

- The use and care instructions have not been followed.
- Defects are caused by accident, misuse, abuse or commercial use.
- The repair work is carried out by persons not authorised by the company.
- Any modification or alteration of any nature is made in the product.
- Normal wear & tear of the product is not covered under warranty
- The Bill/Cash memo and copy of warranty card is not presented.

Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages. Use of product indicates acceptance by you of the aforesaid terms and conditions.

SPECIFICATIONS

Supply Voltage : 220V-240V~50Hz

Power : 1000 W

PRODUCT NAME DOSA MAKER SA 3038 N

DATE OF PURCHASE _____

SERIAL NO. _____

GLEN APPLIANCES PVT. LTD.
I-34, DLF Industrial Area, Phase 1,
Faridabad (Haryana), INDIA.
Helpline : 9266655555 Email : cr@glenindia.com
Website : www.glenindia.com

DEALER'S STAMP & SIGNATURE

DOSA MAKER
SA 3038 N


GLEN

Live Better !



USER'S GUIDE

IDENTIFY YOUR DOSA MAKER SA 3038N

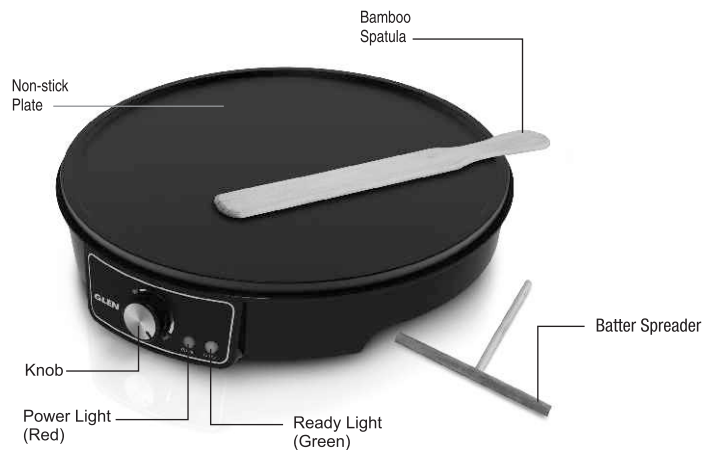

USING YOUR DOSA MAKER

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. For best results, pour a teaspoon of vegetable oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil.

When your appliance is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

Place the unit on a level surface making sure it is not in contact with a wall, corner or curtains.

Never cut crepes on the baking plate. Use only wooden or heat proof plastic utensils to avoid scratching the nonstick coating.

Inset the pin plug into the power outlet,

you will notice that the red power light will go on. Turn the temperature knob to MAX and the green ready light goes on. Indicating the appliance is heating up.

Allow your appliance to pre-heat until the green ready light goes off. This indicates that the cooking plate have reached the correct temperature for cooking.

For best results, lightly spray the cooking plate with a cooking oil spray before using. This will assist in the removal of the crepes after cooking.

Once the green ready light is off, pour crepe batter onto the baking plate spreading it with a circular movement using the batter spreader.

The green ready light will continue to go on and off during the cooking process indicating that the appliance is heating up appropriately.

Allow the crepe to cook until the surface is no longer liquid and the crepe can be moved slightly.

Using a spatula, lift and flip the crepe completely.

Continue to cook on this side until the underside is browned slightly and easily lifted. Remove crepe to a wire rack and allow to cool slightly before stacking on a plate.

Adjust the temperature as needed after the first crepe is done.

Repeat as needed, stacking crepes layered between sheets of wax paper. Cover stack with foil and place in a 200° F oven to keep warm.

CLEANING AND CARE

Always turn off the power and remove the plug before cleaning.

The cooking plate are coated with non-stick cooking surface, therefore little cleaning is required. Simply wipe cooking plate over with a damp cloth.

Do not immerse the appliance in water or other liquid.

Do not use abrasive scouring pads, powders or cleaners.

Do not place in the dishwasher.

Before next use, lightly grease the cooking plate for easy removal of cooked crepes.

STORAGE

Always unplug the appliance before storage.

Always make sure the appliance is cool and dry before storing.

SAFETY PRECAUTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Always allow adequate air space above and on all sides for air circulation. Do not allow the appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.