
Food Processor GL 4052 LX

GLEN



IDENTIFYING YOUR FOOD PROCESSOR

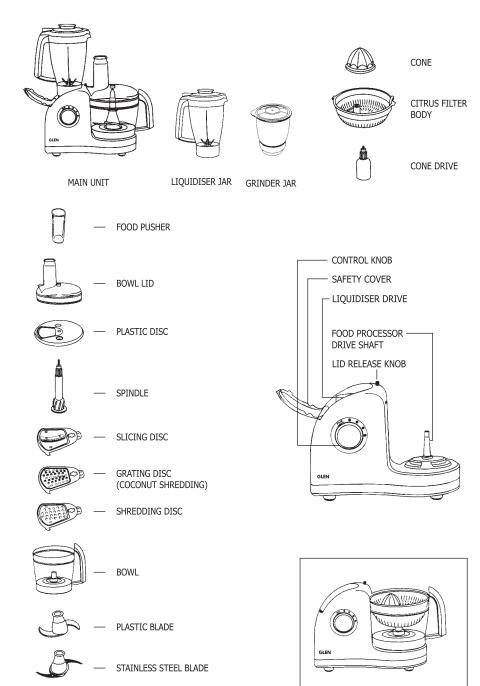

SPATULA

CITRUS JUICER

USING THE LIQUIDISER JAR

Open the safety cover on the liquidiser side by pulling it upwards. Place the liquidiser jar on to the drive and rotate anti-clockwise to lock.





The liquidiser jar should not be filled more than 2/3 of the jar capacity. Switch ON the machine and turn to position 1. The pulse position can be used for additional froth in milk shakes, coffee or lassi.

Add the ingredients to be processed. Place the lid on top of the liquidiser jar and rotate it anti-clockwise to lock.





Once the operation is complete switch OFF the machine and remove the liquidiser jar by rotating clockwise.

The central transparent cap of the liquidiser can be removed to add small ingredients during operation. The cap also doubles up as a small measuring jar by virtue of it's markings.







The liqudiser jar comes with a unique multi-flow lid. Slide the pointer near the handle to adjust the opening in the jar to either open, sieve or closed setting. Now conveniently choose your shake with or without ice.

USING THE DRY GRINDER JAR



The blades of the grinder jar are mode up of special food grade 304 stainless steel that do not effect the food quality even when they get heated up.

Place the grinder jar on to the drive and rotate anti-clockwise to lock. Ensure that the knob is at OFF position.

Add the ingredients to be processed. Place the lid on top of the grinder jar and press down to close. Hold the lid firmly and switch ON. Hold the lid during processing to avoid spillage.





The grinder jar should not be filled more than 2/3 of the jar capacity. Switch ON the machine and turn to position 1 and gradually to higher positions if required. Give a break of 1 minute after three minutes running.

Once the operation is complete switch OFF the machine and remove the grinder jar by rotating clockwise. Handle carefully as it may be hot.



USING THE CITRUS JUICER



Place the bowl on the processor drive shaft and turn anti-clockwise to lock. Place the cone drive on to the food processor drive spindle.

Switch ON the machine and turn to speed 1. Cut the citrus fruit to be juiced into two halves. Hold the fruit and gently press against the cone for juicing. The juice collects in the bowl.

Press the release knob and rotate the filter body clockwise to unlock.



 


Fit the filter body on to the Food processor bowl. Rotate anti-clockwise to lock. Place the cone into the axis of filter body. Check function using Pulse.

Using the Discs

The food processor comes with a single plastic disc with Three easy to fit interchangeable discs.

- **DISC 1.** The slicing disc is used to slice vegetables or fruits.
- **DISC 2.** The shredding disc can be used for shredding vegetables like carrot, cucumber, potatoes or cheese. It can also help shred vegetables for chinese dishes.
- **DISC 3.** The coconut shredding disc (grating disc) is suitable for fine shredding of coconut.



Select the blade and insert it into the plastic disc cavity. push down to ensure that it rests in position.

Now lower the disc to sit onto the spindle over the drive spindle.

Fix the bowl lid & rotate to lock. Always use food pusher to process various functions.



PROCESSING CHART

BLADES	FUNCTION	SPEED
Slicing Disc	Slicing of onions, potatoes, radish, coconut, cucumber etc.	1
Shredding Disc	Shred carrots, radish etc.	1
Grating Disc	For Coconut Shredding	1
Kneading Blade	Atta Kneading (250 gms) For removing shell of green peas	1 2
Chopping Blade	Chopping onion, leafy vegetables Mincing meat for keema Crumbing bread Tomato pureeing Potato mashing Mixing batters	1 & 2
Liquidiser Jar	Making shakes & lassi	1,2 & 3
Grinder Jar	Grinding dals, spices & preparing chutneys	1,2 & 3
Citrus Juicer	Extracting juice from Citrus fruits, like mausmiese	

CLEANING THE LIQUIDISER/ GRINDER JAR



Pour a little liquid soap and water into the liquidiser / grinder jar, close the lid and run it on position 1 for a few seconds.

Pour out the soap solution and wash with tap water. For the dry grinding jar remove the contents from the jar. Wipe the jar with a dry cloth and store.

CLEANING THE BOWL, BLADES, LID & PUSHER

Unplug the food processor from the mains. Disassemble the pusher, bowl lid, bowl and remove the blades/discs.

It is recommended to unscrew the drive spindle/nut while cleaning. Hold the drive spindle and turn the nut clock-wise to open. Wash with clean water and fix again. Ensure that no food particles are left on the rubber seal, to prevent leakages.





Wash the bowl, bowl lid and the pusher in tap water. Use soapy water and sponge to remove oily substances or deposits. Do not use metal-nylon brushes or boiling water.

The SS blade, plastic blade and the whisker disc have been specifically designed with minimum bends and edges so as to prevent food particles from depositing on them.

Unlock the discs from the plastic disc. Clean the blades or disc in tap water. Handle these carefully as they have very sharp edges.

When the appliance is stored for long durations, it is advisable to apply edible oil on the SS cutting blade.



OVER LOAD PROTECTION

To protect the motor from overload, an overload protection device is installed under the base of the basic unit. The rating of the same has been kept low (2.5 amp) so that in case of overload, it trips and safeguards the expensive motor. Remove the excess material from the jar, in case the motor stops. Allow the motor to cool for 2/3 minutes, then press the plunger. Now the food processor is ready to start again.



Note: Overload protection plunger is to be pressed to restart only after 2/3 minutes.

SAFETY PRECAUTIONS

- Keep the machine away from direct heat and sunlight, at a suitable height on a flat surface for easy operation.
- Do not use on top of a cloth or plastic sheet as these may get sucked in and block the ventilation slots on the bottom of the machine.
- Do not use the food processor empty.
- Do not allow children to handle the food processor.
- Do not attempt to attach or remove the blades or jars while the drive shafts are still in motion.

- Do not push the food through the feeder tube with fingers or spoons etc, always use the food pusher provided.
- Do not immerse the basic unit in water.
- Wash the jars multiple times with soapy water prior first use.
- Remove the blade / disc before emptying the contents.
- Handle the blades / discs with care as they are very sharp.
 - Do not allow the food collected in the bowl to accumulate so much so as to touch the discs
- during operation. This could thrust the disc upwards and could cause damage.
- Always use the spatula for scraping off the contents from the side wall of bowl / jars.
- Before running the machine ensure that the jars and lids are firmly placed and locked.
- Do not remove or replace jars when the motor is on.
- Do not overload the machine.
- In case of smoke or smell put off the machine.

TECHNICAL SPECIFICATIONS*

Voltage : 230 V AC 50Hz

Power : 700 W

Rating : 30 minutes (1 minute 'OFF' after 3 minutes running)

Motor : Universal

Material (Basic Unit) : A.B.S.

(Bowl and cover) : Polycarbonate (Food Grade) (Liquidiser Jar) : Polycarbonate (Food Grade)

(Grinder Jar) : Stainless Steel

Speed Control : PULSE

OFF

1-Low, 2-Medium, 3-High

Motor Speed (RPM) : Liquidiser Drive: 18000 (appx, on speed 3)- No Load.

Food Processor Drive: 1200 (appx. on speed 1)- No Load.

Weight : 8.0 kgs approx

Carton Dimensions : 435 x 415 x 295

(mm)(wxdxh)

Capacity

Processor Bowl : 1.0 litres (0.75 litres for processing)
Liquidiser Jar : 1.5 litres (0.80 litres for processing)
Grinder Jar : 600ML / 300g (depending on ingredients)

Specifications subject to change without prior notice

WARRANTY

This glen food processor is fully warranted against any defect arising out of defective Materials or faulty workmanship for a period of 2 years from the date of purchase. Should Any defect develop in this product, the customer should bring the product to the nearest Authorised service centre, where the company undertakes to get the product repaired free of charge. The motor is fully warranted against any manufacturing defects for a period of 5 years from the date of manufacture (inscribed on the motor)

Terms to Warranty

- The Bill/Cash Memo should be presented.
- No repair work should be carried out by any unauthorised person.
- The Food Processor should be used as per the directions given in the user's guide. Any
 defects caused by improper or reckless use are not covered under warranty.
- No modification/alteration of any nature is made in the Food Processor.
- Normal wear and tear of the product is not covered under warranty.
- Plastic parts are not covered under warranty.

The company accepts no responsibility for any consequential losses arising out of misuse or negligence on the part of the user.

Packing List: Basic unit, Bowl, Bowl lid, Food pusher, Plastic blade, Stainless steel blade, Slicing disc, Shredding disc Grating disc (coconut shredding), Plastic disc, Spindle, Liquidiser jar, Grinder jar, Spatula, Citrus juicer.

PRODUCT: FOOD PROCESSOR FP 4052 LX	
DATE OF PURCHASE	
SERIAL NUMBER	
NAME OF OWNER	
ADDRESS	
BILL NO.	DATE

GLEN

Glen Appliances Pvt. Ltd.

Head Office

I-34, DLF Industrial Area Phase-I, Faridabad - 121 003, INDIA Helpline: : 0129-2254191 Fax 0129-2274344 E-mail: cr@glenindia.com Website www.glenindia.com CUSTOMER CARE TOLL FREE: 9266655555

DEAL	FP'S	STAMP	Q,	STONA	THE