

## WARRANTY

This GLEN Kettle is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of two years from the date of purchase. Should any defect develop in this product, the customer should bring the product to the nearest authorised service centre, where the company undertakes to get the product repaired free of charge.

This warranty is not valid if :

- The use and care instructions have not been followed.
- Defects are caused by accident, misuse, abuse or commercial use.
- The repair work is carried out by persons not authorised by the company.
- Any modification or alteration of any nature is made in the product.
- Normal wear & tear of the product is not covered under warranty
- The Bill/Cash memo and copy of warranty card is not presented.

Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages. Use of product indicates acceptance by you of the aforesaid terms and conditions.

PRODUCT NAME : KETTLE SA 9004 BLACK/WHITE/RED

SERIAL NO. : \_\_\_\_\_

DATE OF PURCHASE : \_\_\_\_\_

DEALER'S STAMP & SIGNATURE

### SPECIFICATIONS

Supply Voltage : 230VAC 50Hz  
Power : 1500 W  
Capacity : 1.5 Litre

**Manufactured by Glen Appliances Pvt. Ltd.**

Plot No. 919, Sector 68, IMT, Faridabad, Haryana 121004

**Customer Care & Head Office**

I-34, DLF Industrial Area, Phase 1, Faridabad (Haryana), INDIA.

Helpline 9266655555 | Email : [cr@glenindia.com](mailto:cr@glenindia.com) | Website : [www.glenindia.com](http://www.glenindia.com)

**KETTLE**  
SA 9004

# GLEN

Live Better !



## USER'S GUIDE

## IDENTIFY YOUR KETTLE SA 9004 BLACK/WHITE/RED



### BEFORE USING YOUR KETTLE

- Remove all packing materials from the outside and inside of kettle.
- Make sure the rated voltage printed on the plate on the kettle is in conformity with local voltage before using.
- If an extension lead is required it must be earthed.
- Boil the water in kettle twice to clean the inside before use and pour out the boiled water.
- Use thermoplastic body must connect with base.

### HOW TO USE

- Open the lid, pour in water. close the lid firmly.

Caution: Do not fill the kettle with water above the maximum water level mark. If

you do, hot water will overflow, Do not fill the kettle with water below the minimum water level mark. If you do, the kettle will not operate normally.

- Plug in the base, put the kettle on the base according to the direction of the manual.
- If the indicator lights up. the kettle is working, If the indicator does not light up, please push the switch button to power on and the kettle will begin to work with the indicator lighting up. After the water is boiled for a certain period of time, the power supply will be automatically cut off and the indicator will go off.
- If you want to cut off power before the water is boiled, remove the kettle off the base or unplug the power cord.

### PRECAUTION

- Keep the child away from the kettle when it is boiling.
- Never use the kettle without the lid on.
- This appliance should not be left unattended during use.
- Do not touch the exterior as it gets hot or allow your hand to come in contact with hot steam from the spout or lid, particularly when refilling.
- To avoid the kettle overheating and lamp flashing, do not connect the power and press the switch button when the water is not pouring into the kettle.
- The unit is for boiling water only. Do not use it to heat other liquids to avoid damage.
- If the electrical source wire is broken, it must be replaced by manufacture or service department or career man in order to keep safe.
- Never operate the appliance empty, in the event of this case occurred.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. Or lack of experience and knowledge, unless they have been given supervision or instruction

### SAFETY PRECAUTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not place the kettle on or near slippery or hot surfaces.
- The kettle must be used on rated voltage.

concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Never immerse this appliance in water or other liquids. Use a damp cloth to clean the surface of appliance. Do not use aggressive or scourers.

### CLEAN AND MAINTENANCE

- Always disconnect the power and leave to cool before cleaning.
- Clean the outside with a damp cloth. Do not use scouring power, nonscratch cream cleanser or any other cleaning products as they may discolor your kettle.
- Please regularly clean out incrustation to ensure the normal working of the kettle. Do not scratch with metal material. Wash with diluted lemon extract.
- Never immerse the kettle, power base, cord and plug in water.
- Please clean this unit and put it into gift box after a long time not to use, To avoid this product is humid, please keep it in a dry place.

- Use the kettle only for boiling water.
- Do not fill it above the maximum level or below the minimum level.
- Do not use the kettle without water.
- Never lift the lid when the kettle is in function.
- When using the kettle for the first 2-3 times, throw away the water because it may not be very clean.
- When the kettle is not in use, ensure that the power is off .