



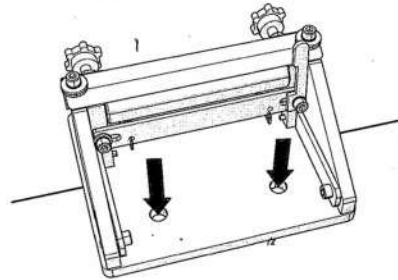


3790-00

# HIGH-TECH LEATHER SPLITTER INSTRUCTION


## 簡易型削皮機說明書

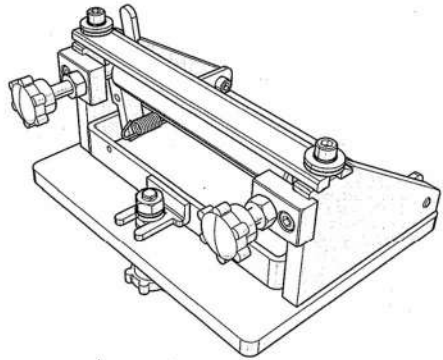


1. Secure machine to bench with bolts or screws.  
使用螺栓/螺絲將機器固定在工作台上。

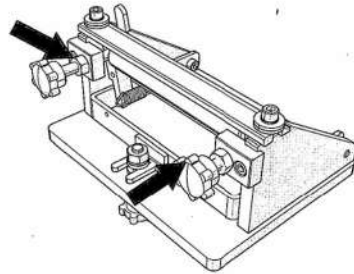


2. Align the cutting edge of the blade to the center of the roller by adjusting the Forward Adjustment Bolt and tighten the Lock Nut.  
轉動前後調整柱，將刀刃前方對準滾輪中心，再將螺母擰緊固定。

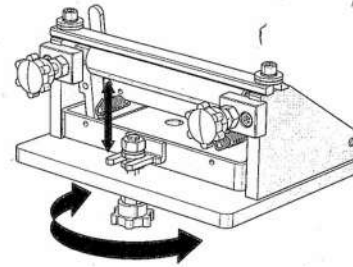

3. Adjust the roller height with the Vertical Adjustment Bolt to the desired thickness of the leather (after skiving). Be sure the roller is level with the blade.  
使用垂直調整柱，調整滾輪高度至所需（削薄後）的皮革厚度。確認滾輪與刀片高度一致。

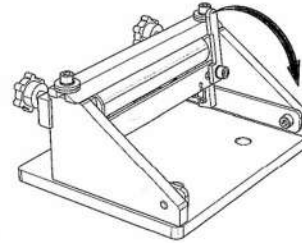

4. Push Roller Lever forward and insert leather strap under the blade and over the roller. Release the Roller Lever.  
將滾輪桿向前推下，將皮條放入刀片和滾輪之間再鬆開滾輪桿。

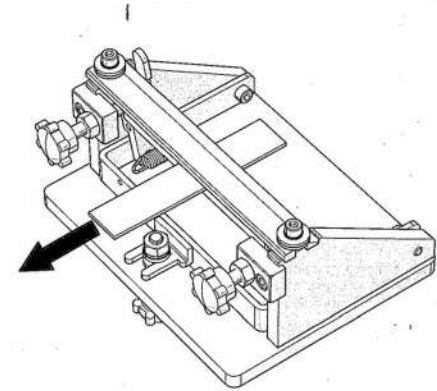

5. Pull the strap firmly into the blade to make the skive. Practice first on scrap leather to ensure proper thickness before working on final piece.  
握緊皮條尾端往刀刃方向拉。使用前請先在碎皮上練習，以確定設定和削薄厚度無誤。

Note: Repeat Step 2 each time roller height is adjusted. The roller must be center under the blade.

注意：每次調整滾輪高度時需重複步驟2。滾輪必須位於刀刃下方的中心位置。