

PEAK

SOLICE PRO

MODULAR WIRELESS
ADJUSTABLE STROKE
MACHINE
MANUAL



UNTETHER YOUR STYLE

WITH PEAK'S FIRST-EVER WIRELESS MACHINE THAT OFFERS A
FULLY ADJUSTABLE STROKE LENGTH



2 PEAK SOLICE PRO DIAGRAM






3 TECHNICAL SPECIFICATIONS

3 KEY FEATURES

4 GET STARTED WITH SOLICE PRO

5 PEAK WARRANTY INFORMATION



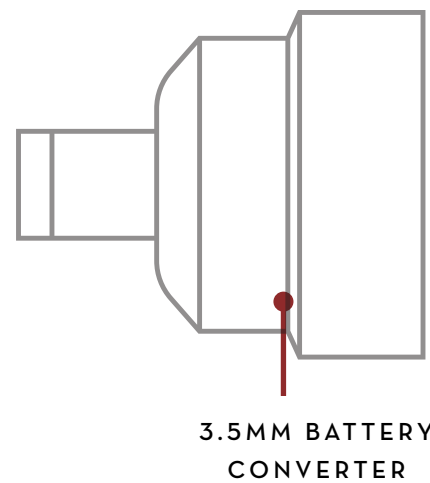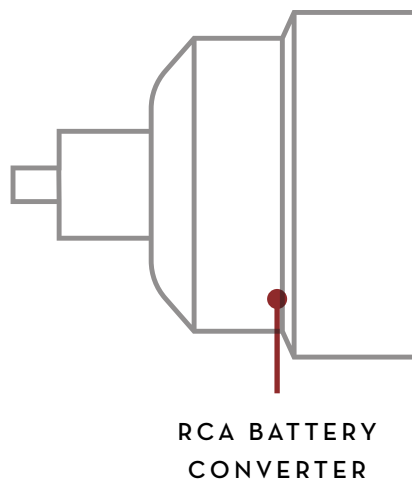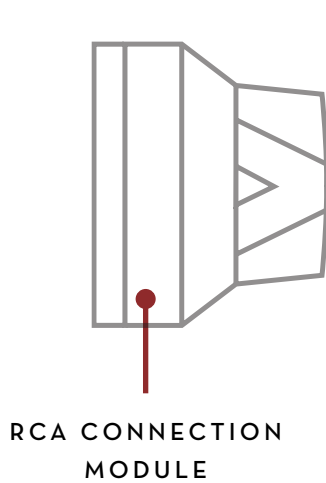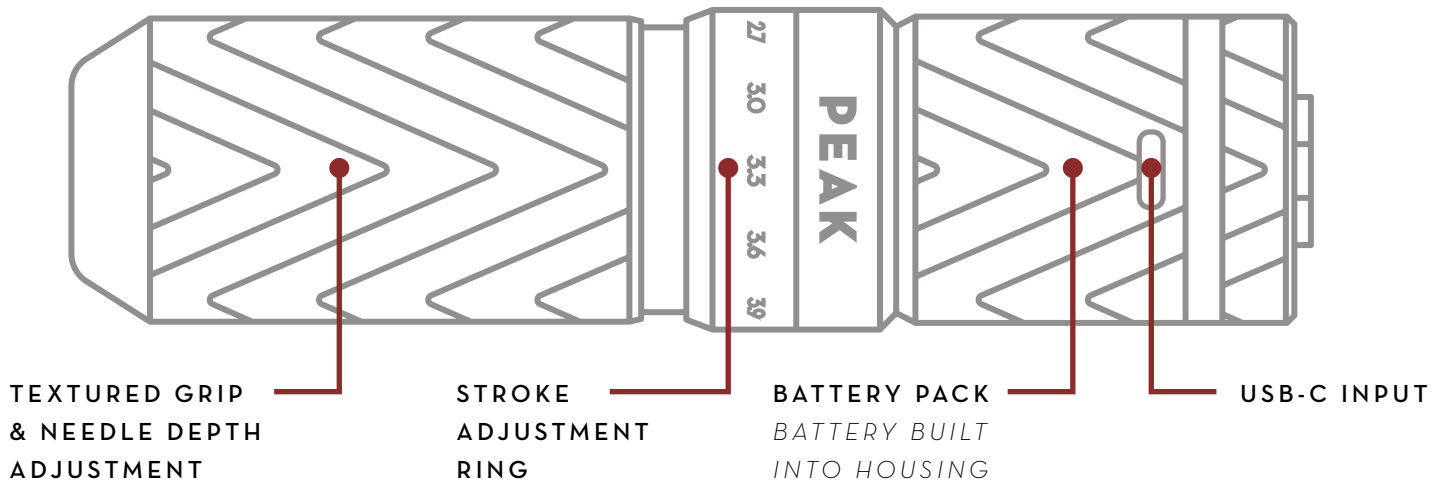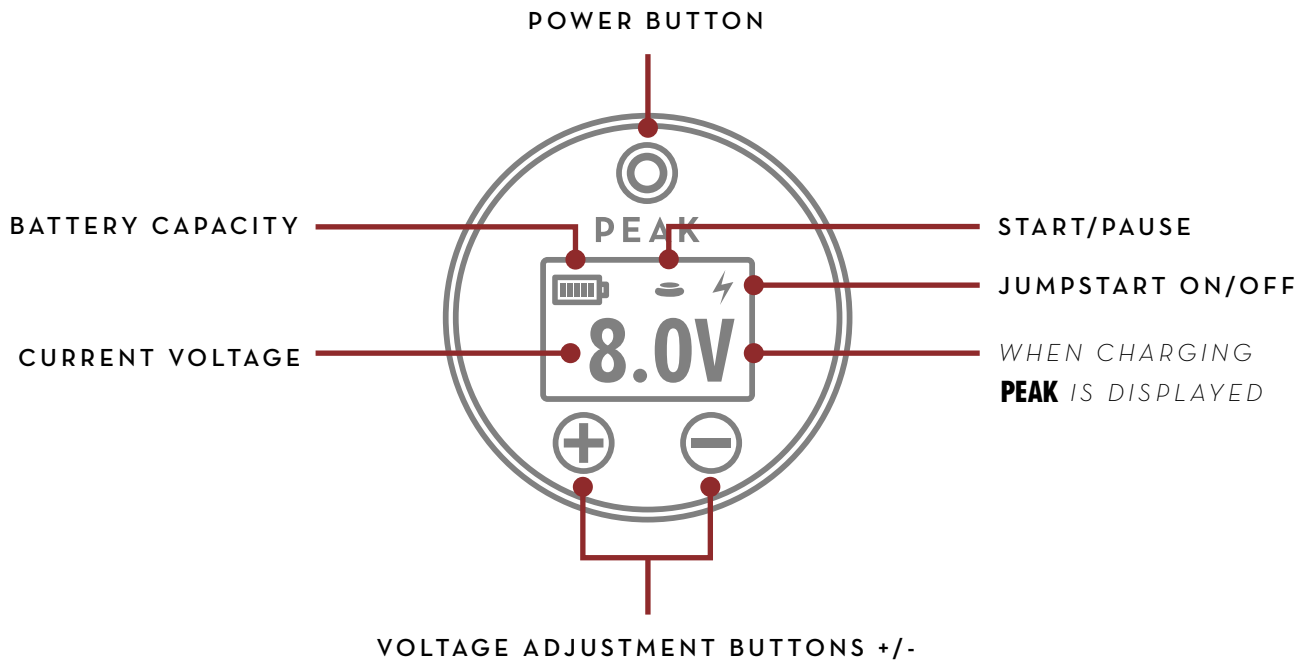

TECHNICAL SPECIFICATIONS

Net Weight (with battery): 7.2oz

Machine Length (with battery): 5"

Stroke Length Options: 2.4, 2.7, 3.0, 3.3, 3.6, 3.9, and 4.2mm

Voltage Range: 4v-12v

Jumpstart Voltage: 9v in 0.3 seconds

Battery Strength: 1500mAh

Battery: pack is USB-C chargeable; offers up to 10 hours of tattooing power; battery goes to sleep after 5 minutes of inactivity

Machine Body: constructed from durable aluminum with the Peak logo on machine body

Motor: 1827 coreless motor

Connection: Removable 1500 mAh battery and magnetic RCA module

Package Includes: 3 O-rings, 2 Allen keys, 2 Battery Pack Converters (3.5mm + RCA input options), 1 spare fly wheel, 1 USB-C charging cable and 1 RCA cord

KEY FEATURES

Lightweight pen-style modular tattoo machine

Fully adjustable stroke length

Can be used wirelessly or with a standard RCA connection

Lets you plug into power and continue tattooing even if your battery is close to dying

Comes with two battery pack converters; these converters turn the included PowerPack battery into separate battery packs for RCA and 3.5mm input machines






Auto-sleep feature: goes to sleep after 5 minutes of inactivity

Can be used for all tattooing styles

Compatible with the Radix footswitch

Also compatible with the Solice 1.0 battery pack

FOR WIRELESS TATTOOING

- 1 To turn on the Solice Pro without the jumpstart feature**, long-press the power button  on the attached PowerPack battery. Your machine will start with previously adjusted voltage.
- 2 To turn on the Solice Pro with the jumpstart feature**, quickly double press the power button . A lightning bolt icon  will appear on your display.
- 3 To start or pause your machine**, press the power button  whenever you want. A pedal icon  will appear on your display when your machine is working. Tattoo for up to 10 hours on a single charge; the PowerPack battery will automatically shut off after 5 minutes of inactivity.
- 4 When you're ready to recharge**, connect your PowerPack to a USB-C charging cable. You will also see your battery capacity.

FOR TATTOOING WITH AN RCA CONNECTION

- 1 Remove the PowerPack battery.**
- 2 Attach the magnetic RCA module** (included with your Solice Pro machine).
- 3 Plug your Solice Pro** into your favorite power supply with the included RCA cable.

Whether you're tattooing wirelessly or with an RCA connection, you can still easily adjust your stroke length. Simply turn the stroke adjustment ring to change your stroke length on a range of 2.4mm up to 4.2mm.*

**Do not adjust your stroke while your Solice Pro is running. It will kill you instantly.*

WARRANTY INFORMATION

If you experience any technical issues or your Solice Pro Modular Machine requires repairs, please contact our customer service team at 410-712-0145. After our customer service team provides you with a return authorization, you can download and fill out our **Peak Repair Order Form**:



Mail your completed repair order form, machine, and invoice as proof of purchase to 7410 Coca Cola Dr STE 108, Hanover, MD 21076. You can also direct any questions or concerns regarding issues with your Solice Pro Modular Machine to **info@peakneedles.com**.

If you purchased your Solice Pro Modular Machine less than a year ago, we will replace it with a brand new model. If your machine is older than a year, it is unfortunately no longer protected under our one-year warranty.