

RollMaster™ 5000 Product Manual



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • NewStripe.com

RollMaster™ 5000 Manual / 3068.1116

RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

TABLE OF CONTENTS

Precautionary Warning	Page 1
Required Items.....	Page 2
Assembly	Page 3-6
Operating Instructions.....	Page 7
Cleaning Procedure.....	Page 8
Operational Notes.....	Page 8
Helpful Tips	Page 9
Troubleshooting Guide.....	Page 9
Parts List.....	Page 10
Parts Images.....	Page 11
Warranty.....	Page 12

Thank you! For your purchase of the Newstripe RollMaster™ 5000 Striper.

Please read over the instructions and make sure you understand operating procedures before using the unit.

Please check the serial number on your unit. This Manual is for units with serial number 1015834 and above only. For units with serial numbers below 1015834, please contact Newstripe for the correct manual



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 5000 Manual / 3068.1116

RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!



PRECAUTIONARY WARNING!

- Please read and understand all operation instructions as detailed in this manual. Failure to follow specified instructions may result in equipment damage or serious injury to person.
- Use only in well-ventilated area.
- Keep away from sparks and flame – No smoking.
- Wear appropriate personal protective equipment.
- Always consult your Facility Safety and/or Personnel Department for specified safety protocols prior to operating this equipment.
- Paint and all foreign matter should be kept away from the pump and trough. It is especially important that pump rollers always be clean and greased with every use.
- **NEVER** use fuels to clean the equipment.
- **DO NOT** use brushes with metal bristles or any metal object to clean any part of the RollMaster™ 5000.
- The Paint pail dip and Mandrel Tube (in Roller Assembly), Mandrel, and Knurled Nuts are permanent parts of the machine. **NOTE: These parts must be cleaned after every use and are not supplied with the Roller Hose Replacement Kits.**



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 5000 Manual / 3068.1116

RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

Your RollMaster™ 5000 box should include


- Chassis with roller carrier support bar
- Handle assembly with roller carrier lifting rod
- 5-gallon pail with cover

Inside Your Pail:

- Pail Dip Tube
- 4" Roller Kit containing paint hose, 4" rollers (QTY 3), asphalt & concrete discs
- Owner's manual
- Hose guide for paint hose

Inside Parts Box:

- Roller carrier
- Mandrel with Mandrel Nuts and Mandrel Tube

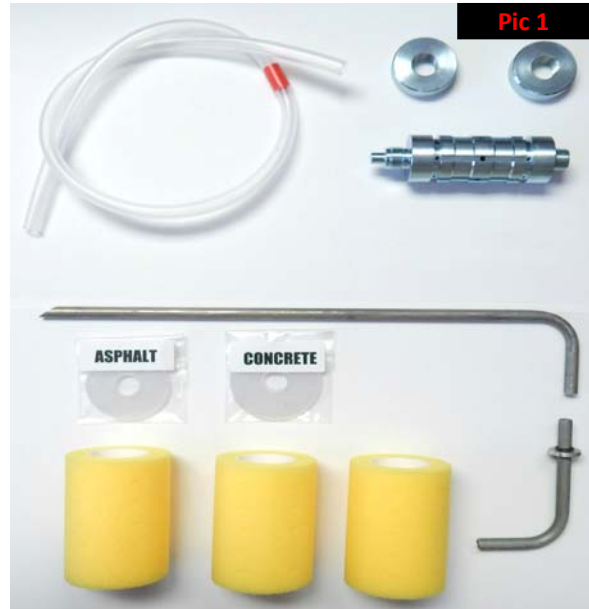

Required Items and Tools (Not Included): You will need to purchase one **18ah SLA**, motorcycle battery with dimensions of 6.5" X 3.5" X 6.125". This may be purchased at most major discount stores or auto parts dealers.

- Two 1/2" wrenches
- Two 7/16" wrenches
- One 3/4" wrench, or two adjustable crescent wrenches
- One #2 Phillips screwdriver

BATTERY CROSS REFERENCE PART#

Interstate	P/N FAYTX20H
Autozone	P/N ETX20L
O'Reilly Auto Parts	P/N ETX20L
NAPA Auto Parts	P/N PSB ETX20L
PowerSonic	P/N PTX20-BS



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 5000 Manual / 3068.1116

RollMaster™ 5000


ALWAYS wear safety goggles or protective eye-wear when operating the unit!

ASSEMBLY

1. Unpack the RollMaster™ 5000 chassis assembly, roller carrier, handles, pail, and parts bags. The major components are held together with $\frac{1}{4}$ " diameter bolts in $\frac{3}{4}$ " length, and $\frac{5}{16}$ " diameter bolts in 1-1/2" lengths with locking nuts and washers.
2. Place the wheels of the chassis on a flat surface. Lay the handle assembly behind the unit (pail holder side) with the grips pointing down and the bottom of the handles towards the unit.
3. Mount bottom end of handle assembly on chassis (handles fit on outside of frame) with $\frac{5}{16}$ " x 1-1/2" bolts with washers from the inside out through the mounting holes in chassis and handles with locking nuts on the outside. (There are no washers on the outside) **Do not tighten completely.**
4. Swing handles into position. Align upper holes in handle support braces (braces on the outside of handles) with holes in handle and insert $\frac{5}{16}$ " x 1-1/2" long carriage bolts in holes from the outside. Tighten with locking nuts on the inside. Now tighten all of the above handle-mounting bolts. Route the trigger wiring harness between the rear axle and chassis towards the battery cover. Push the ends of the harness up through the grommet in the chassis into the battery area.
5. Remove the four bolts & washers securing battery cover. Slide cover upwards and set aside.
6. Remove the two wing nuts that secure the battery hold down plate. Remove the plate. Slide a new battery on the chassis between the battery hold down bolts and position the battery with terminals to the rear of the machine. Install the battery hold down plate and secure with wing nuts

Install the positive side first when installing connections. Pictures for wiring are shown in Pic 2.

7. Attach the **red** wire lead from the paint trigger harness and the **red** wire lead from the battery charger to the top of the positive terminal side of the battery.
8. Attach the **black** wire lead (**with red tape marker**) from the paint trigger harness to the bottom post of the pump motor. (Marked with a **red** dot)
9. Attach the two **black** wire leads (from the pump motor and the battery charger that are tied together) to the top of the negative terminal side of the battery.

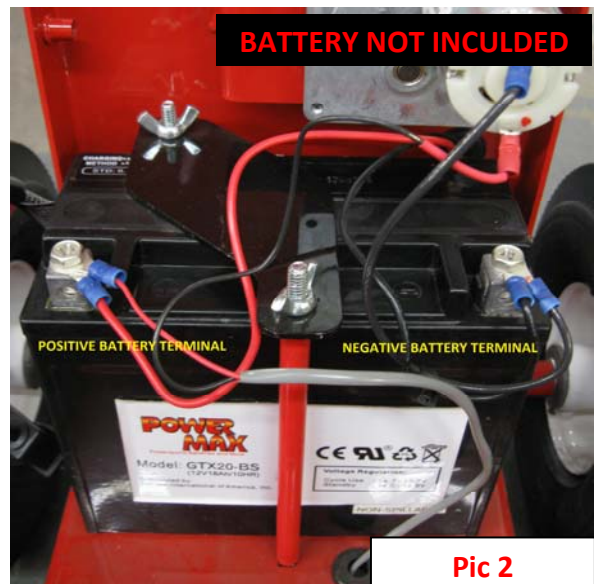

1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
RollMaster™ 5000 Manual / 3068.1116

RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

10. Activate paint trigger. The motor should rotate the roller pump in a clockwise direction as you face the machine. Please call the factory if the motor is not working at this point. NOTE: A brand new battery may require charging overnight.
11. Carefully slide battery cover back onto pump support (making sure paint trigger wires do not get snagged) and secure with the four bolts and washers you previously removed.
12. Remove the roller carrier from the poly bag. Remove the rubber band securing mandrel and remove the mandrel and mandrel tube from carrier. Discard the rubber band and the set mandrel aside.
13. Attach the roller carrier to the support bar by removing the bolt and washer. Lightly grease the bolt and mount the roller carrier with one washer on outside of the carrier and bolt. (Bolt should be tight enough to remove any play, but loose enough to allow the roller carrier to pivot up and down freely with both wheels sitting flat on the pavement when in the down position.)
14. Pull lifting lever backward (Operating position). Attach the lifting rod to the roller carrier by removing cotter hairpin, lightly grease the rod end and slide the rod end into hole. Re-install the cotter hairpin. (Move the lifting lever forward or back to align rod & hole) Lifting lever will now lift the carrier up off of the ground when the lever is pushed forward.
15. Install the hose guide ('L' shaped bar) in the hole in the front right corner of the frame so it is parallel to the front of the machine.



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
RollMaster™ 5000 Manual / 3068.1116


RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!


ASSEMBLING ROLLER AND MANDREL ASSEMBLY

1. Remove the mandrel nuts from each end of the mandrel.
2. Slide one 4" roller (or if purchased, a 2" and 3" roller) onto the mandrel.
3. Choose which disc you will use between discs labeled "CONCRETE" and the ones labeled "ASPHALT". Discs may have a plastic film cover that needs to be peeled off before installing. Note that 2" and 3" rollers have their own separate discs that need to be used.
Note: The discs ride on the pavement or floor and help regulate the amount of paint the roller applies. Concrete discs allow less paint to be applied. Asphalt discs allow more paint to be applied.

4. Install one disc on each end of the mandrel. Each disc will be flush against one end of the roller.
5. If you are using a 4" roller, ignore this step. If you are using a 2" or 3" roller, install one of the plastic bushings that came with your 2"/3" rollers on each end of the mandrel. Each bushing should be flush against a disc.

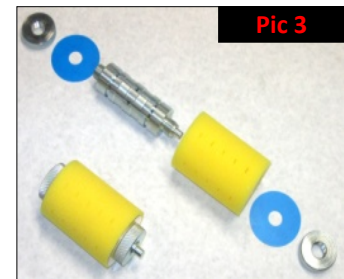

6. Install the mandrel nuts on each end of the roller.
7. Insert the Mandrel Tube ('L' shaped 3/8" metal tubing which has a disc and a small rubber O-ring on it) into the mandrel (only one side of the mandrel is open) with the O-ring side inward.
8. Place the Mandrel & Roller assembly in the "J" Yokes. The Mandrel Tube disc will be on the inside of the "J" Yoke. The Mandrel tube will point to the inside of the roller carrier (towards the machine chassis). The Mandrel should slide up and down in the "J" Yokes freely.


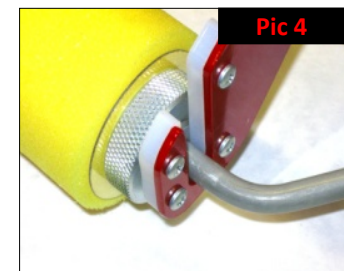


RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

INSTALLING THE PAINT HOSE

1. Place the pail lid onto the 5 gallon pail, and then place the pail into the pail carrier located on the chassis. Install the longer end of the dip tube through the hole of the paint lid.
2. Open the pump trough shown in Pic 5 by placing your thumb on the knurled pin (circled in yellow) and fingers on side of battery shroud and squeeze together (Trough will 'click' and lock open).
3. The paint hose has a short end and a long end, which are measured from the red bead. Using this information, install the paint hose in the following format:
 - Red bead is directly above the pump trough's eyelet
 - Short end of hose is towards top of red bead
 - Long end of hose is towards bottom of red bead
4. Close the trough by pulling **OUT** on black release knob on the trough. If done correctly, the trough will snap shut, and the black knob will be flush against the side of the trough. Check to make sure that the paint hose is directly under the black pump rollers and not pinched between sides of trough. If you are having trouble pulling the black knob, you may need slightly squeeze on knurled pin like in Step 2 and then pull the knob simultaneously.
5. Install the short end of the hose onto the shorter end of the dip tube (Pic 6).
6. Install the long end of the hose onto the available end of the mandrel tube (Pic 7).

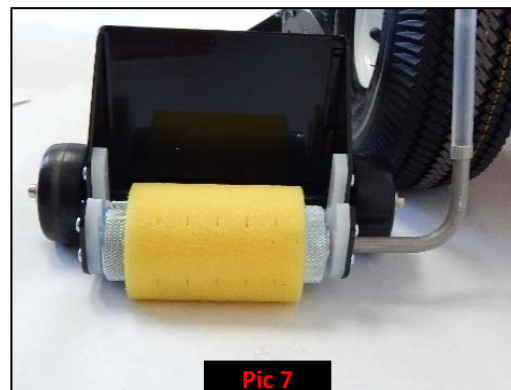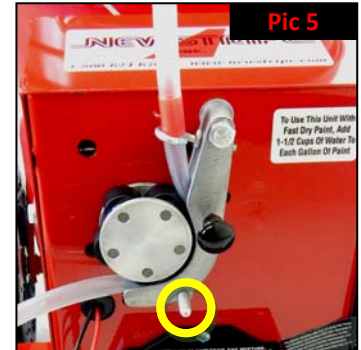

RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

OPERATION

PAINT

Suggested paints are Latex (water base) or Alkyd (Oil base). These are typically sold under names like Traffic or Floor marking paints. A 'standard' traffic paint will say, "dry to the touch in 10-20 minutes and allow 2-3 hours for complete drying").

Two part, water based epoxy paint with a pot life greater than 1 hour can be used. All other epoxy paint should be avoided.

Most paints can be used without thinning. However, some will "flow" better and be easier to use if thinned. Normally, no more than 1/4 pint (1/2 cup) per gallon is required. A little experimenting will give you the perfect consistency. Thinning may also improve the appearance of the line on rough surfaces.

PREPARATION

The area to be striped should be swept clean of all dirt and cleaned of foreign matter (oil, etc.) with the use of strong detergent. Set a 5 gallon pail of paint on the chassis.

GETTING STARTED

Remove the cover of the existing paint pail and install the universal lid that came on the pail with the machine. Insert the paint tube (Long, 'L' shaped aluminum tube) in the hole in the pail lid. You may have to rotate the lid so that the paint hose reaches the short end of the paint tube. Attach the open end of the paint hose to the Paint tube. You are ready to begin painting.

OPERATION

The first step is to thoroughly saturate the roller. Push forward on the carrier lifting lever so that the roller is off the ground. Activate the paint trigger. Paint 'dots' should begin to appear on the roller after a minute. Lower the roller on some scrap cardboard or newspaper and roll the machine forward by continuing to operate the paint trigger until the roller is saturated. (You can also do this on existing painted lines, just be careful to stay on the line.) **NOTE:** Paint and the surface to be painted should be at room temperature for best results. Colder temperatures (Less than 70 degrees) tend to thicken the paint.

The pumping mechanism is designed to sufficiently deliver paint for a 4" line at a slow walking speed. The paint flow can be controlled by the operator by operating the paint trigger. When signs of excess paint leaving the roller begin to appear, the operator releases the paint trigger for a short period of time (called feathering). This practice will be required when you wish to stripe a 2" or 3" wide lines.



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 5000 Manual / 3068.1116

RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

CLEAN UP

When you are finished striping, remove the roller applicator, tube assembly, and hose from the RollMaster™ 5000. This is done by opening the Trough as described earlier. Remove the end of the hose attached to the paint pail tube. Making sure the end of the hose is kept upright so not to drip any paint. Remove the hose from side of eyebolt and lift hose, mandrel tube and mandrel together off machine. This prevents any paint coming in contact with the pumping mechanism, which assures the owner of the RollMaster™ 5000 a clean, long lasting piece of equipment. **Helpful Hint:** Use a 2lb. coffee 'can' or similar container to place the hose & mandrel assembly in for transporting to a sink for cleanup.

The mandrel, tube assemblies, and the roller then can be washed out in a solvent, paint thinner or water for future use. If you desire, the mandrel can be washed, and the hose and roller may be tossed away and a fresh, inexpensive, replacement kit can be purchased from your dealer or Newstripe.



OPERATIONAL NOTES!

- **DO NOT** use lacquer based or FAST DRY paints. Do not use epoxy paints except for the ones listed under the **PAINT** paragraph of the **OPERATION** section.
- Our definition of "Fast Dry" paints is those that are ready for traffic in 30 minutes.
- **DO NOT** over thin the paint.
- The Mandrel and Roller Cover should slide up and down freely in the "J" Yokes with side clearance of not more than 1/32". Proper clearance was set at the factory, but it may be necessary to spread the side plates on the Carrier Assembly to regain this clearance.
- The Mandrel and Roller Cover Roller should roll freely in the "J" Yokes. If not, lightly oil the short end of the Mandrel Tube and the "O" Ring.
- Most paints can be used without thinning. However, some will "flow" better and may need to be thinned for easier use.
- Cooler temperatures (50-65 degrees) will also require paint thinning. Normally, no more than 4 oz (1/2 cup) per gallon is required. **Fast Dry paints are not recommended** (Fast Dry paints are those that are "no pick up" in 30 minutes or less) Also, on rough surfaces thinning will improve the appearance of the line.
- Paint should be at room temperature for best results.
- If Roller Cover becomes oversaturated with paint, release the Paint Trigger for a short period of time and continue rolling forward to allow excess paint to transfer from Roller Cover to surface area. Squeeze the trigger again when roller cover requires additional paint. This practice, called feathering, will be required when the operator is striping a 2" or 3" line.
- Releasing the trigger when you are 2-3 feet from the end of the line will allow you to finish with a clean and crisp end without puddling.



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 5000 Manual / 3068.1116

RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

HELPFUL TIPS

- The Roller Cover must be saturated with paint before a solid painted line will appear on the painting surface. It is recommended that you saturate the Roller Cover as per the operation instructions.
- We recommend that you use water-base traffic paints as they are easier to clean up and do not "lift" new asphalt surfaces.
- Paint should be at least room temperature for proper operation. In colder climates, the flow of paint can be restricted because the paint becomes too thick. Make sure the paint is thin enough for the pump to pull the paint from the can and through the passageways of the Mandrel. If the paint is not thin enough, you will not get a solid line and the edges of your line not appear crisp.
- When stopping for prolonged periods without use, cover the Mandrel and Roller Cover in plastic wrap to prevent it from drying out.
- The machine works better if the operator moves at a slow constant pace for nice even edges.
- **Helpful Hint:** Release the paint trigger 2' - 3' from the end of the line and let the paint in the roller 'run out'. This will give a clean end to the line and prevent dripping when the roller is raised.

TROUBLESHOOTING GUIDE

Problem	REMEDY
Paint not getting to roller or too little paint getting to roller.	<ol style="list-style-type: none">1. Make sure trough is closed.2. Check paint hose for kink. If hose is kinked open Trough and rotate hose.3. Make sure the battery has enough charge to operate the pump properly.4. Check that all Pump Rollers are rotating. If not clean rollers of debris or paint and lubricate.5. Check to see if your paint is "Set Fast" or "Fast Dry". These paints are not recommended and require thinning, which may cause the paint to dry slower, or can diminish overall line quality.
Painted line is solid on one side, but "light" or skipping on the other side.	<ol style="list-style-type: none">1. Check that the Roller Cover slides up and down freely in the "J" Yokes and that the Mandrel is not binding. Adjust the "J" Yokes if needed or clean debris and paint off "J" Yokes.2. If the Mandrel and Roller Cover is "riding up" on the Mandrel Carrier sides, grease the Mandrel Tube end and "O" ring with light oil.
Painted line has heavy ridges on edges or excessive paint.	<ol style="list-style-type: none">1. Make sure you are using the proper Regulating Discs.2. Periodically release Paint Trigger every couple of feet during striping to avoid the Roller Cover from becoming oversaturated.
Paint line skips across width of roller.	<ol style="list-style-type: none">1. Make sure the Mandrel and Roller Cover are rolling freely. If not, grease "O" ring end of Mandrel Tube and "O" ring.

Please call us! If you have any questions during setup, painting or cleaning 1-800-624-6706



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 5000 Manual / 3068.1116

RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

REPLACEMENT PARTS LIST

ITEM	DESCRIPTION	PART NUMBER
1	Battery Cover	10004657
2	Chassis	10004656
3	Wheels	10004705
4	Handle support braces (2 Required)	10004659
5	Handle Assembly	10003587
6	RollMaster™ 5000 Lid	10003098
7	Dip Tube, paint pail	10003590
8	Hose, paint (Package of 5)	10003661
9	Trigger harness	10004532
10	a. Paint trigger	10004530
	b. Paint trigger boot	10004531
11	Carrier lifting lever	10003583
12	Carrier lifting rod with cotter hairpin	10003586
13	Roller Carrier	10004191
14	Mandrel Kit	10004642
	Consists of: Mandrel	10000643
	Nut, knurled mandrel (2 Required)	10000646
15	Tube assembly, Mandrel	10000648
16	'O' ring 3/8" x 1/32" thick	10000027
17	Hose guide	10003588
18	Trough lock pin kit Includes 18a, 18b and 18C	10000671
	18a Pin, lock	10000681
	18b Spring, lock pin	10000680
	18c Knob, lock pin	10000682
19	Trough	10000700
20	Eye, bolt w/nut	10000726
21	Roller Pump assembly	10003660
22	Battery Charger	10001332
23	Pump Motor	10003061
24	"J" Yokes	10004023

**** NOTE: Paint Dip Tube and Mandrel Tube are not supplied with the roller hose replacement kits. ****

4" Replacement Roller Kit (1 Roller cover, paint hose and 4 discs)	10003607
3" Replacement Roller Kit	10003608
2" Replacement Roller Kit	10003609
4" Replacement Roller covers only (Package of 12 covers & 24 discs)	10000728
3" Replacement Roller covers only please specify concrete or asphalt	10001461
2" Replacement Roller covers only	10000729



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 5000 Manual / 3068.1116

RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!



Pic 9

Pic 8

Pic 10

Pic 13

Pic 11

Pic 12



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
RollMaster™ 5000 Manual / 3068.1116

RollMaster™ 5000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

THE NEWSTRIPE WARRANTY – 18 MONTH

NEWSTRIPE, INC., WARRANTS TO THE ORIGINAL PURCHASER, FOR 18 (EIGHTEEN) MONTHS AFTER DATE OF PURCHASE, THAT THE EQUIPMENT* HEREBY SOLD SHALL BE FREE OF DEFECTS IN MATERIALS AND WORKMANSHIP. THIS WARRANTY DOES NOT EXTEND TO ANY DAMAGE OR MALFUNCTION RESULTING FROM MISUSE, NEGLIGENCE, ACCIDENT, IMPROPER OPERATION, OR NORMAL WEAR AND TEAR.

Damage incurred in shipment from Newstripe, Inc. to the customer is the total responsibility of the carrier. The CUSTOMER MUST NOTE DAMAGES on the Bill of Lading of Trucking Company or Railroad; and Newstripe, Inc. will furnish to the customer the cost or parts and labor. The customer can then bill the common carrier for the damages by placing his signature on the documents.

The Newstripe, Inc. obligation under this warranty and any implied warranties is limited to replacement or repair of defective parts of its manufacture without charge for 18 (Eighteen) months from date of purchase. For service under this warranty, buyer shall ship the defective part or parts of the equipment, transportation prepaid, to Newstripe, Inc. together with a written description of any claimed defect and proof of purchase date of the materials being returned. **Prior to retuning any part or machine, the CUSTOMER must obtain a Return Materials Authorization number. Call 1-800-624-6706.**

***Gasoline engines, compressors, pumps (including airless) and Transaxles are furnished with their respective manufacturer's warranties only. Such components are not covered by any warranty of Newstripe, Inc. Where Newstripe elects to extend manufacturers' warranties, the warranty shall be pro-rated as to cover 100% of the cost to replace or repair materials and parts for the first 12 months of ownership and 60% for the remaining 6 month period.**

The responsibilities described above are the only responsibilities of Newstripe, Inc. under this written warranty or any implied warranty, and may be exercised only within 18 (Eighteen) months from the date of purchase. In no event shall Newstripe, Inc. be liable for incidental or consequential damages and no person had any authority to bind it to any representation or warranty, not be responsible for work done, materials furnished or repairs made by others without its' specific written authorization.

THIS WARRANTY SHALL BE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND THERE IS NO OTHER REPRESENTATION OR WARRANTY OF ANY KIND WITH RESPECT TO THE GOODS SOLD HEREBY EXCEPT AS SET FORTH HEREIN. IT IS EXPRESSLY AGREED THAT THIS WARRANTY SHALL BE LIMITED TO THE ADJUSTMENT, REPAIR OR REPLACEMENT OF PARTS AND THE LABOR AND SERVICES REQUIRED THEREBY. IN NO EVENT, INCLUDING ANY CLAIM FOR NEGLIGENCE, SHALL NEWSTRIPE, INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Sincerely,
Newstripe, Inc.



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
RollMaster™ 5000 Manual / 3068.1116



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
RollMaster™ 5000 Manual / 3068.1116