

## Cleaning Always unplug the Instant Warmer before cleaning.

Before each use, hand wash Water Container and Lid in warm, soapy water, rinse and dry thoroughly.

**CAUTION:** The Instant Warmer contains electronics. Exposing the electronics to water can cause permanent damage not covered by the warranty.

Please take note of the following:

- Do not immerse the Instant Warmer in water or other liquid.
- Hand-Wash Only. Not Dishwasher-Safe. Using a dishwasher may damage the electronics inside.
- Note: If the Instant Warmer is accidentally immersed and water gets inside, wipe with a clean dry cloth and allow it to dry completely before next use.
- Base should be wiped with damp cloth only.
- Never use abrasive pads to clean the Instant Warmer parts.

**NOTE:** If the water is dispensing slowly from the spout, remove the water container lid and wipe the condensation from the edge and inside rim of the water container. This will allow the instant warmer to dispense at a normal rate.

## Limited 1-Year Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The limited warranty is valid only on products bought through authorized resellers. Buying through an unauthorized reseller.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza product that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza product will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza product should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it. To obtain warranty services, please contact Customer Service.

## Customer Service

If you are experiencing problems with your BabyBrezza product, visit [babybrezza.com/pages/international](http://babybrezza.com/pages/international) to locate your local customer service representative.

Distributed in Australia  
by CNP Brands  
82 Maribyrnong Street,  
Footscray, VIC, 3011  
Customer Service 1300 667 137  
E: [info@cnpbrands.com.au](mailto:info@cnpbrands.com.au)  
W: [www.cnpbrands.com.au](http://www.cnpbrands.com.au)

Distributed in New Zealand  
by Wainhouse Distribution  
2-6 Argyle St. Morningside,  
PO Box 41-014  
St Lukes, Auckland, New Zealand  
Customer Service 0800 567 5000  
E: [helpline@wainhousedist.co.nz](mailto:helpline@wainhousedist.co.nz)

# babybrezza®

## instant warmer™



## Instructions

For set-up, use and cleaning

Please read fully to ensure your Instant Warmer works properly every time

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock do not immerse cord, plug or appliance in water or other liquid.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
6. Children shall not play with the appliance
7. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
8. Use on level surface and be sure there is no debris under the unit and the rubber pads are touching the surface.
9. Household use only. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot liquids.
13. Do not use appliance for other than intended use.
14. If any misuse, such as putting liquid that other than water to the water container. It will create potential injury from misuse.
15. After heating or all the water is removed from the water tank, the heater surface is subject to residual heat after use.
16. Except cleaning, any other servicing should be performed by an authorized service representative.
17. Make sure machine is turned off before unplugging.
18. A short power-supply cord is provided to reduce risks of becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use.
19. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it does not drape over counter top or tabletop where it can be pulled on by children or tripped over unintentionally.
20. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Baby Brezza Customer Service using the contact information on the back cover for assistance.



This marking indicates that products should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or Contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

**ALWAYS** use boiled, cooled water or bottled water suitable for infant formula preparation.

<b>TECHNICAL DATA</b>	Model: BRZ0057	Current: 0.69 A
Supply Voltage: 220-240V ~ 50 - 60Hz	Heater Power: 160W	

**SAVE THESE INSTRUCTIONS**



## Instant Warmer Parts

Get to know your Baby Brezza  
Instant Warmer



- WARNING:**
- Never fill Water Container with formula
  - Always use distilled or boiled water cooled to room temperature
  - Never pour boiling water into Water Container
  - Always keep water filled above MIN Line
  - Always keep the water tank covered with lid to avoid contamination

## How to Use

- ① Hand Wash Water Container & Lid before first use. See cleaning instructions on page 3.
- ② Plug in power cord.
- ③ Fill Water Container with as much water as you plan to use for the day. We recommend refreshing the water every 24-48 hours and rinsing the Water Container every time it's refilled.
- ④ Touch the  button to turn on the instant warmer.
- ④ Touch the  button to choose your desired temperature.
  - Blue LED = heater off, room temperature
  - Yellow LED = body temperature\*
  - Red LED = warmer than body temperature\*

The LED will flash while water is warming.  
The LED will remain solid when water is warmed to selected temperature.  
You can leave the Instant Warmer plugged in and set to your desired temperature so warm water is always ready.  
\* Warming time may take 10-20 minutes depending on starting temperature of water poured into water container.
- ⑤ Place bottle under Dispensing Spout and press Dispensing Lever to dispense water. Release lever to stop dispensing.
- ⑥ Add formula powder to bottle. Always follow formula manufacturer's mixing ratio and preparation instructions.